


RESISTOR INSPECTION [MANUAL AIR CONDITIONER]

id0740a2800800

1. Verify that the resistance between the resistor terminals is as shown in the table.
 - If there is any malfunction, replace the resistor.

Terminal	Resistance (ohm)
A—D	0.35—0.41
A—B	0.95—1.09
A—C	2.68—3.08

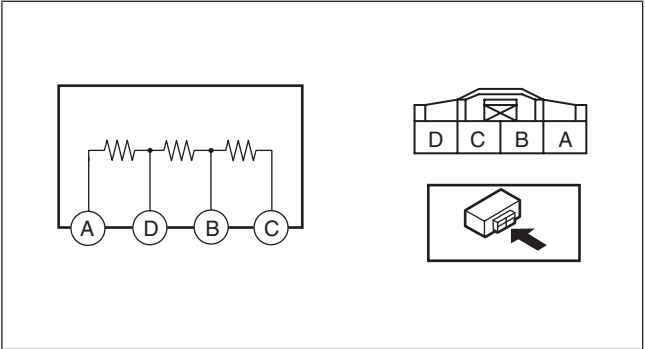

am3zzw00011049