



LICENSE PLATE LIGHT BULB REMOVAL/INSTALLATION

id091800857800


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Insert a tape-wrapped flathead screwdriver into the clearance between the lens and license plate light shown in the figure.

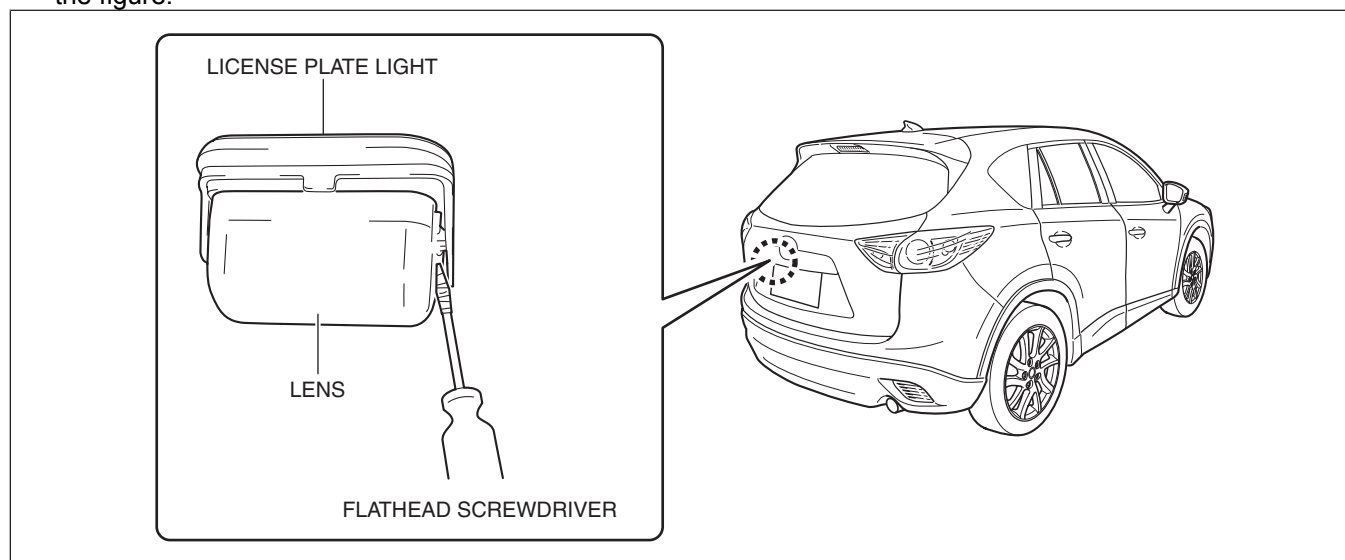


3. Move the flathead screwdriver in the direction of the arrow shown in the figure, pull out the lens from the license plate light, and detach the lens tab and license plate light.

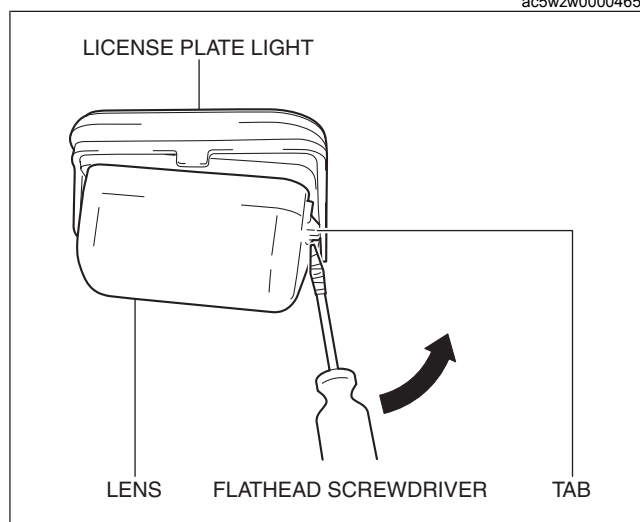

4. Remove the lens.

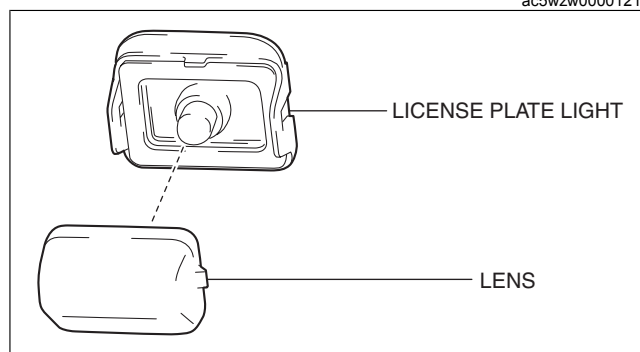

-
5. Remove the license plate light bulb.
 6. Install in the reverse order of removal.

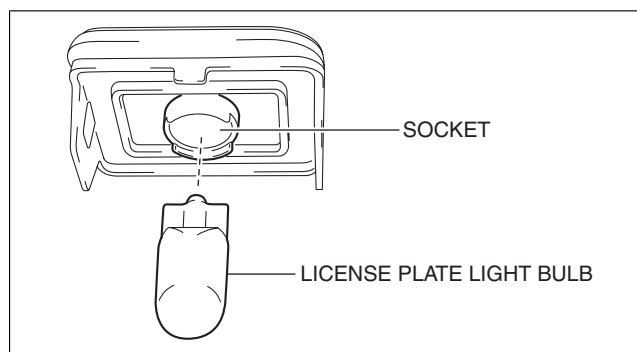

ac5wzw00000074