

BATTERY [SKYACTIV-D 2.2]


id0117h6185200

Purpose, Function

- The battery stores electricity generated by the generator. In addition, it supplies power to electronic devices if necessary.

Construction

- The battery is installed in the engine compartment. (vehicle left)

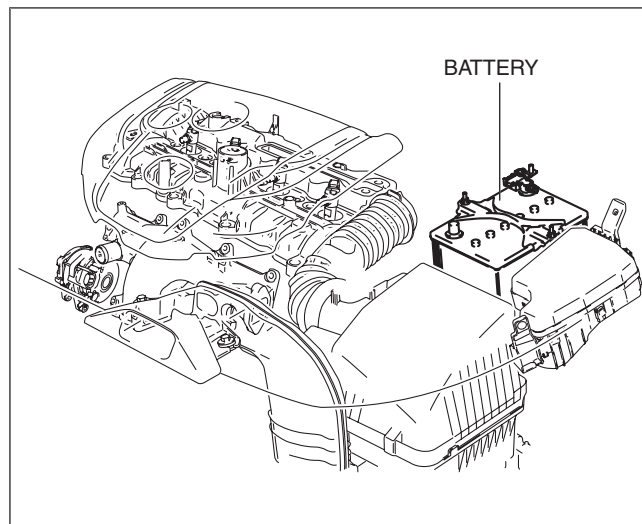

ac5wzn00001992

Fail-safe

DTC	Fail-safe
P057F:00	<ul style="list-style-type: none">• Inhibits engine-stop by operating the i-stop function.• Inhibits a part of the generator output control.