

## WASHER FLUID-LEVEL SENSOR REMOVAL/INSTALLATION


id091900801800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Set the mudguard (RH) aside. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
5. Disconnect the washer fluid-level sensor connector.
6. Remove the washer fluid-level sensor.

### Note

- If the washer fluid-level sensor is removed with washer fluid in the washer tank, the washer fluid may leak out. When removing the washer fluid-level sensor from the washer tank, place a container under the washer tank to collect washer fluid, and perform the procedure.

7. Remove the grommet.
8. Install in the reverse order of removal.

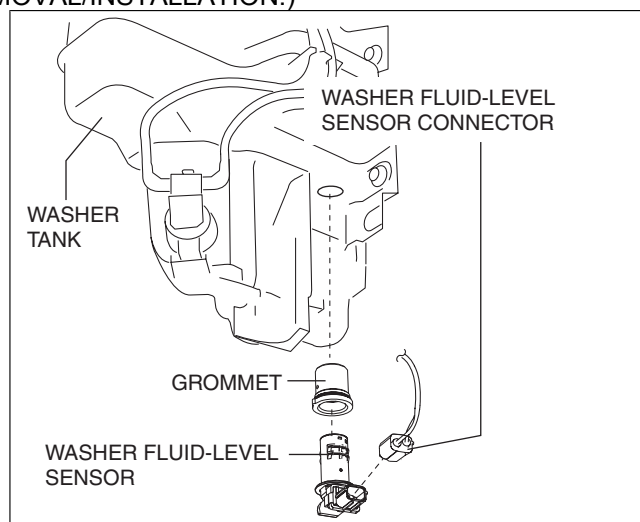

ac5uuw00000814