

## FRONT FOG LIGHTS INDICATOR LIGHT

id091800013700

### Purpose


- Notifies the user that the front fog lights are illuminated.

### Function

- Illuminates when the front fog light illumination conditions are met.

### Construction


- Displayed in the instrument cluster.

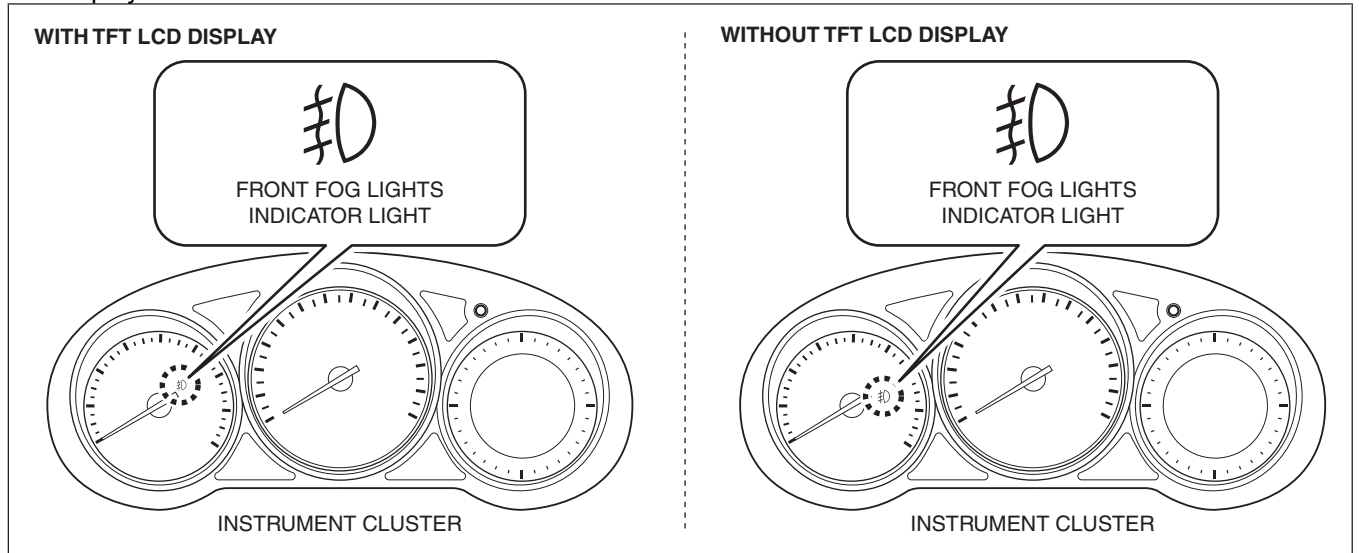

ac5wzn00001509

### Operation

1. With the light switch in the TNS or HEAD position, a front fog light switch signal is input to the start stop unit when the front fog light switch is operated to the on position.
2. The start stop unit sends the front fog light switch signal to the front body control module (FBCM).
3. The front body control module (FBCM) sends the front fog light switch signal to the instrument cluster as a front fog light illumination signal.
4. The instrument cluster illuminates the front fog light indicator light when it receives the front fog light illumination signal.

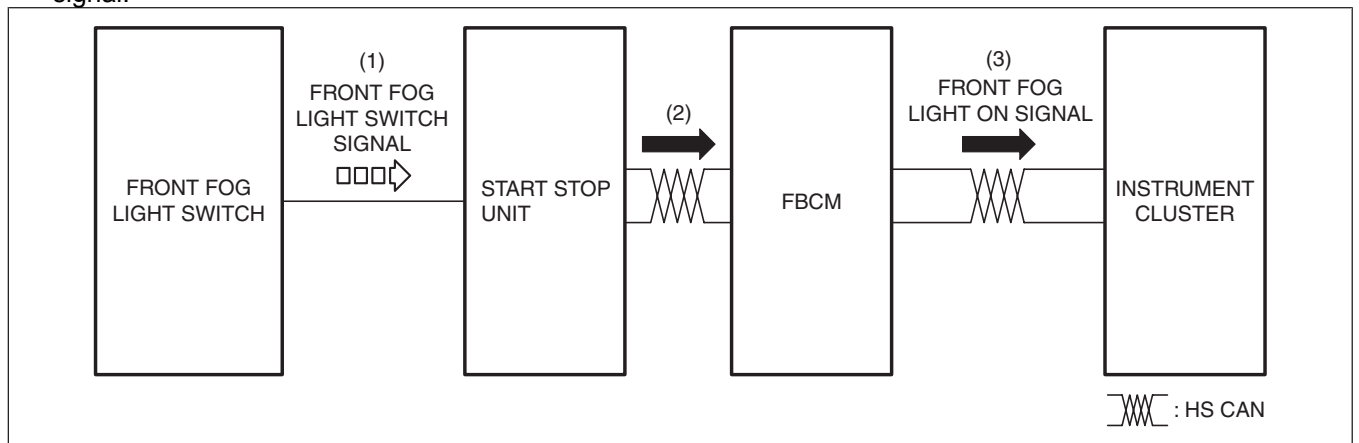

ac5wzn00001366

### Fail-safe

- Function not equipped.