

---

## OIL COOLER [GW6A-EL, GW6AX-EL]

id0517i2358100


### **Purpose/Function**

- The oil cooler constantly maintains maximum ATF performance in the transaxle by maintaining an optimum ATF temperature which has the effect of achieving reduced fuel consumption.

### **Construction/Operation**

- The oil cooler performs the following operations according to the ATF temperature condition:
  - Heating function: Warms the ATF using the radiator coolant to promote an earlier increase in the ATF temperature when its temperature is low. As a result of the earlier temperature increase, the ATF viscosity decreases which reduces drag in the transaxle.
  - Cooling function: Cools the ATF using the radiator coolant to maintain optimum conditions and prevent ATF expansion and deterioration.

WITHOUT OIL COOLER NO.2

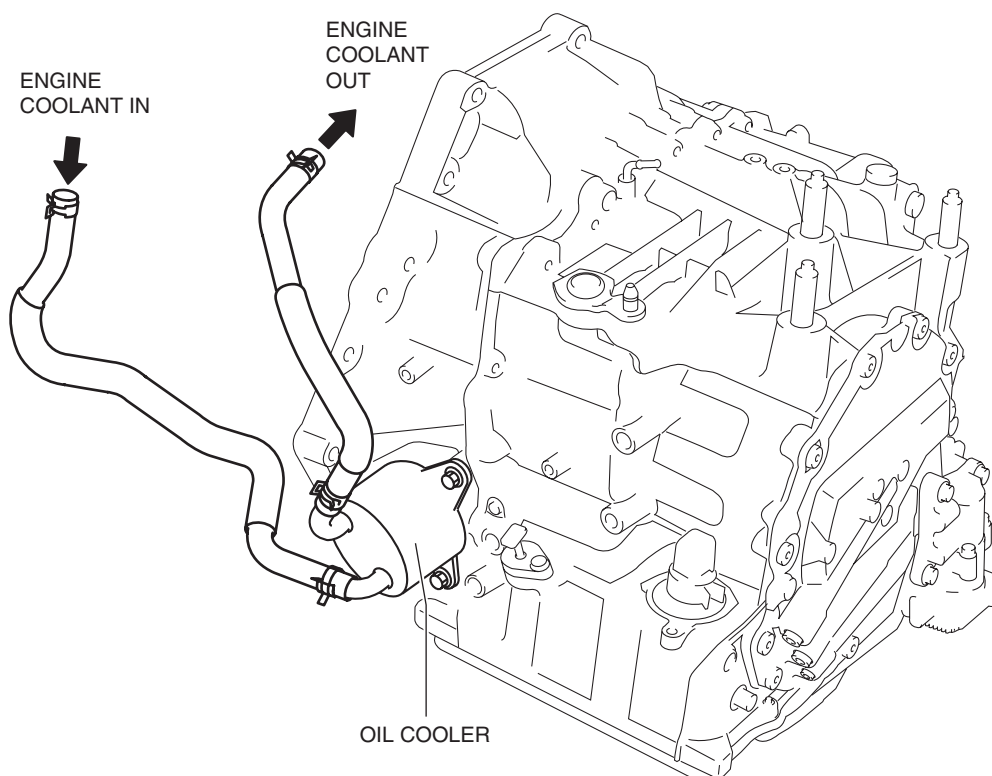

WITH OIL COOLER NO.2

