


CATCH TANK INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0116zb804000

1. Remove the catch tank. (See PURGE SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
2. Plug the purge solenoid valve side into the catch tank.


SKYACTIV-G 2.0

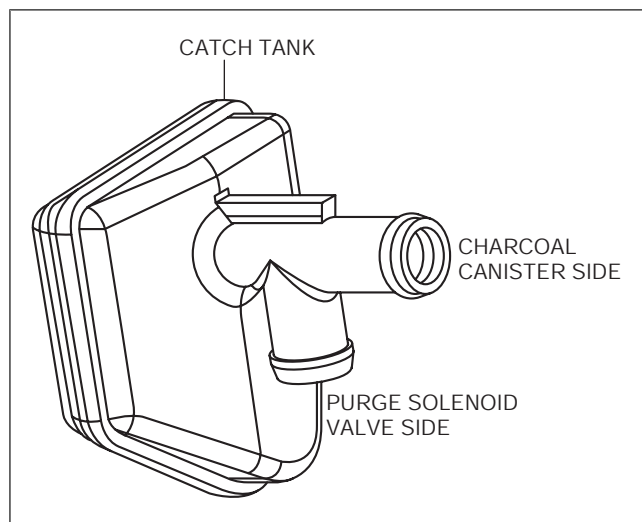

am3uuw00007301

SKYACTIV-G 2.5

3. Inspect for air leakage when blowing air using your mouth into the charcoal canister side.
 - If there is air leakage, replace the catch tank. (See PURGE SOLENOID VALVE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

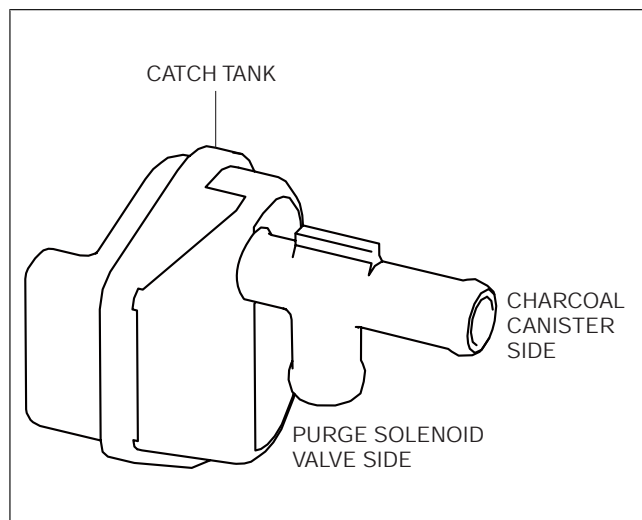

am6zzw00010420