

FRONT SEAT CUSHION TRIM REMOVAL/INSTALLATION

id091300911700

Warning


- Handling a side air bag improperly can accidentally operate (deploy) the air bag, which may seriously injure you. Read the service warnings/cautions in the Workshop Manual before handling the front seat (side air bag integrated). (See AIR BAG SYSTEM SERVICE WARNINGS.) (See AIR BAG SYSTEM SERVICE CAUTIONS.)
- If the sliding mechanisms on both sides are not locked after assembling the front seat, the front seat will operate accidentally while the vehicle is driven, which could result in serious injury. After assembling the front seat, shake it up and down and verify that the sliding mechanism on the both sides are locked.

Caution

- If the slide lever is operated after the front seat is removed, the left/right slide positions will deviate and the adjuster unit could be damaged after the front seat is installed. After removing a front seat, do not operate the slide lever.
- Verify that there are no malfunctions in the forward/back slide of the seat and in the adjuster unit after installing a front seat.
- When performing the procedure with a front seat removed from the vehicle, perform the procedure on a clean cloth so as not to damage or soil the seat.


Driver-side (with power seat system)

1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the headrest.
4. Remove the front seat. (See FRONT SEAT REMOVAL/INSTALLATION.)
5. Remove the front seat side cover. (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
6. Remove fasteners A and set the front seat cushion trim aside.

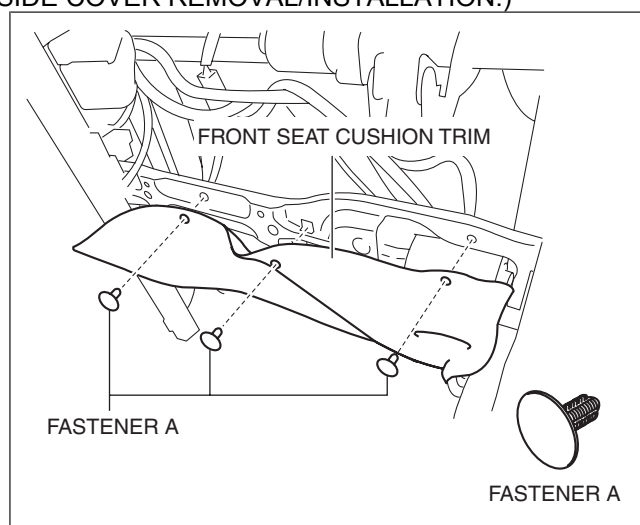


ac5jjw00002776

7. Disconnect the front seat warmer connector.

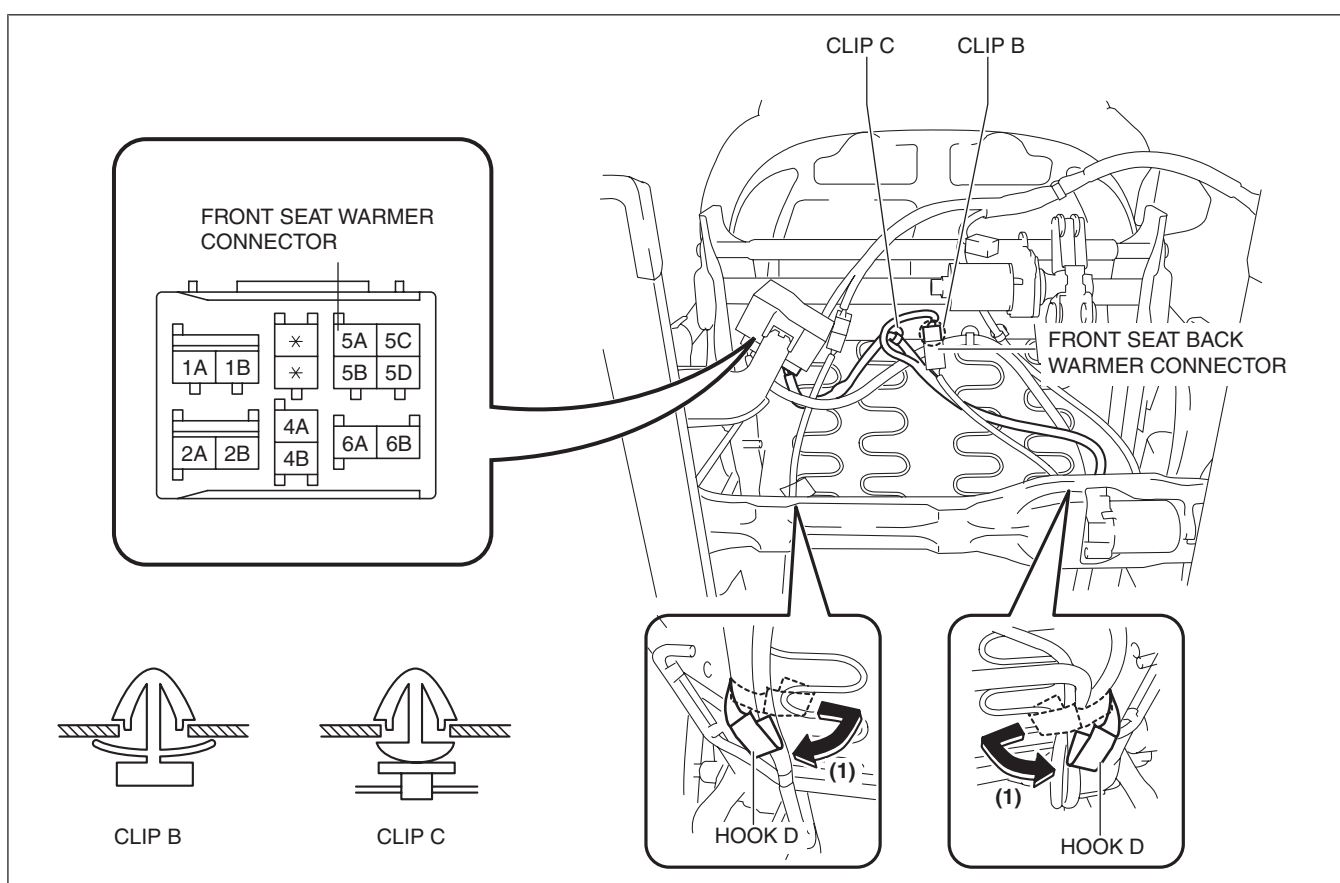

ac5uuw00001965

8. Disconnect the front seat back warmer connector.
9. Disengage clip B.
10. Disconnect clip C.
11. Set hooks D aside in the direction of the arrow (1) shown in the figure.
12. Move the front seat cushion trim in the direction of the arrow (2) shown in the figure and set it aside.

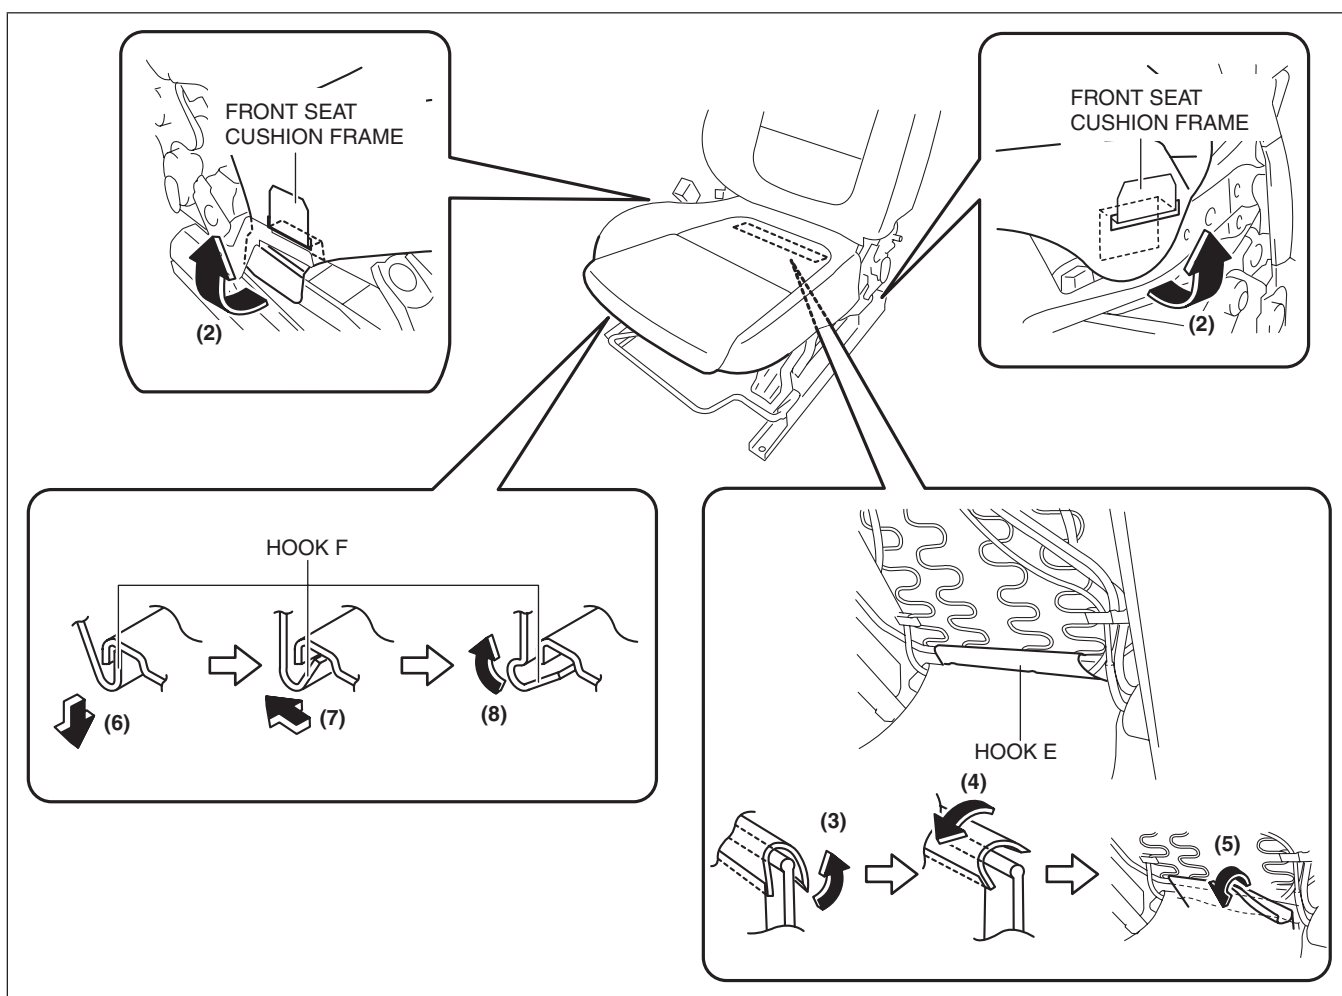


ac5uuw00001966

13. Slide hook E in the order of arrows (3), (4), (5) shown in the figure and set the front seat cushion frame aside.
14. Slide hook F in the order of arrows (6), (7), (8) shown in the figure and set the front seat cushion frame aside.
15. Remove the C rings in the order of (9), (10), (11), (12), and (13) shown in the figure, and remove the front seat cushion trim from the front seat cushion pad.

Caution

- If a damaged C rings are reused, it may not be possible to install the front seat cushion trim and front seat cushion pad correctly. When removing and installing C rings, be careful not to damage them.
- If the C rings are damaged, replace the C rings with a new one.

16. Install in the reverse order of removal.

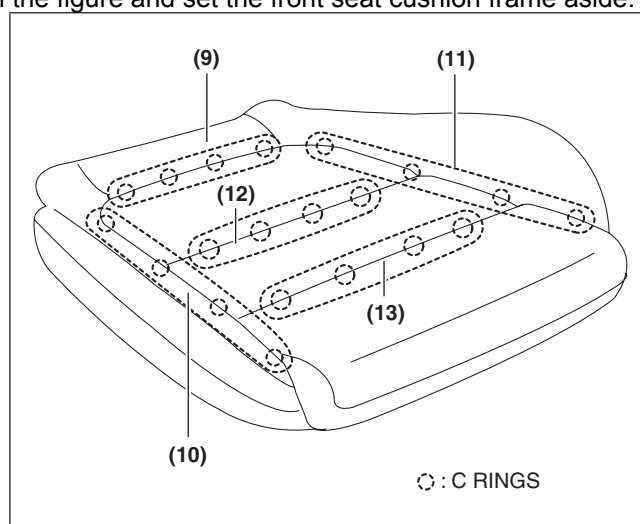

ac5wzw00003180


Driver-side (without power seat system)

Note

- There are two types of passenger-side front seats, A and B types. The location and the number of C-rings installed to the front seat back trim and front seat back pad differ depending on the type.


1. Switch the ignition off (LOCK).

2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the headrest.
4. Remove the front seat. (See FRONT SEAT REMOVAL/INSTALLATION.)
5. Remove the front seat side cover. (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)
6. Slide hook A in the order of arrows (1), (2), (3) shown in the figure and set the front seat cushion trim aside.

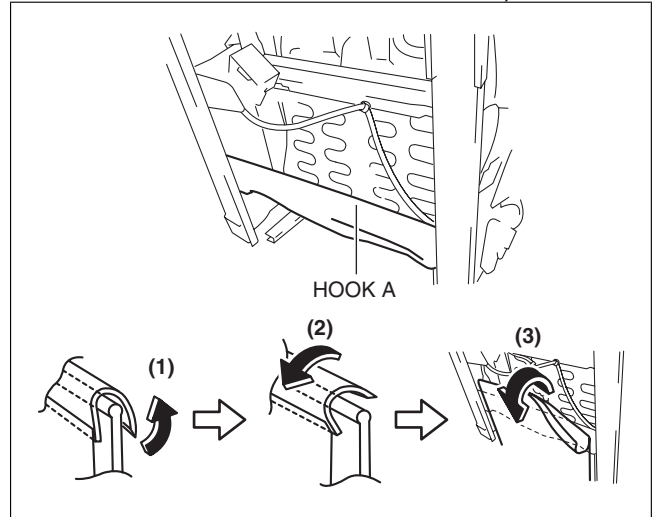

ac5uuw00001914

7. Move the front seat cushion trim in the direction of the arrow (4) shown in the figure and set it aside.

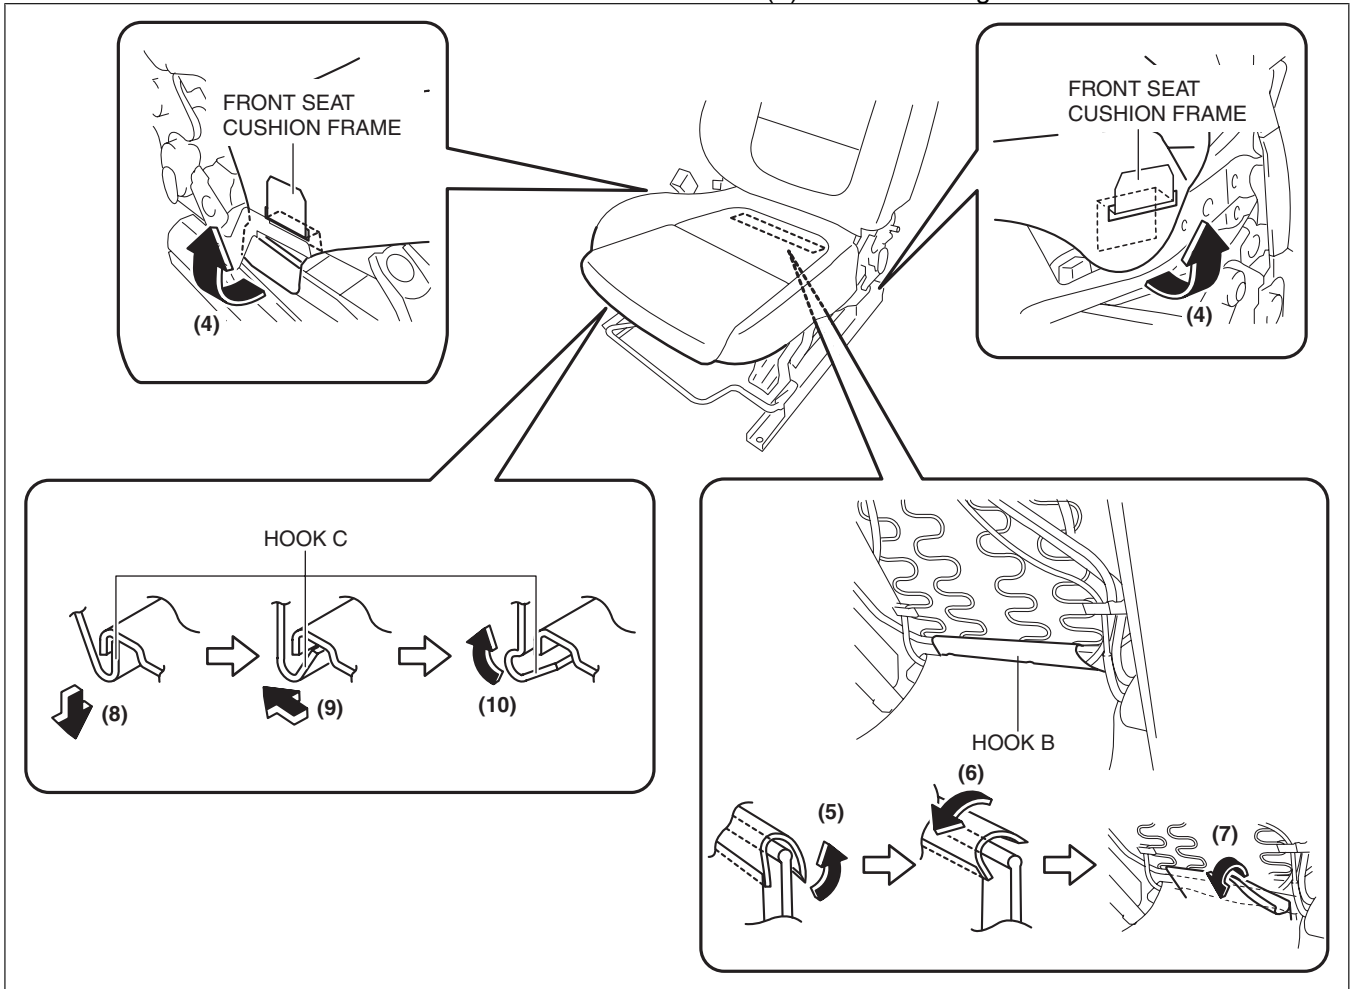

ac5uuw00001969

8. Slide hook B in the order of arrows (5), (6), (7) shown in the figure and set the front seat cushion frame aside.
9. Slide hook C in the order of arrows (8), (9), (10) shown in the figure and set the front seat cushion frame aside.

Remove the C rings in the order of (11), (12), (13), (14), and (15) shown in the figure, and remove the front seat cushion trim from the front seat cushion pad. (type A)

Caution


- If a damaged C rings are reused, it may not be possible to install the front seat cushion trim and front seat cushion pad correctly. When removing and installing C rings, be careful not to damage them.
- If the C rings are damaged, replace the C rings with a new one.

10. Remove the C rings in the order of (16), (17), (18), and (19) shown in the figure, and remove the front seat cushion trim from the front seat cushion pad. (type B)


Caution

- If a damaged C rings are reused, it may not be possible to install the front seat cushion trim and front seat cushion pad correctly. When removing and installing C rings, be careful not to damage them.
- If the C rings are damaged, replace the C rings with a new one.

11. Install in the reverse order of removal. (See Front Seat Cushion Trim Installation Note.)

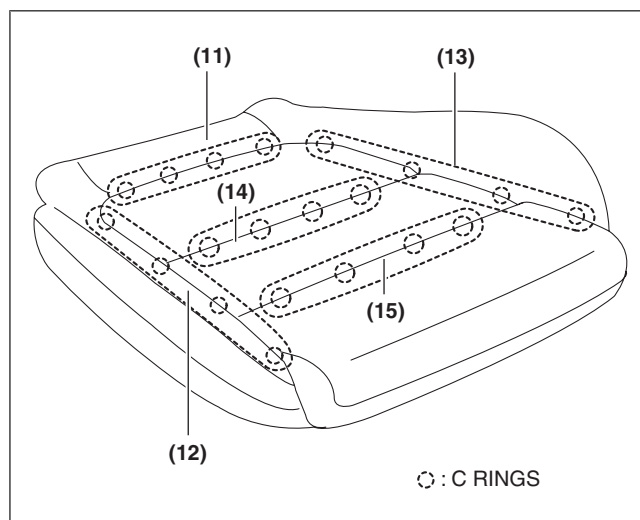

ac5wzw00003181

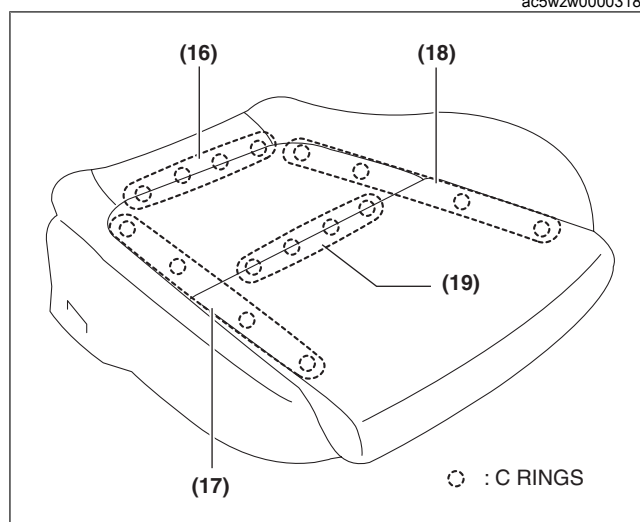

ac5wzw00003182


Passenger-side

Note

- There are two types of passenger-side front seats, A and B types. The location and the number of C-rings installed to the front seat back trim and front seat back pad differ depending on the type.


1. Switch the ignition off (LOCK).
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the headrest.
4. Remove the front seat. (See FRONT SEAT REMOVAL/INSTALLATION.)
5. Remove the front seat side cover. (See FRONT SEAT SIDE COVER REMOVAL/INSTALLATION.)

6. Slide hook A in the order of arrows (1), (2), (3) shown in the figure and set the front seat cushion trim aside.

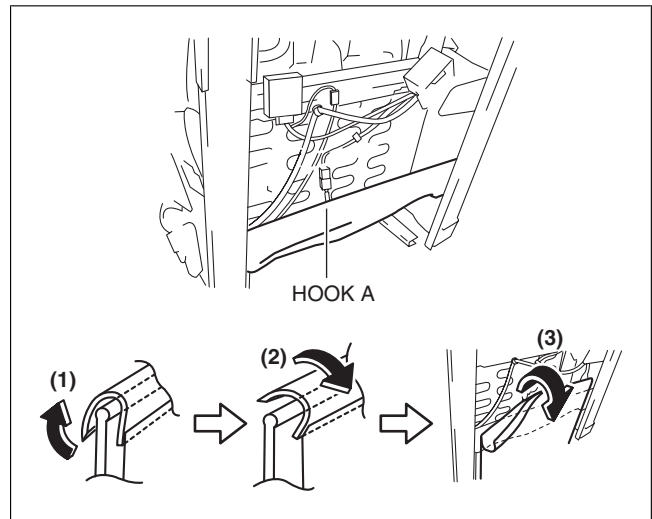


ac5wzw00003165

7. Disconnect the seat warmer connector. (With seat warmer system)

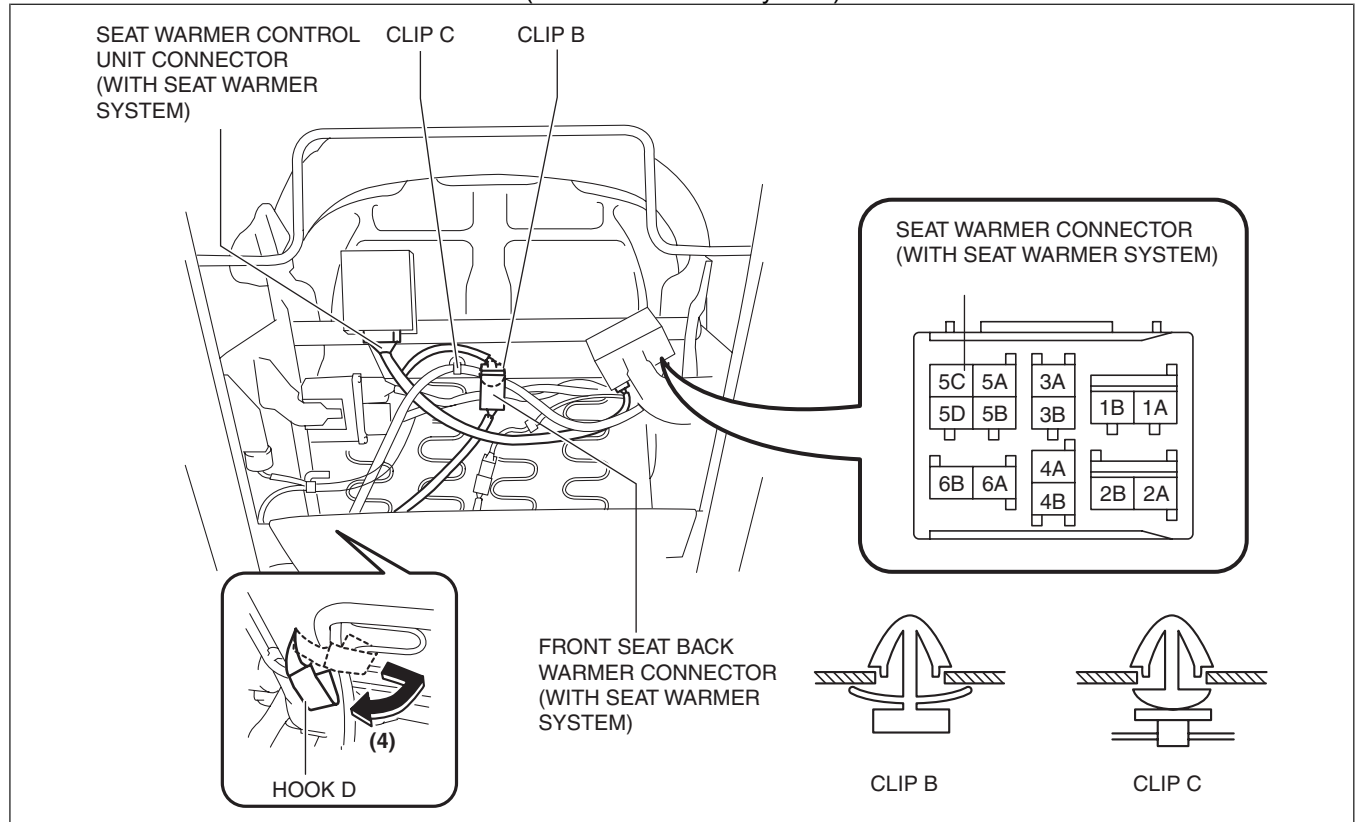

ac5uuw00001971

8. Disconnect the seat warmer control unit connector. (With seat warmer system)
9. Disconnect the front seat back warmer connector. (With seat warmer system)
10. Disengage clip B. (With seat warmer system)
11. Disconnect clip C. (With seat warmer system)
12. Set hooks D aside in the direction of the arrow (4) shown in the figure. (With seat warmer system)
13. Move the front seat cushion trim in the direction of the arrow (5) shown in the figure and set it aside.

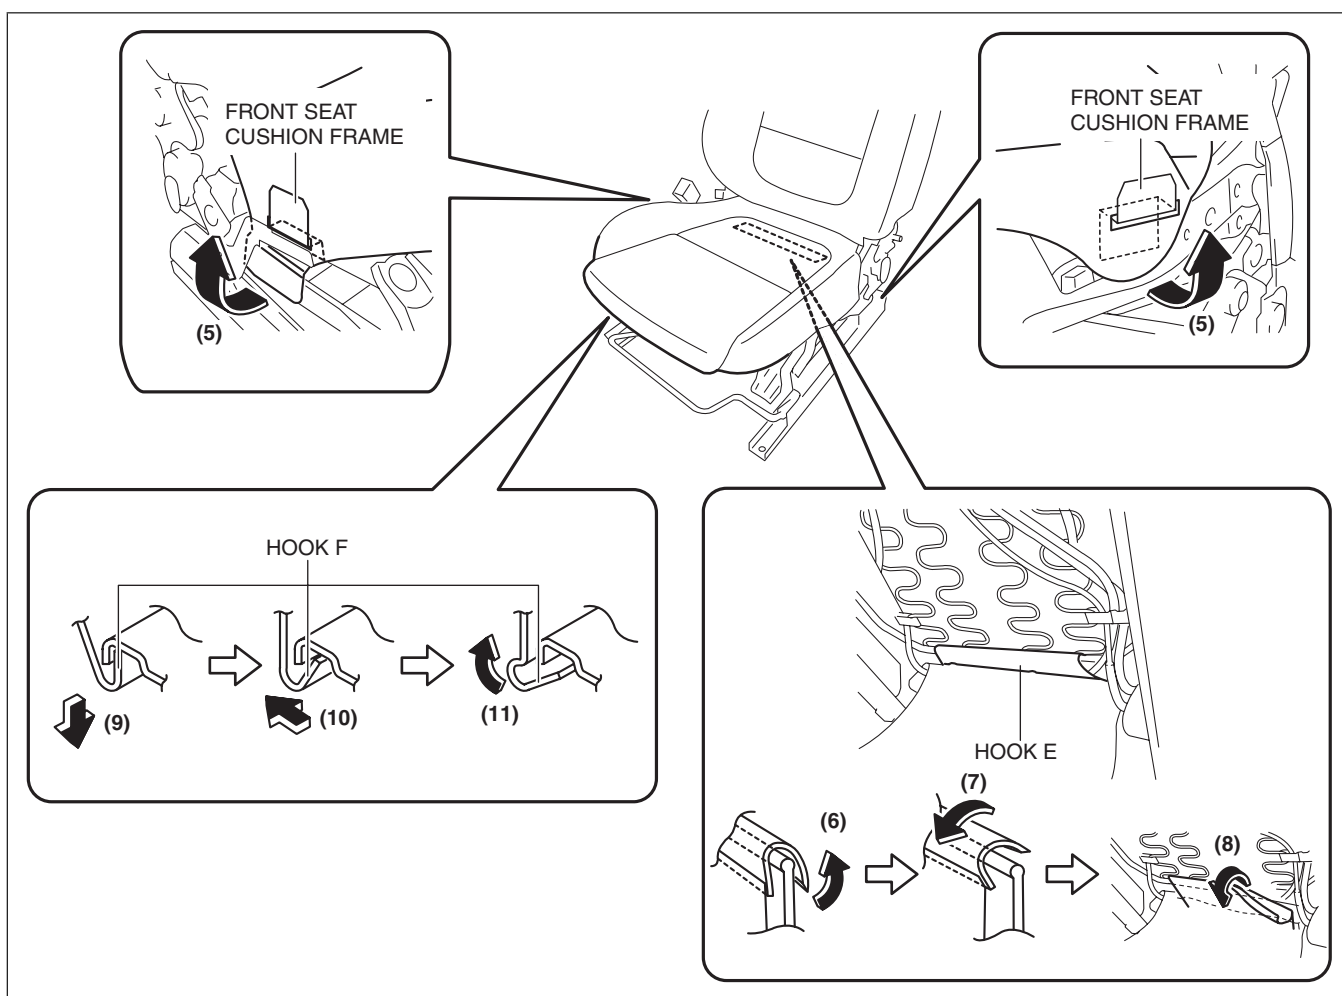


ac5uuw00001972

14. Slide hook E in the order of arrows (6), (7), (8) shown in the figure and set the front seat cushion frame aside.
15. Slide hook F in the order of arrows (9), (10), (11) shown in the figure and set the front seat cushion frame aside.
16. Remove the C rings in the order of (12), (13), (14), (15), and (16) shown in the figure, and remove the front seat cushion trim from the front seat cushion pad. (type A)

Caution

- If a damaged C rings are reused, it may not be possible to install the front seat cushion trim and front seat cushion pad correctly. When removing and installing C rings, be careful not to damage them.
- If the C rings are damaged, replace the C rings with a new one.

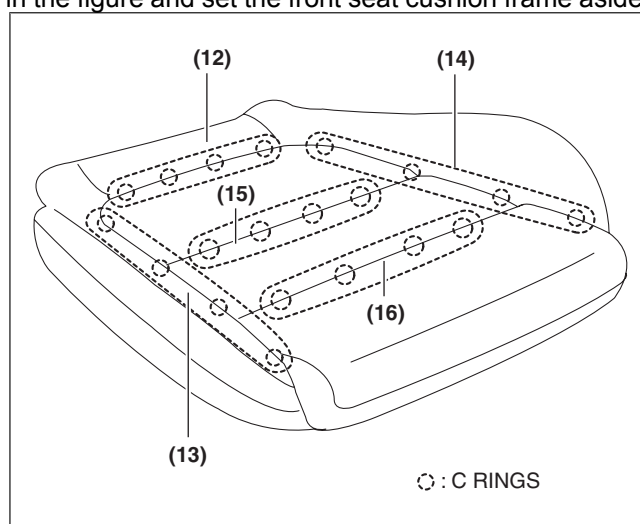


ac5wzw00003183

17. Remove the C rings in the order of (17), (18), (19), and (20) shown in the figure, and remove the front seat cushion trim from the front seat cushion pad. (type B)

Caution

- If a damaged C rings are reused, it may not be possible to install the front seat cushion trim and front seat cushion pad correctly. When removing and installing C rings, be careful not to damage them.
- If the C rings are damaged, replace the C rings with a new one.

18. Install in the reverse order of removal. (See Front Seat Cushion Trim Installation Note.)

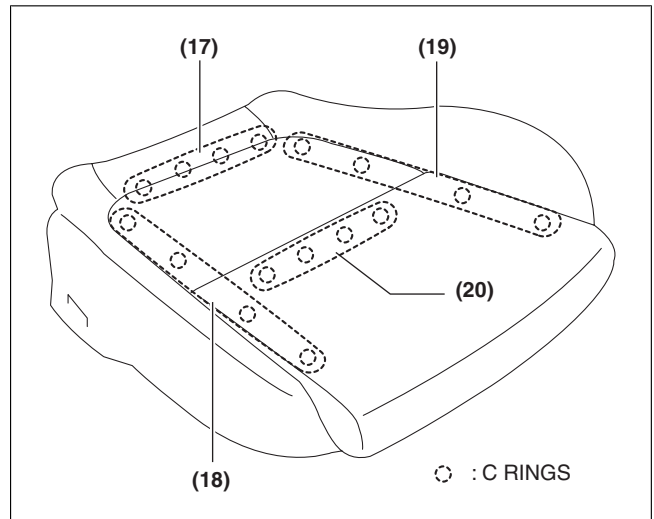


ac5wzw00003184

Front Seat Cushion Trim Installation Note

Note


- There are the following two types of hooks on the front side of the front seat cushion trim. (without power seat system)
 - Type A: With pad
 - Type B: With clip

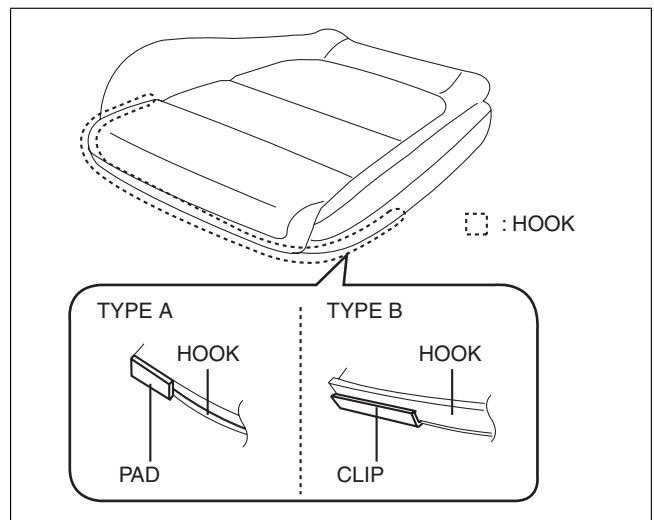

ac5wzw00006093

Type A front seat cushion trim installation


- Install the clips to the positions shown in the figure before installing the front seat cushion trim.

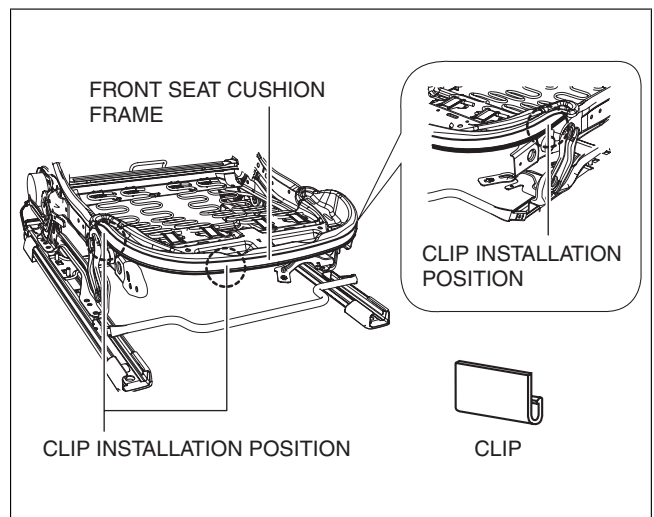

ac5wzw00006094

Type B front seat cushion trim installation

- Remove the clips shown in the figure before installing the front seat cushion trim.

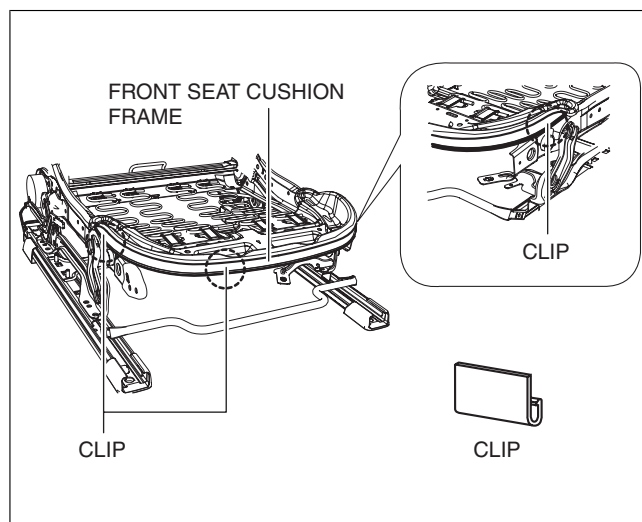

ac5wzw00006095