


## MAP LIGHT INSPECTION

id091800801300

### Front Map Light

1. Remove the front map light. (See MAP LIGHT REMOVAL/INSTALLATION.)
2. Verify that the continuity between the front map light terminals is as indicated in the table.

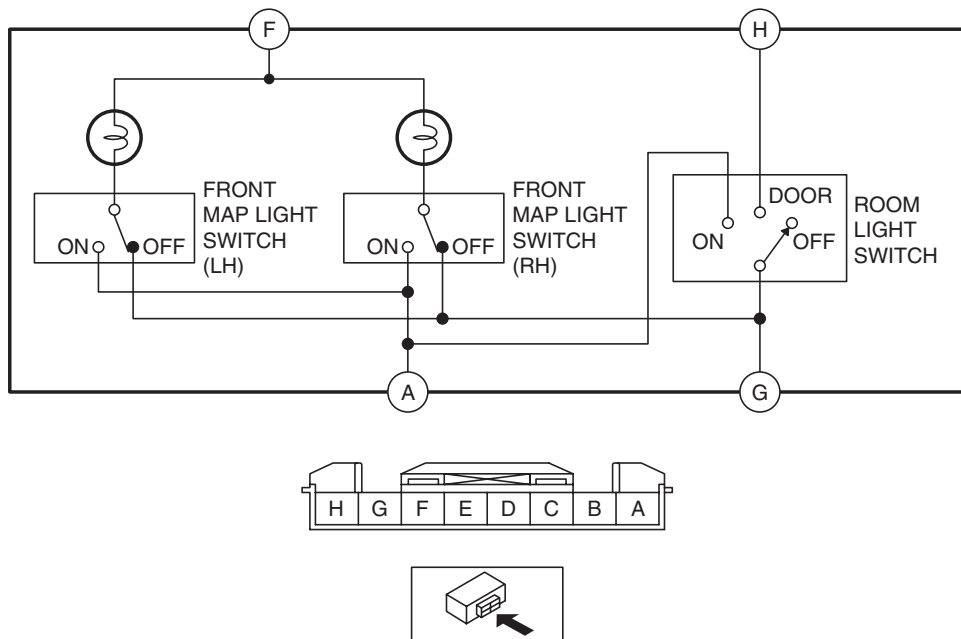

ac5wzw00000018

○—○ : Bulb      ○—○ : Continuity


Switch position			Terminal			
Front map light switch (LH)	Front map light switch (RH)	Room light switch	A	F	G	H
OFF	OFF	OFF		○—○		
ON	OFF	OFF	○—○	○—○		
OFF	ON	OFF	○—○	○—○		
—	—	ON	○—○		○—○	
—	—	DOOR			○—○	○—○

ac5wzw00003021

- If not as indicated in the table, replace the front map light or front map light bulb. (See MAP LIGHT REMOVAL/INSTALLATION.) (See MAP LIGHT BULB REMOVAL/INSTALLATION.)

### Rear Map Light

1. Remove the rear map light. (See MAP LIGHT REMOVAL/INSTALLATION.)
2. Verify that the continuity between the rear map light terminals is as indicated in the table.

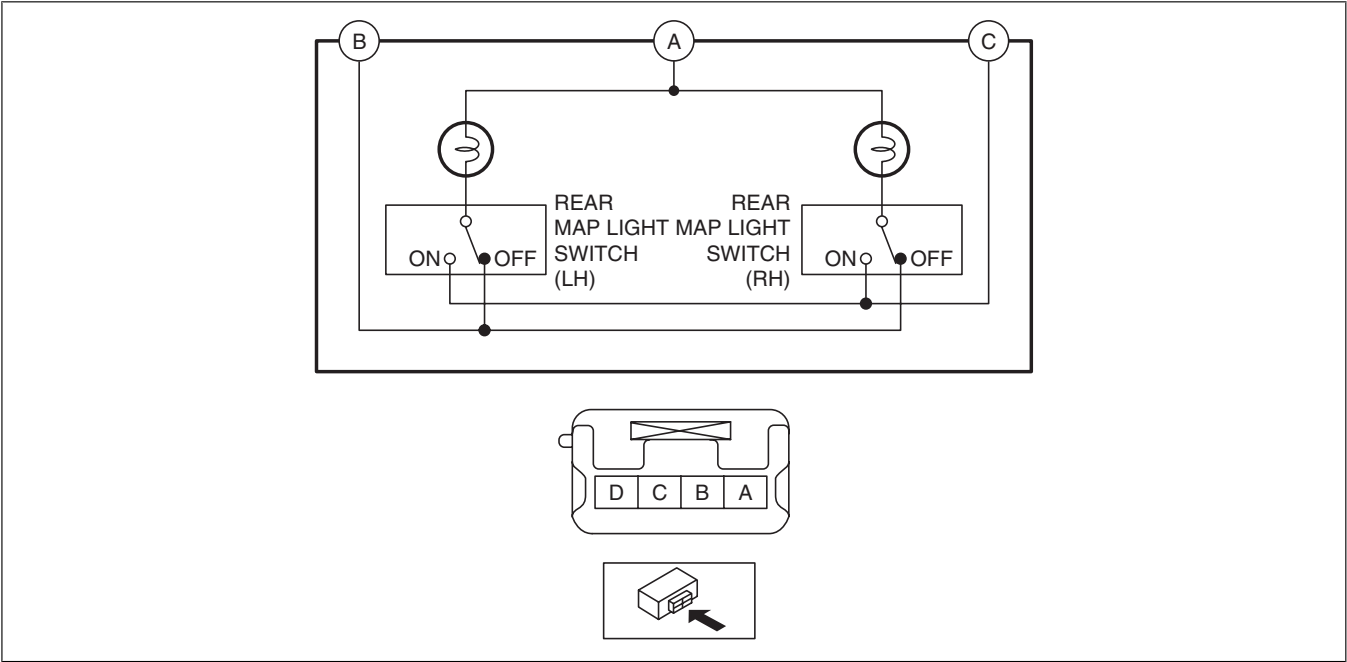

ac5wzw00000422

- If not as indicated in the table, replace the rear map light. (See MAP LIGHT REMOVAL/ INSTALLATION.)

: Bulb

Switch position		Terminal		
Rear map light switch (LH)	Rear map light switch (RH)	A	B	C
ON	OFF			
OFF	ON			

ac5wzw00000423