


## REAR DOOR SPEAKER INSPECTION

id092000804900

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the rear door trim. (See REAR DOOR TRIM REMOVAL/INSTALLATION.)
3. Disconnect the rear door speaker connector. (See REAR DOOR SPEAKER REMOVAL/INSTALLATION.)
4. Verify that the resistance between the rear door speaker terminals is as indicated in the table.

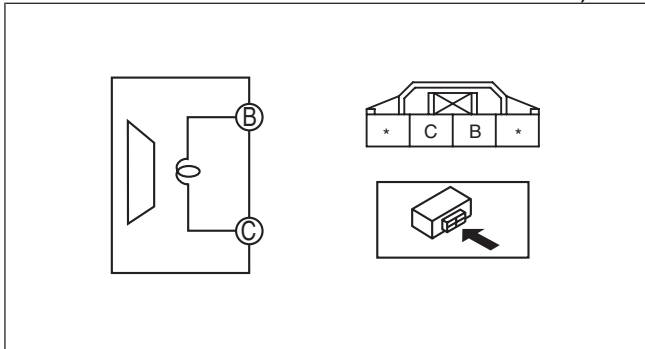

adejw00001161

- If not as indicated in the table, replace the rear door speaker.

### Without Bose®

			○○ : Resistance
Test condition	Terminal		Resistance (ohm)
	B	C	
Under any condition	○○		3.4—4.6

ac5wzw00005911

### With Bose®

			○○ : Resistance
Test condition	Terminal		Resistance (ohm)
	A	B	
Under any condition	○○		3.7

ac5uuw00002872