


BUCKLE SWITCH INSPECTION

id081100803000

Front

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the front seat. (See FRONT SEAT REMOVAL/INSTALLATION.)
4. Remove the front buckle. (See FRONT BUCKLE REMOVAL/INSTALLATION.)
5. Inspect for continuity between the buckle switch terminals using a tester.
 - If not as indicated in the table, replace the front buckle.

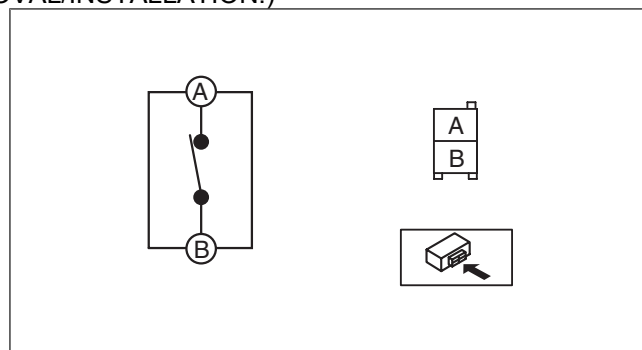

am3uuw00003767


○—○ : Continuity

Seat belt	Terminal	
	A	B
Fastened		
Unfastened	○—○	○—○

am6xuw00001840

Rear (With Rear Seat Belt Reminder)

1. Switch the ignition to off.
2. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Fold down the rear seat back.
4. Remove the rear buckle. (See REAR BUCKLE REMOVAL/INSTALLATION.)
5. Inspect for continuity between the buckle switch terminals using a tester.
 - If not as indicated in the table, replace the rear buckle.

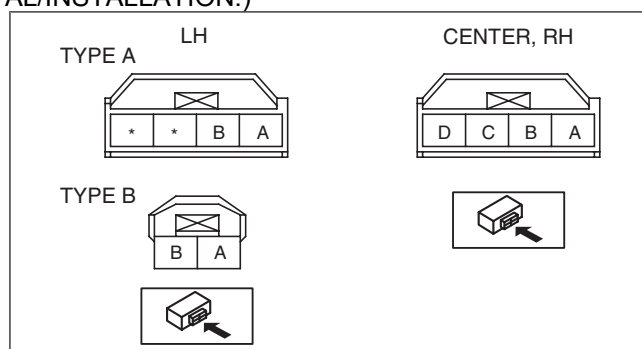

ac5wzw00006463

LH

○—○ : Continuity

Seat belt	Terminal	
	A	B
Fastened		
Unfastened	○—	—○

CENTER, RH

○—○ : Continuity

Seat belt	Terminal			
	A	B	C	D
Fastened				
Unfastened	○—	—○	○—	—○

RH

CENTER