
FUSE BLOCK

id092100528800

Purpose


- Fuses used by each system are grouped and housed together for smooth inspection and replacement servicing.

Function

- Fuses used by each system are grouped and housed together.

Construction

- Installed inside the front side trim (LH).

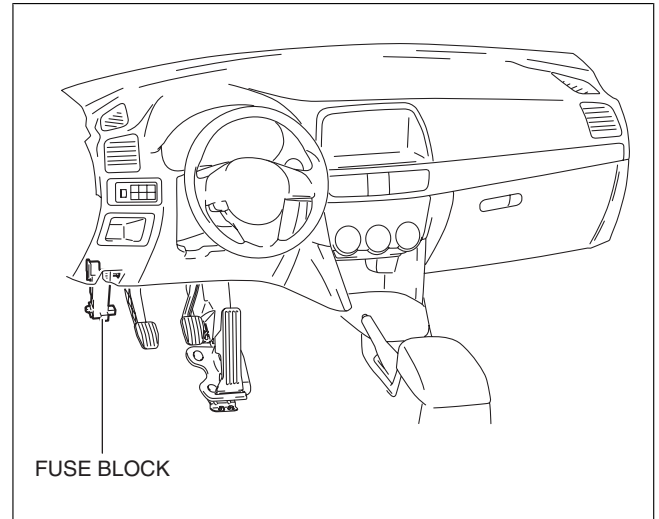

ac5wzn00000281

Operation

Fuse operation

- If electric current to each fuse is the specified value or more, the fuse melts due to heat generation.
- Interrupts electric current flow downstream of the fuse.

Fail-safe

- Function not equipped.