


## BACK-UP LIGHT SWITCH INSPECTION

id091800800300

1. Remove the back-up light switch. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
2. Verify that the continuity between the back-up light switch terminals is as indicated in the table.

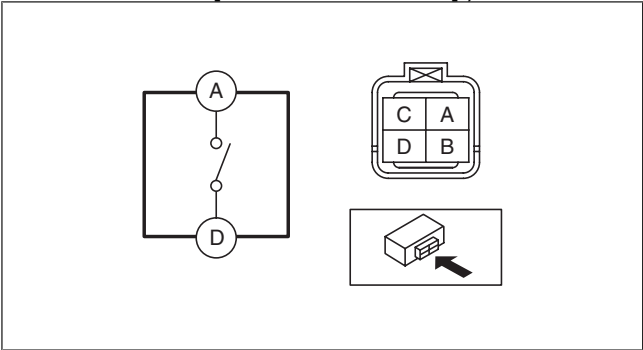

ac5wzw00000006

- If not as indicated in the table, replace the back-up light switch. (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R].) (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)

○—○ : Continuity

Shift lever position	Terminal	
	A	D
Reverse	○—○	○—○
Other		

ac5wzw000000393