


DISCHARGE HEADLIGHT CONTROL MODULE REMOVAL/INSTALLATION

id091800805300

Warning


- **Incorrect servicing of the discharge headlights could result in electrical shock. Before servicing the discharge headlights, always refer to the service warnings. (See DISCHARGE HEADLIGHT SERVICE WARNINGS.)**

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
3. Disconnect the connector.

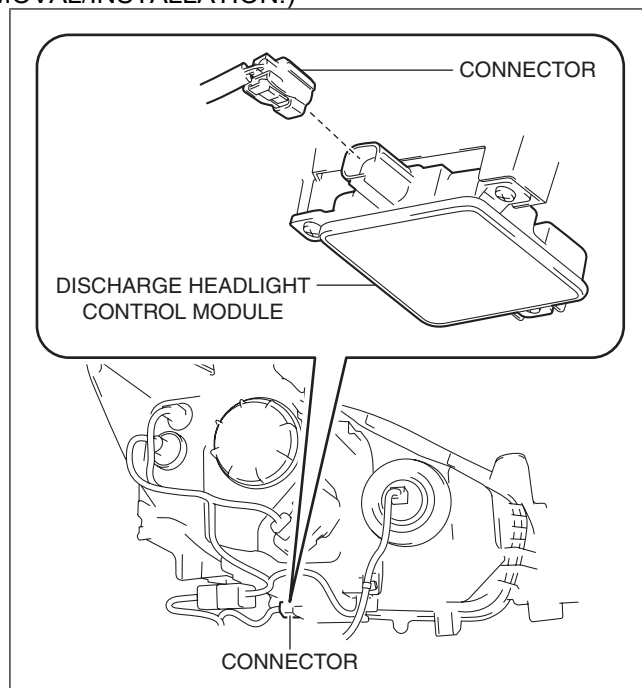


ac5wzw00000455

4. Remove the screws.

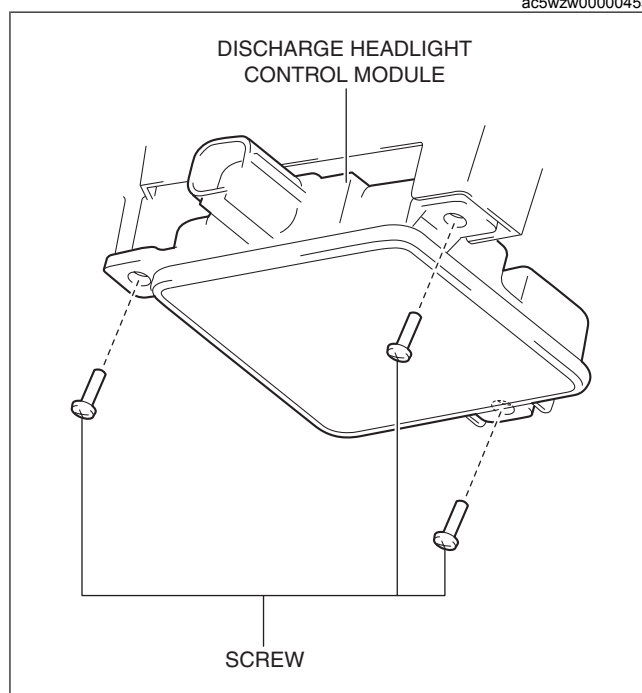


ac5wzw00000456

5. Insert a tape-wrapped flathead screwdriver into the clearance between the discharge headlight control module and connector shown in the figure.

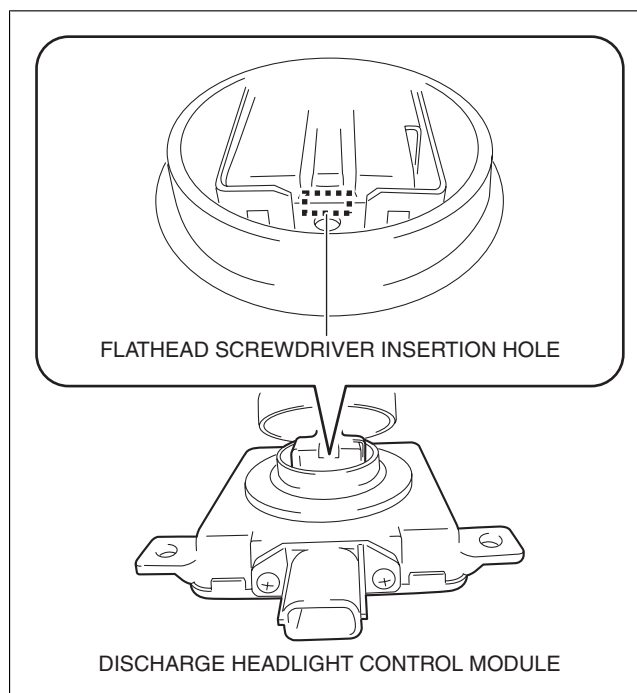


ac5wzw00001195

6. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, lift up the connector, and disconnect it.

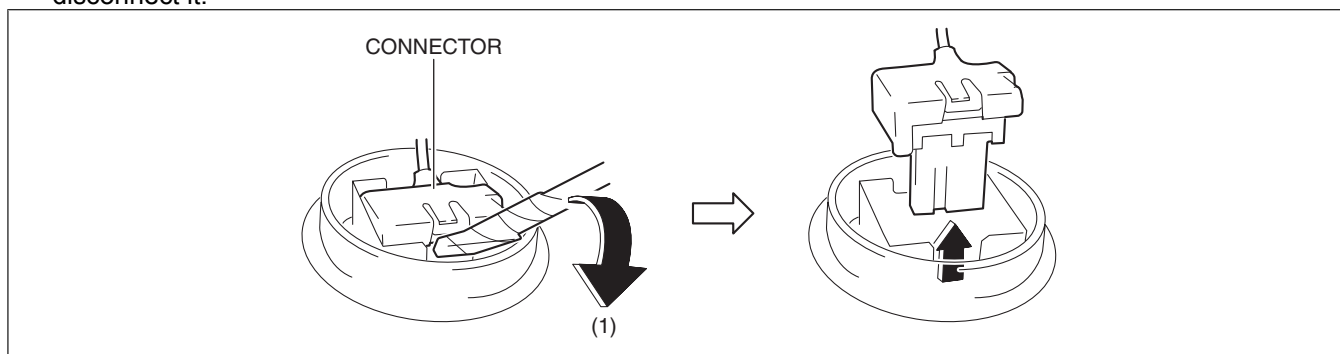

ac5wzw00000458

7. Remove the seal.
8. Remove the discharge headlight control module.
9. Install in the reverse order of removal.

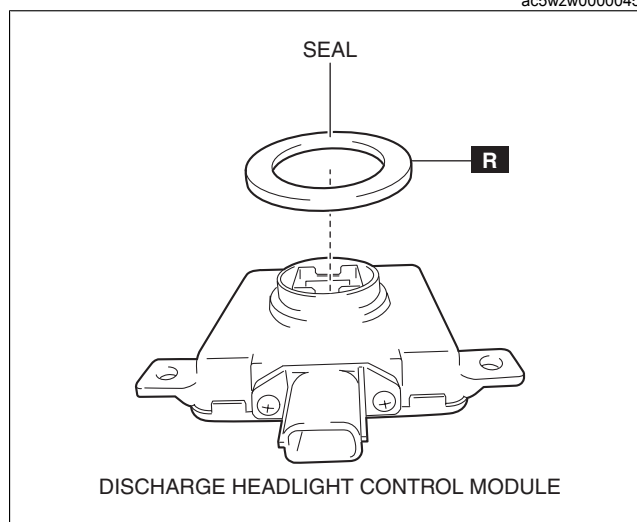

ac5wzw00003029