


## WINDSHIELD WIPER AND WASHER SWITCH INSPECTION

id091900800300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Column cover (See COLUMN COVER REMOVAL/INSTALLATION.)
  - (2) Wiper and washer switch (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)
3. Verify that the continuity between the windshield wiper and washer switch terminals is as indicated in the table.
  - If the continuity is not as indicated in the table, replace the windshield wiper and washer switch. (See WIPER AND WASHER SWITCH REMOVAL/INSTALLATION.)

**With wiper and washer switch on right side**

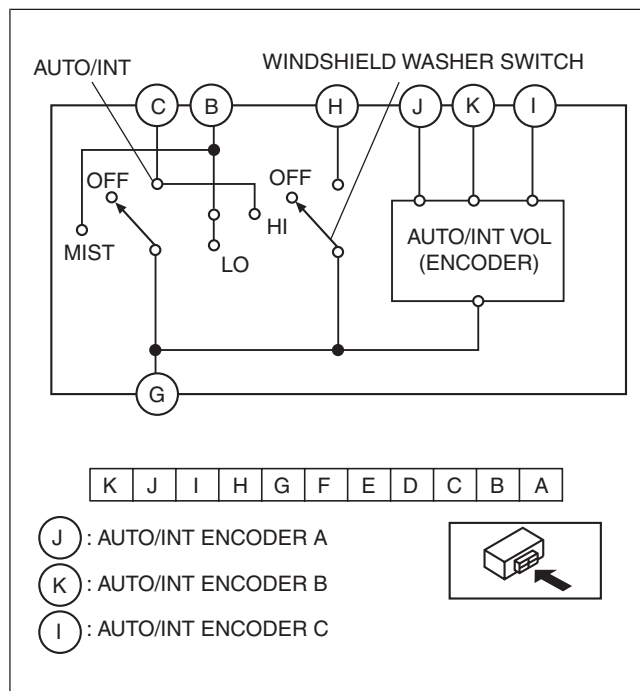


ac5wzw00004630

Switch position		Terminal						
		B	C	G	H	I	J	K
WINDSHIELD WIPER SWITCH	MIST	○	○					
	OFF							
	AUTO/INT		○	○				
	LO	○	○					
	HI	○	○					
AUTO/INT VOL	-2 (SLOW)			○	○	○	○	○
	-1			○	○	○	○	○
	0			○	○	○	○	○
	+1			○	○	○	○	○
	+2 (FAST)			○	○	○	○	○
WINDSHIELD WASHER SWITCH	ON			○	○			

ac5wzw00004631

With wiper and washer switch on left side

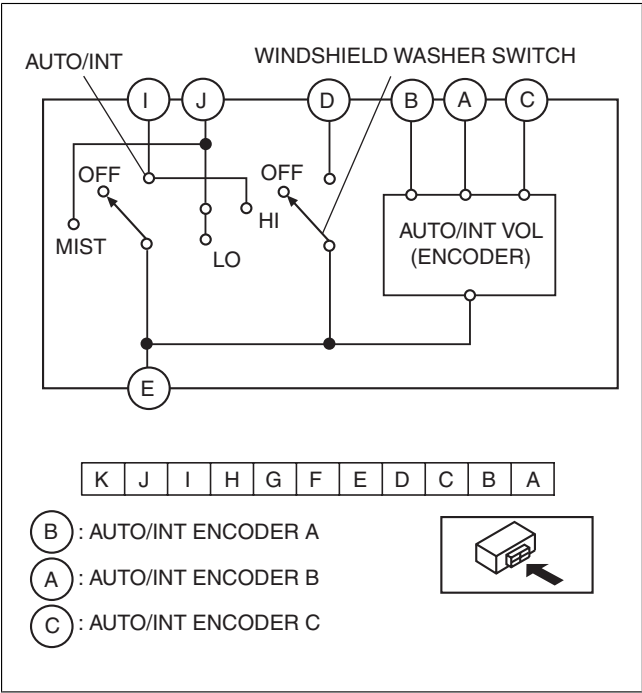

ac5wzw00001689

Continuity

Switch position		Terminal						
		J	I	E	D	B	A	C
WINDSHIELD WIPER SWITCH	MIST	○	○	○				
	OFF							
	AUTO/INT		○	○				
	LO	○	○	○				
	HI	○	○	○				
AUTO/INT VOL	-2 (SLOW)			○	○	○	○	○
	-1			○	○	○	○	○
	0			○	○	○	○	○
	+1			○	○	○	○	○
	+2 (FAST)			○	○	○	○	○
WINDSHIELD WASHER SWITCH	ON			○	○			

ac5wzw00001644