


## NEUTRAL SWITCH REMOVAL/INSTALLATION [C66M-R, C66MX-R]

id0515ma159800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
2. Remove the air cleaner component (air cleaner, air hose). (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
3. Remove in the order indicated in the table.

1	Connector
2	Neutral switch
3	Gasket

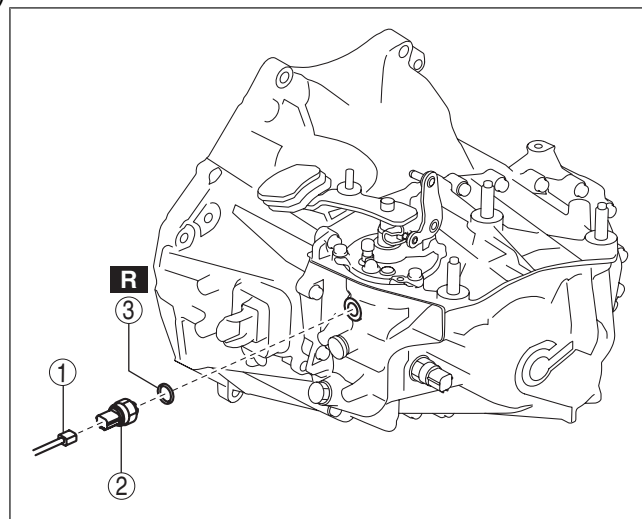


ac5wzw00006161

4. Install in the order indicated in the table.

1	Gasket
2	Neutral switch
3	Connector

5. Install the air cleaner component (air cleaner, air hose). (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
6. Connect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)

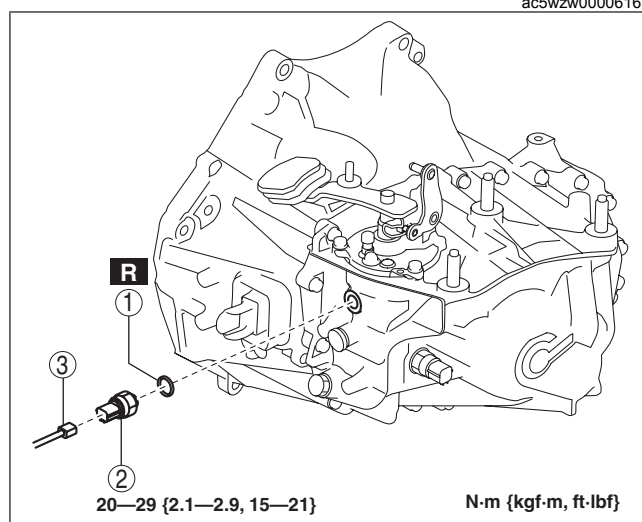

20—29 {2.1—2.9, 15—21}

N·m {kgf·m, ft·lbf}

ac5wzw00006162