

RVM SWITCH

id092200030000

Purpose


- The rear vehicle monitoring system can be optionally switched between operable and inoperable.

Function

- The switch operation signal is sent to the instrument cluster.

Construction


- The RVM switch is built into the cluster switch.
- The resistance is built into each switch.

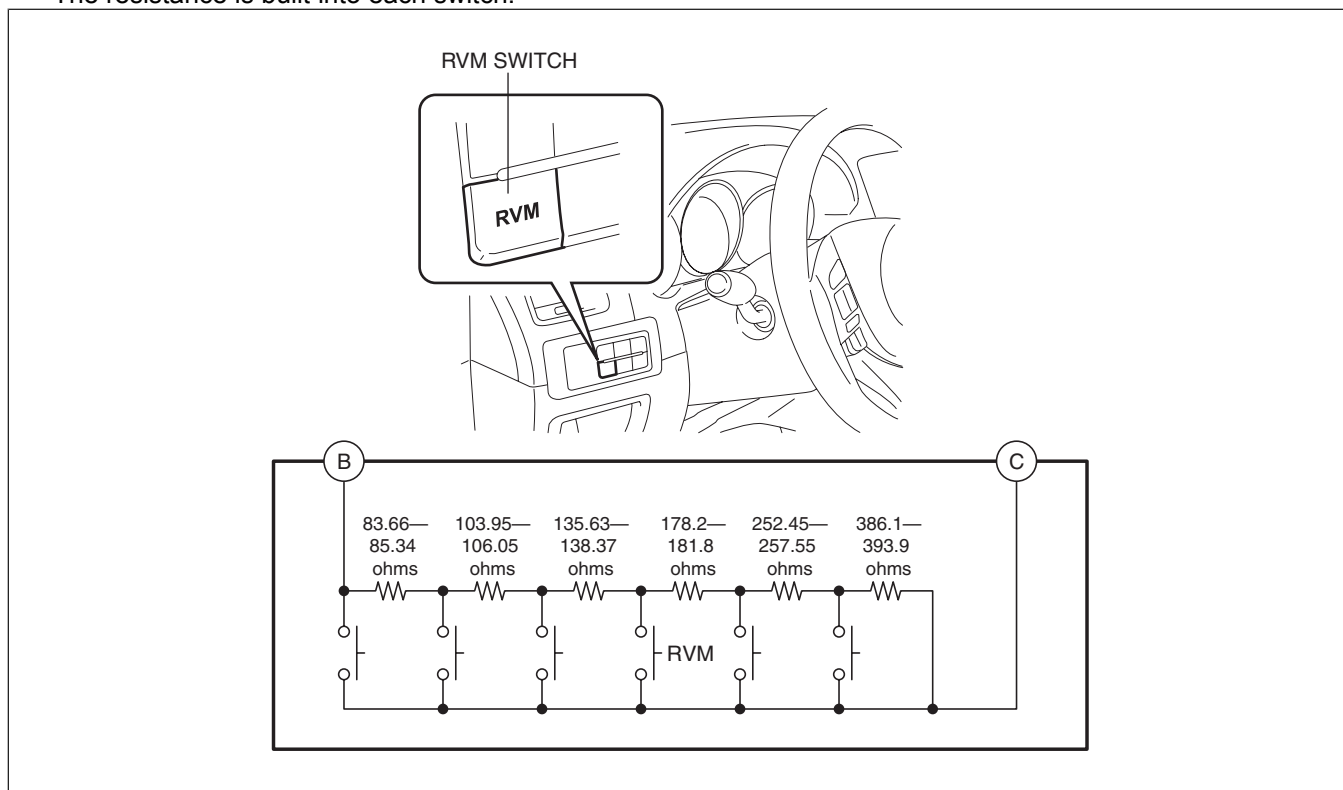

ac5wzn00001442

Operation

- When the RVM switch operates, the switch operation signal is sent to the instrument cluster.
- The instrument cluster sends a RVM switch operation signal to the rear vehicle monitoring control module based on the received voltage value (switch operation signal).
- When the rear vehicle monitoring control module receives the RVM switch operation signal from the instrument cluster, it switches the rear vehicle monitoring system on/off.

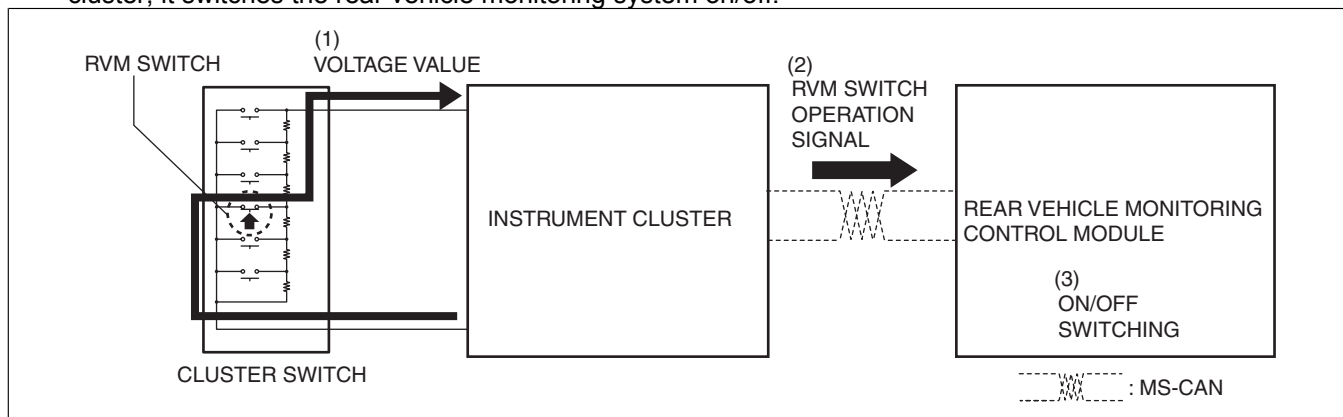

ac5wzn00001443

Fail-safe

- Function not equipped.