


BONNET RELEASE CABLE REMOVAL/INSTALLATION

id091400510500

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Front bumper (See FRONT BUMPER REMOVAL/INSTALLATION.)
 - (2) Front combination light (Driver's side) (See FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.)
 - (3) Front over fender (Driver's side) (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
 - (4) Front mudguard (Driver's side) (See MUDGUARD REMOVAL/INSTALLATION.)
 - (5) Bonnet release lever (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
3. Disconnect the bonnet release cable from the bonnet latch.
4. While pressing the tabs of the clip in the direction of arrow (1) shown in the figure, pull the clip in the direction of arrow (2) to detach it from the body.

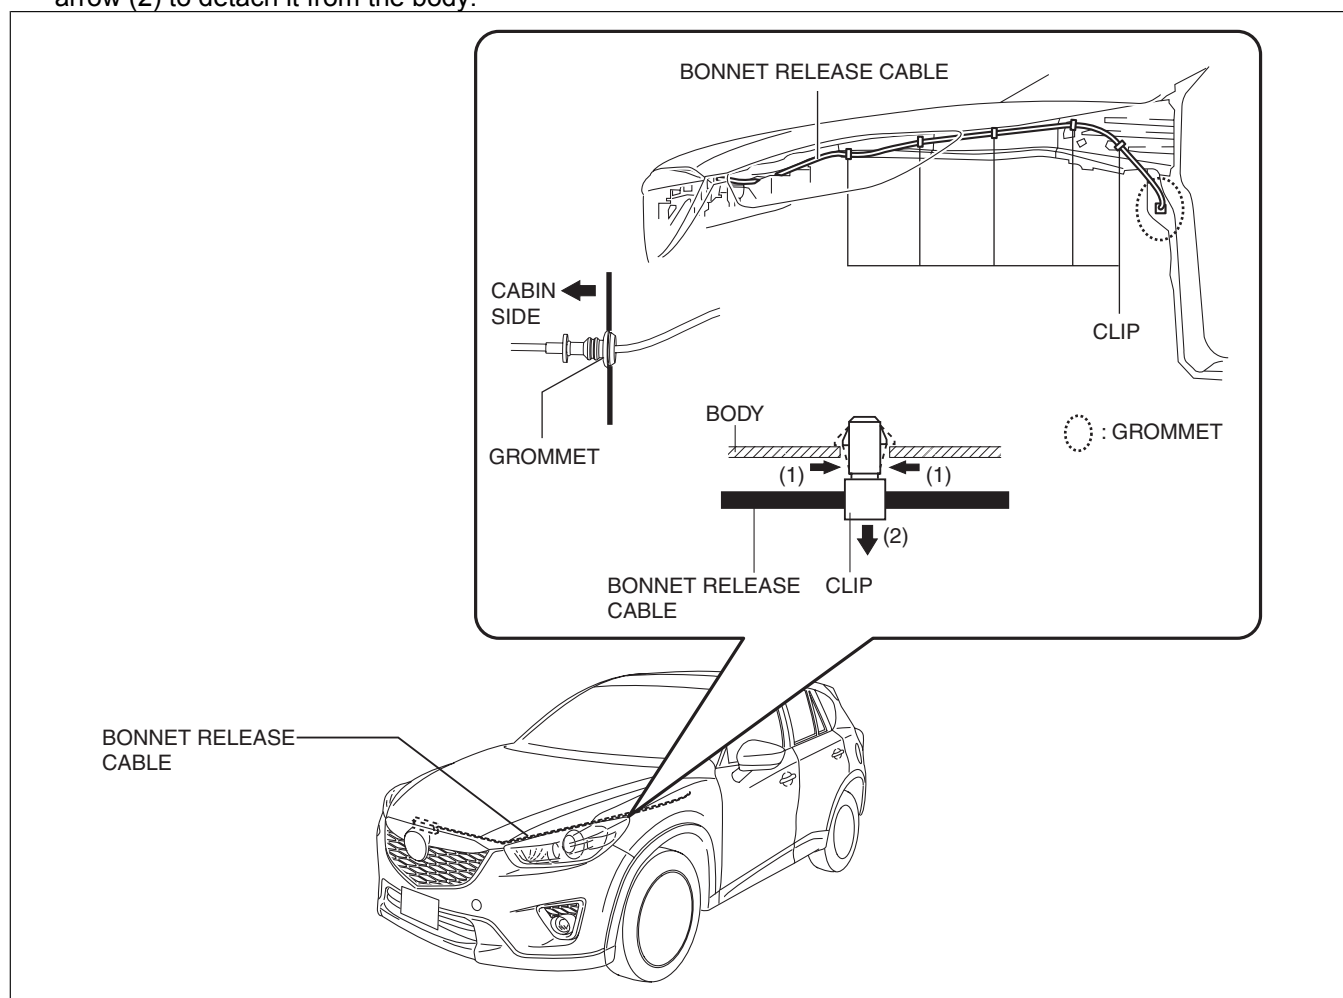

5. Remove the clip from the body.
6. Press the grommet into the cabin side.
7. Remove the bonnet release cable from the cabin side.
8. Install in the reverse order of removal.

ac5wzw00000691