

CARGO COMPARTMENT LIGHT BULB REMOVAL/INSTALLATION

id091800807800

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)


Caution

- Always disconnect the negative battery cable before performing the cargo compartment light bulb removal. Otherwise, the circuit may be shorted resulting in damage to the related parts such as the rear body control module (RBCM).

2. To prevent scratches or damage, affix protective tape to the position shown in the figure.


Caution

- If a flathead screwdriver is inserted into the gap between the cargo compartment light and trunk side trim, the trunk side trim could interfere with the flathead screwdriver and be damaged. When removing the cargo compartment light from the trunk side trim, perform the procedure after affixing protective tape to the trunk side trim.

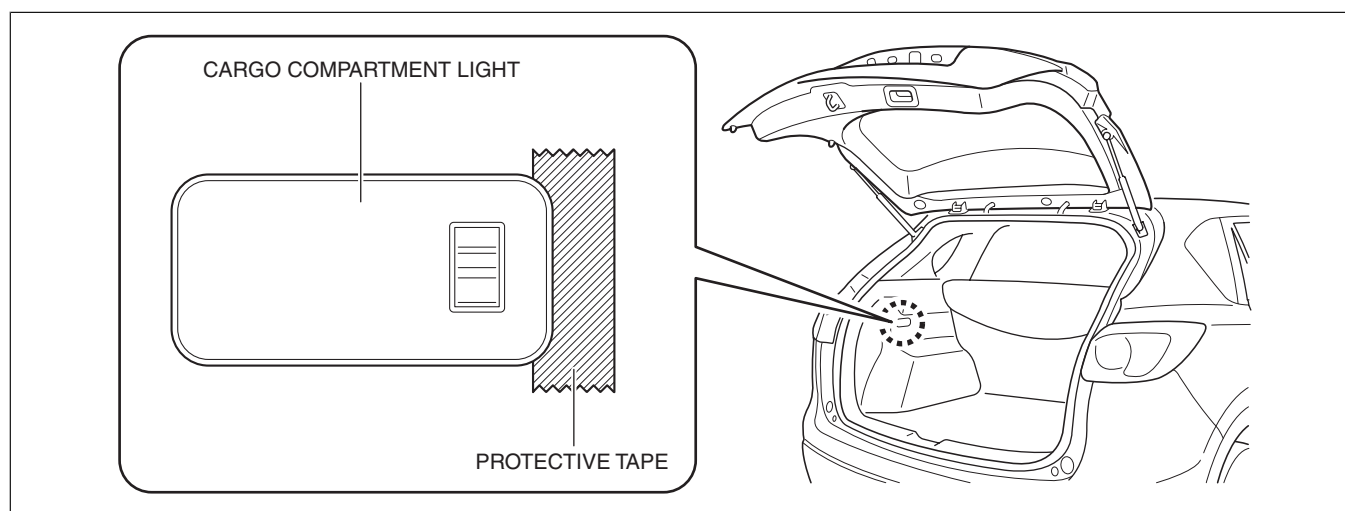


ac5wzw00000039

3. Insert a tape-wrapped flathead screwdriver into the gap between the cargo compartment light and trunk side trim shown in the figure.

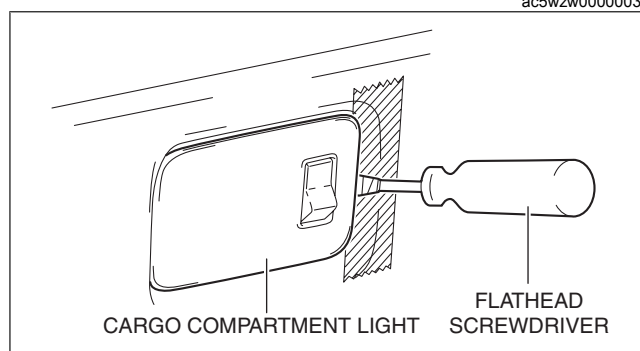


ac5wzw00000041

4. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, pull out the cargo compartment light from the trunk side trim, and detach the cargo compartment light tab and trunk side trim.

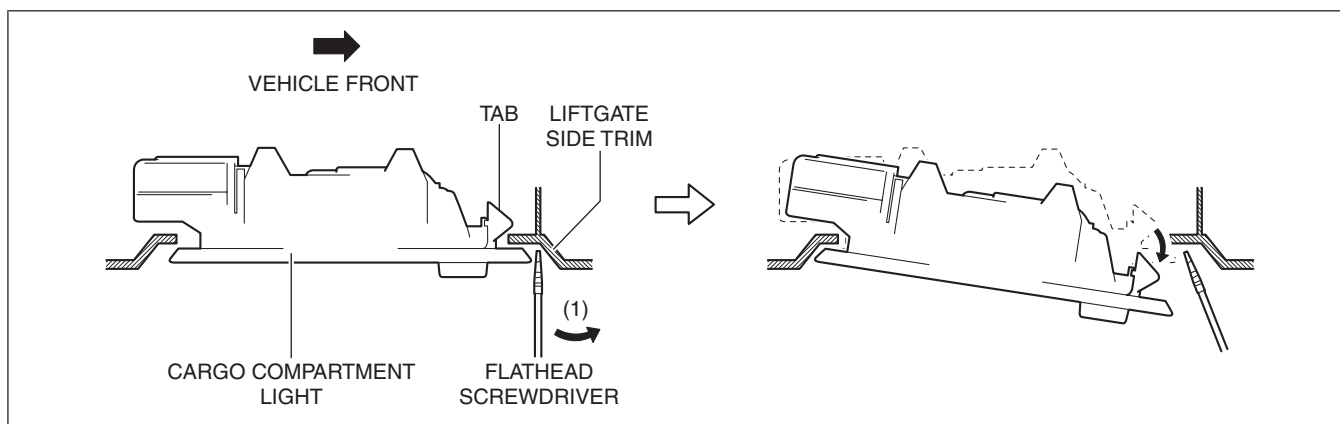


ac5wzw00000040

5. Remove the cargo compartment light.

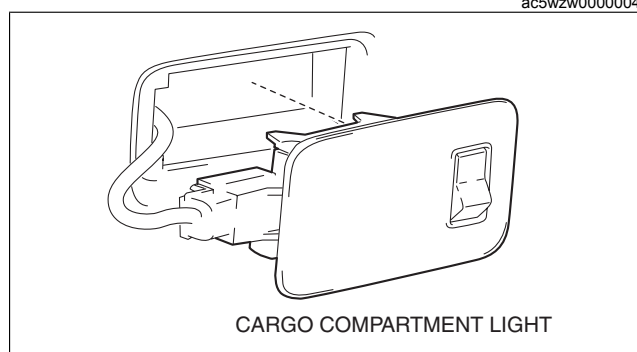


ac5wzw000000464

6. Press the cargo compartment light spring in the direction of the arrow (2) shown in the figure and detach it and the cargo compartment light bulb.

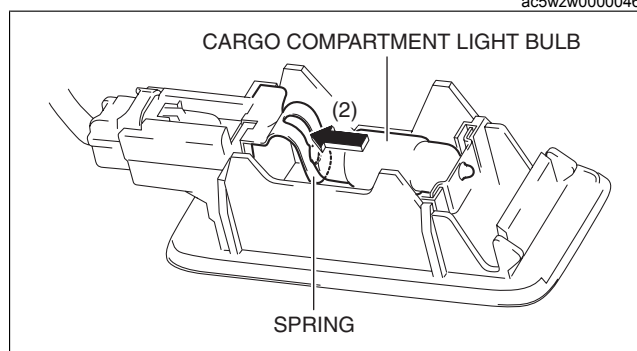

ac5wzw00001196

7. Remove the cargo compartment light bulb.
8. Install in the reverse order of removal.

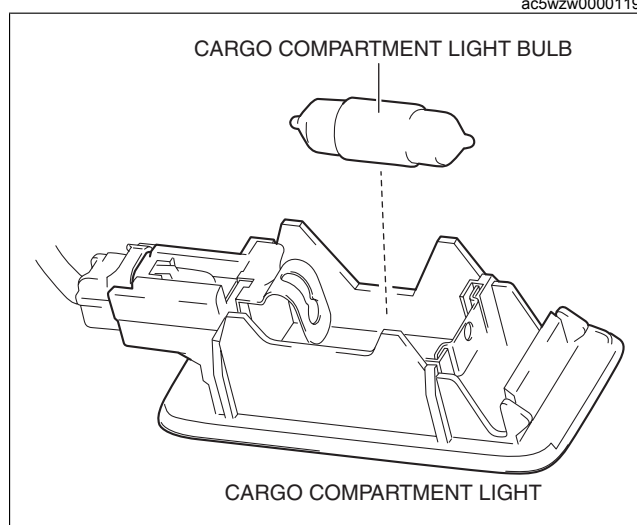

ac5wzw00000043