

RVM WARNING INDICATOR LIGHT


id092200030100

Purpose

- The RVM warning indicator light notifies the driver that vehicles are approaching from the rear.

Function


- If there is an approaching vehicle in the detection area of the rear vehicle monitoring control module, the RVM warning indicator light illuminates. If the driver tries to change lanes to the side of the approaching vehicle, the indicator light flashes.
- The RVM warning light flashing pattern is as indicated in the figure.

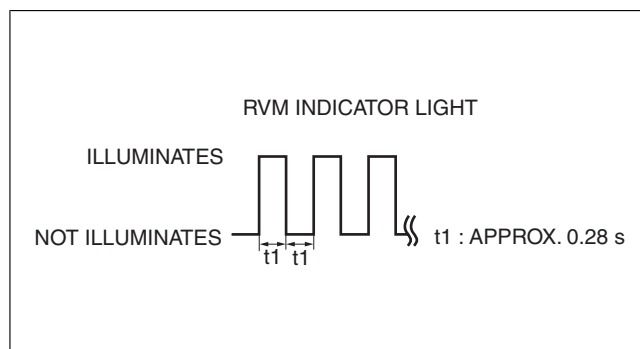

ac5wzn00001444

Construction

- The RVM warning indicator lights are equipped in the left and right heater outer mirrors.
- LEDs with low-power consumption and high durability have been adopted for the RVM warning indicator light.

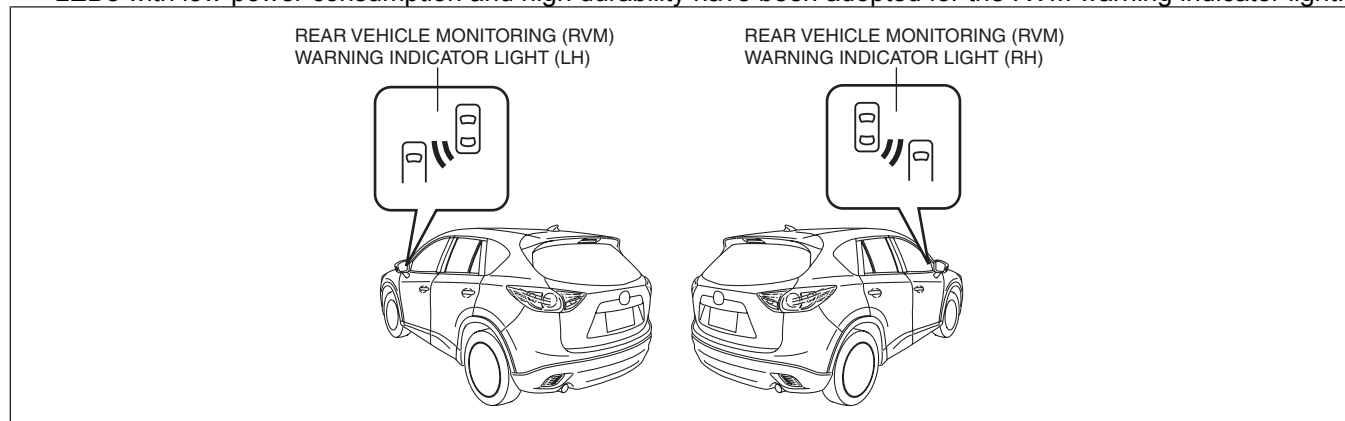

ac5wzn00001445

- For details on the RVM warning indicator light illumination/flashing/off conditions, refer to REAR VEHICLE MONITORING SYSTEM.

Operation

- For the RVM warning indicator light operation, refer to the REAR VEHICLE MONITORING SYSTEM.

Fail-safe

- Function not equipped.