

DOOR LOCK-LINK SWITCH INSPECTION

id091400511500


Front Door Lock-link Inspection

1. Perform the front door glass preparation. (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
2. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
3. Remove the following parts:
 - (1) Inner garnish (See INNER GARNISH REMOVAL/INSTALLATION.)
 - (2) Front door trim (See FRONT DOOR TRIM REMOVAL/INSTALLATION.)
 - (3) Front door glass (See FRONT DOOR GLASS REMOVAL/INSTALLATION.)
 - (4) Front door module panel (See FRONT DOOR MODULE PANEL REMOVAL/INSTALLATION.)
 - (5) Front door key cylinder (See FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.)
 - (6) Front door latch and lock actuator (See FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
4. When the door lock-link switch cable is pulled or pressed in, verify that the continuity is as indicated in the table.

○—○ : CONTINUITY

LOCK KNOB POSITION	TERMINAL		
	LH:D RH:J	LH:J RH:D	LH:B RH:L
LOCK	○—○		
UNLOCK		○—○	○—○

am3uuw00004540

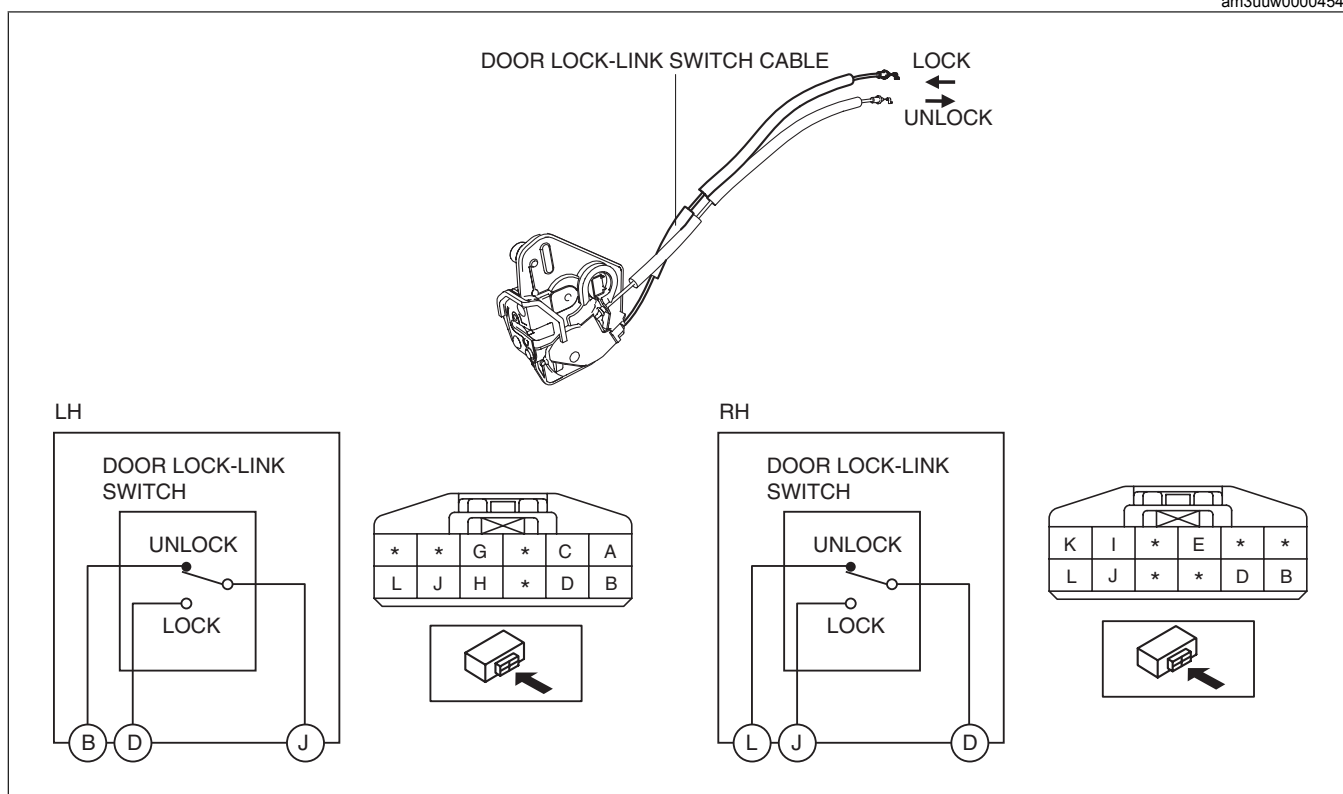

ac5wzw00000707

- If not as indicated in the table, replace the front door latch and lock actuator.

Rear Door Lock-link Inspection


1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
 - (1) Rear door trim (See REAR DOOR TRIM REMOVAL/INSTALLATION.)

- (2) Rear inner handle (See INNER HANDLE REMOVAL/INSTALLATION.)
- (3) Rear door latch and lock actuator (See REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION.)
3. If the door lock condition is to be inspected, pull the door lock-link switch cable, or press it in.
4. Verify that the continuity is as indicated in the table.

○—○ : CONTINUITY

LOCK KNOB POSITION	TERMINAL		
	LH:D RH:J	LH:J RH:D	LH:B RH:L
LOCK	○—○		
UNLOCK		○—○	○—○

am3uuw00004540

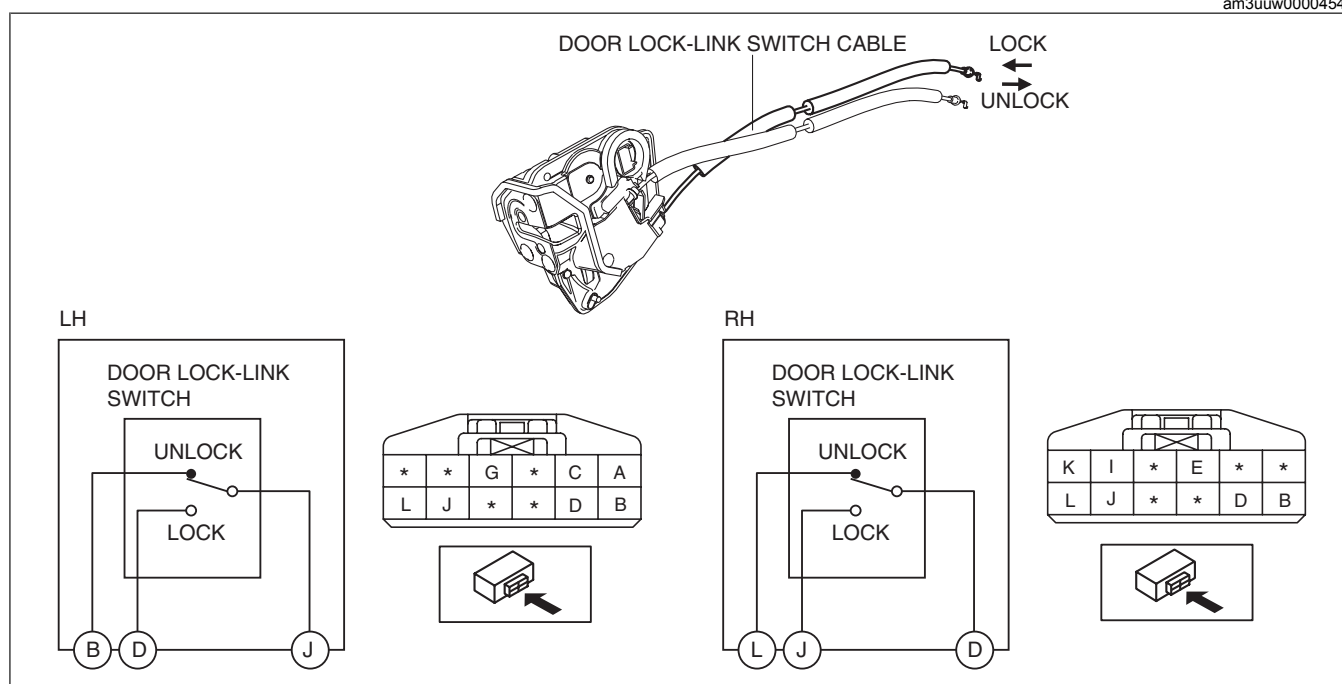

ac5wzw00000708

- If not as indicated in the table, replace the rear door latch and lock actuator.