
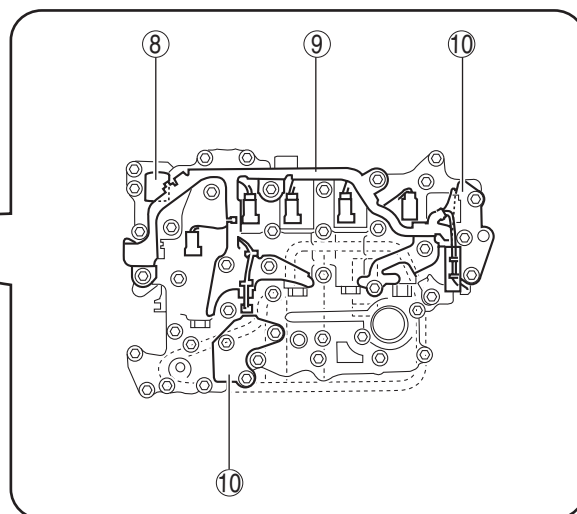




AUTOMATIC TRANSAXLE LOCATION INDEX [FW6A-EL, FW6AX-EL]

id0517h2118200

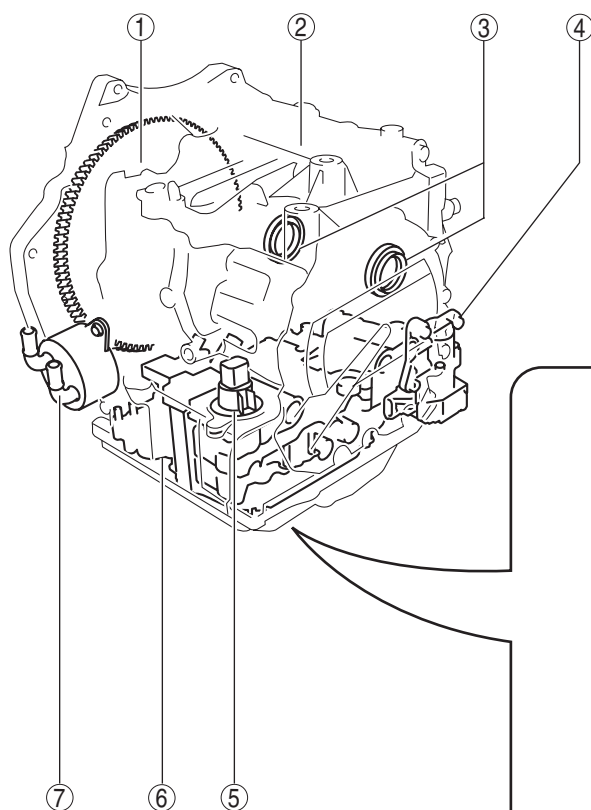

L.H.D.

R.H.D.

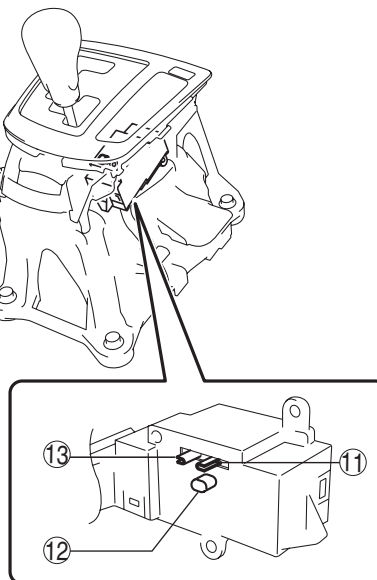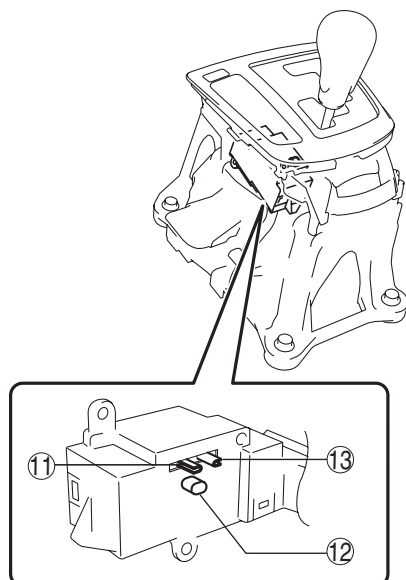

ac5wzw00006124

- 1 Drive plate
(See DRIVE PLATE REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)

- 2 Automatic transaxle
(See MECHANICAL SYSTEM TEST [FW6A-EL, FW6AX-EL].)
(See ROAD TEST [FW6A-EL, FW6AX-EL].)
(See AUTOMATIC TRANSAXLE FLUID (ATF) INSPECTION [FW6A-EL, FW6AX-EL].)
(See AUTOMATIC TRANSAXLE FLUID (ATF) REPLACEMENT [FW6A-EL, FW6AX-EL].)
(See AUTOMATIC TRANSAXLE FLUID (ATF) ADJUSTMENT [FW6A-EL, FW6AX-EL].)
(See INITIAL LEARNING [FW6A-EL, FW6AX-EL].)
(See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [FW6A-EL].)
(See AUTOMATIC TRANSAXLE REMOVAL/INSTALLATION [FW6AX-EL].)

3	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [FW6A-EL, FW6AX-EL].)
4	Electric AT oil pump (if equipped) (See ELECTRIC AT OIL PUMP REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
5	Oil seal (control valve body) (See OIL SEAL (CONTROL VALVE BODY) REPLACEMENT [FW6A-EL, FW6AX-EL].)
6	Control valve body (See CONTROL VALVE BODY REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].) (See TCM CONFIGURATION [FW6A-EL, FW6AX-EL].)
7	Oil cooler (See OIL COOLER REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
8	ON/OFF solenoid (See ON/OFF SOLENOID REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
9	Coupler component (See COUPLER COMPONENT REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)

10	Oil pressure switch (See OIL PRESSURE SWITCH REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
11	Up switch (See UP SWITCH INSPECTION [FW6A-EL, FW6AX-EL].) (See UP SWITCH REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
12	M position switch (See M POSITION SWITCH INSPECTION [FW6A-EL, FW6AX-EL].) (See M POSITION SWITCH REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)
13	Down switch (See DOWN SWITCH INSPECTION [FW6A-EL, FW6AX-EL].) (See DOWN SWITCH REMOVAL/INSTALLATION [FW6A-EL, FW6AX-EL].)