


QUICK RELEASE CONNECTOR (EMISSION SYSTEM) [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0116zb153000

Purpose, Function


- Serviceability has been improved by the easy disconnection/connection.

Construction

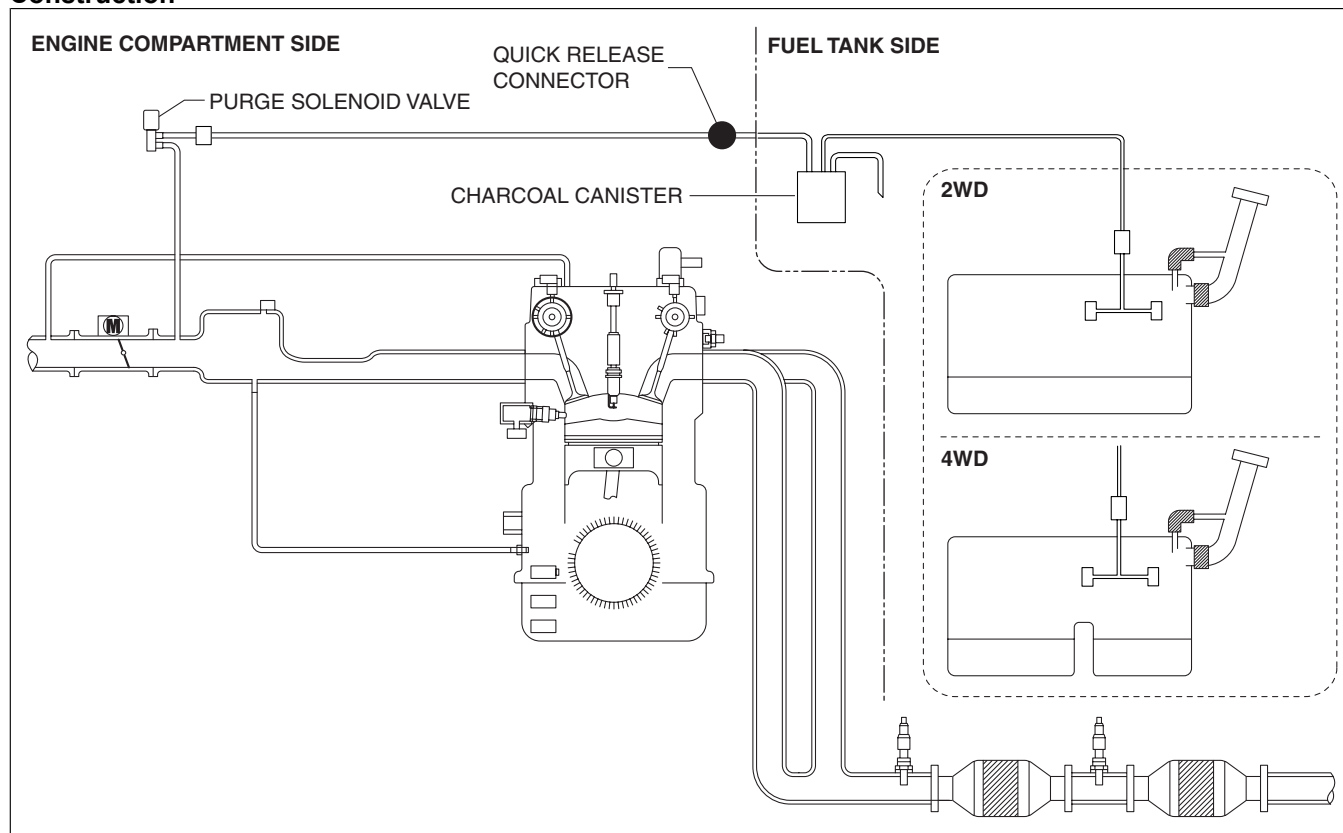

ac5wzn00000343

- An SST is not used with this type.
- Mainly consists of a retainer and O-ring. The quick release connector is integrated with the evaporative hose and therefore cannot be disassembled.
- When the quick release connector is connected, the evaporative pipe projection is locked at the clamp lock point. To release the quick connector lock for each type, follow the procedure in the order shown in each figure.

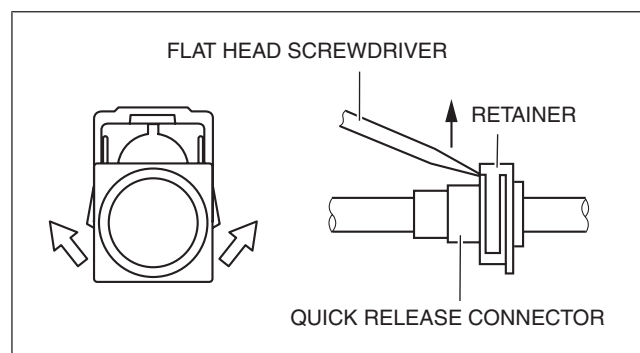

ac5uun00000089