


## CENTER UNDER COVER REMOVAL/INSTALLATION

id091600900200


1. Lift up the vehicle.
2. Remove the floor under cover. (See FLOOR UNDER COVER REMOVAL/INSTALLATION.)
3. Remove bolts.

### 2WD

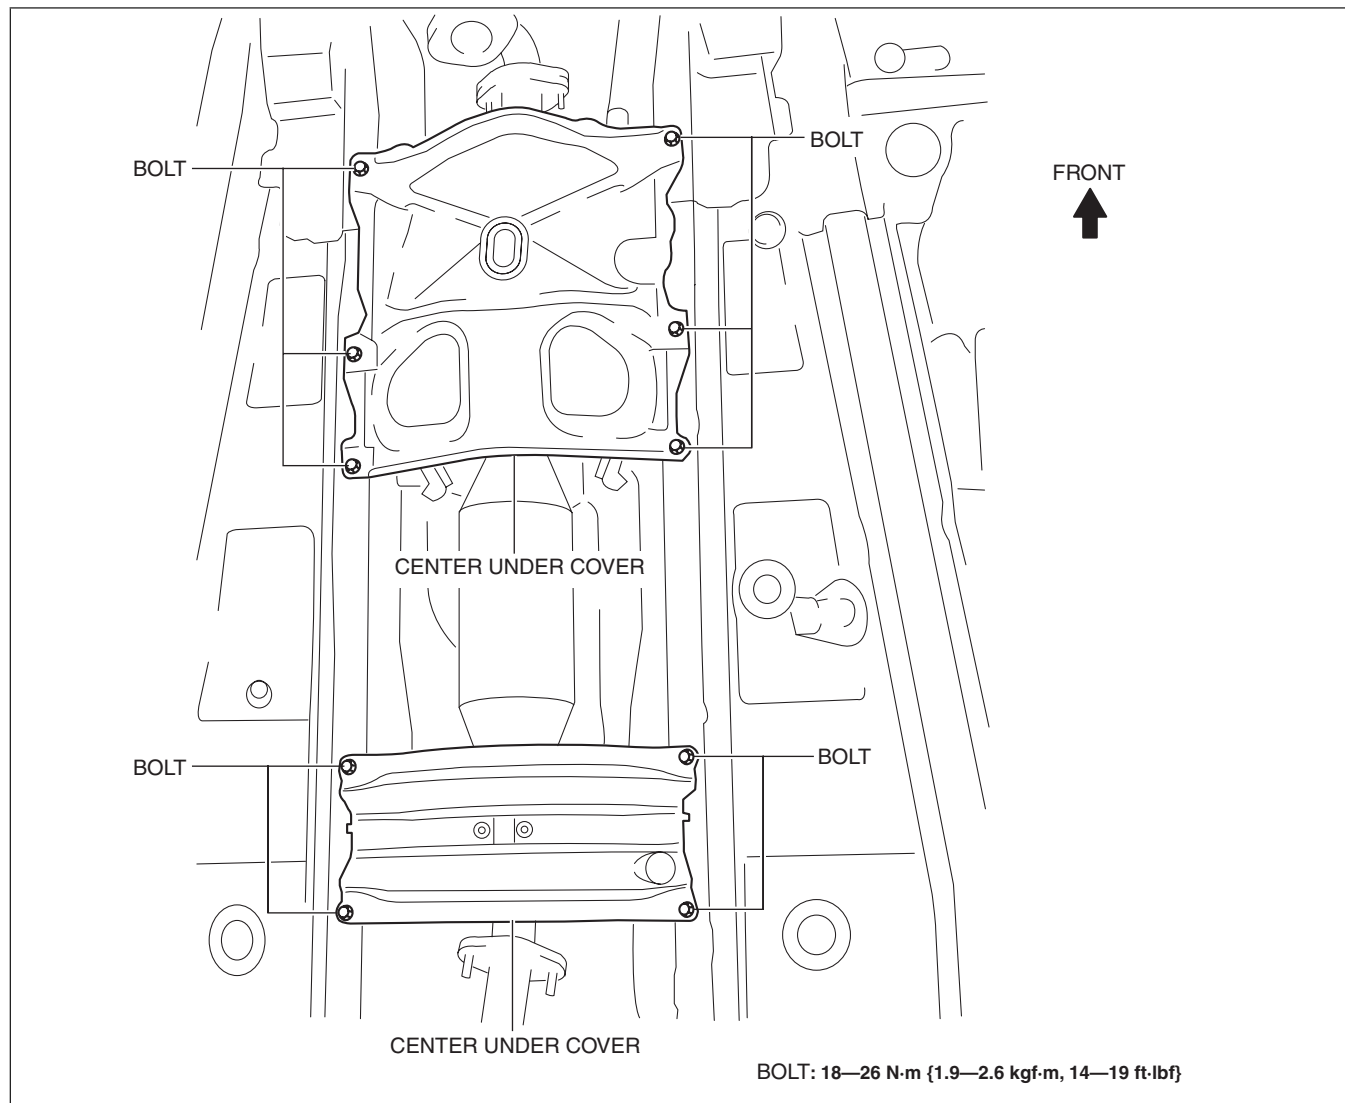

ac5wzw00001293

## 4WD

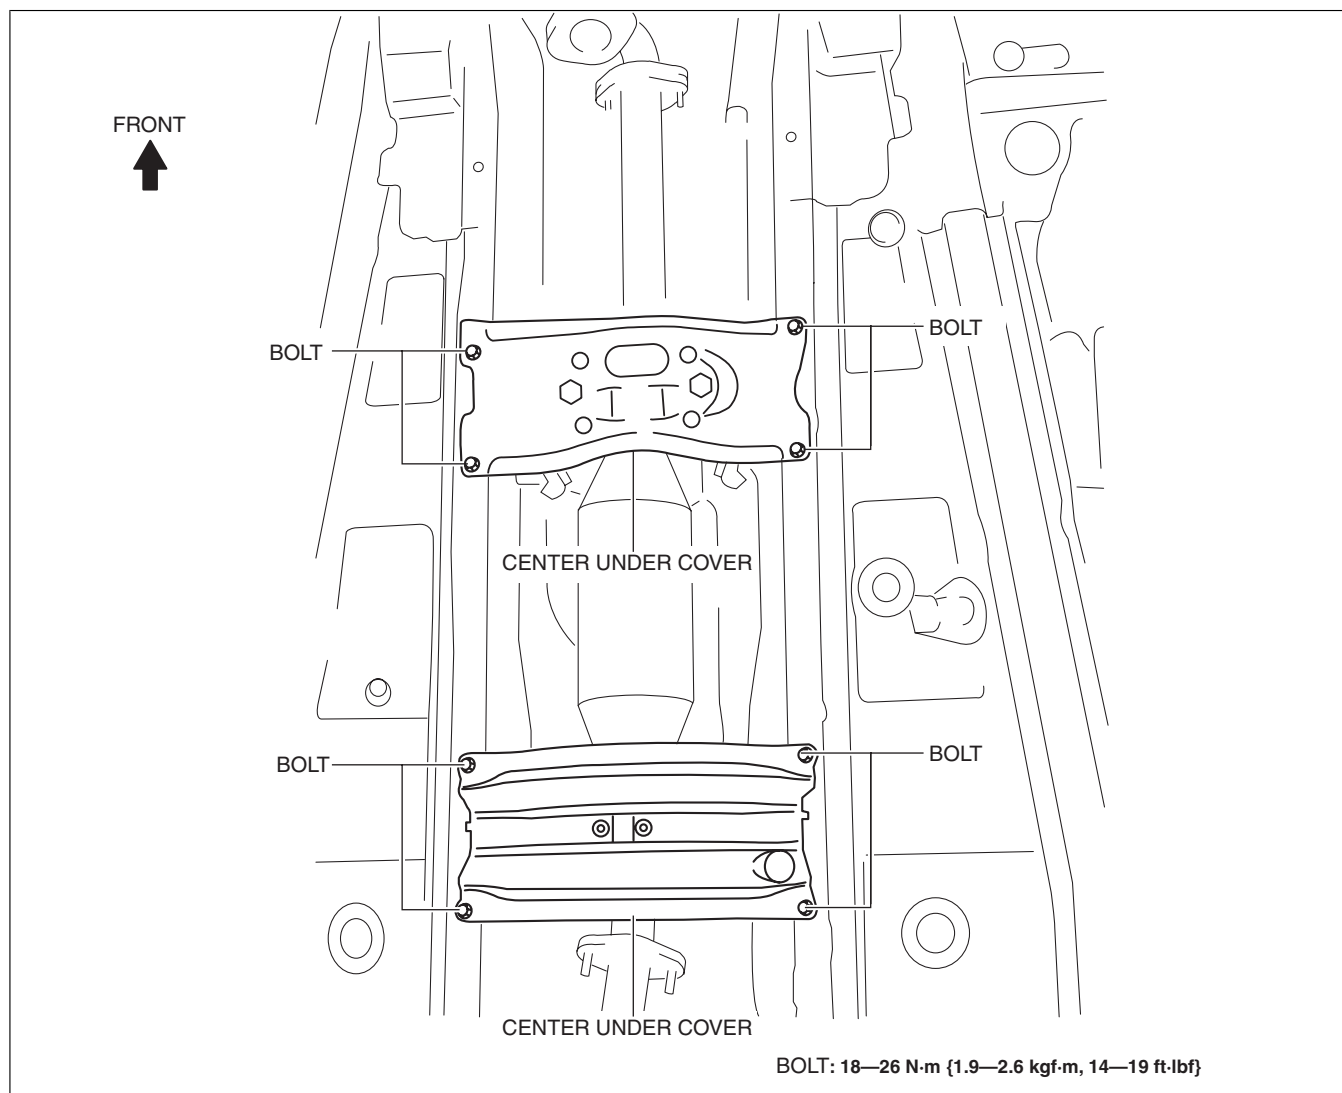

ac5wzw00001294

4. Remove the center under cover.
5. Install in the reverse order of removal.