

EGR COOLER BYPASS VALVE INSPECTION [SKYACTIV-D 2.2]

id0116e1299100


Resistance inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the engine cover. (See ENGINE COVER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Disconnect the EGR cooler bypass connector.
4. Inspect the resistance between EGR cooler bypass valve terminals A and E.

EGR cooler bypass valve resistance (specification)

Other than infinity [20 °C {68 °F}]

- If not within the specification, replace the EGR cooler bypass valve. (See EGR COOLER BYPASS VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

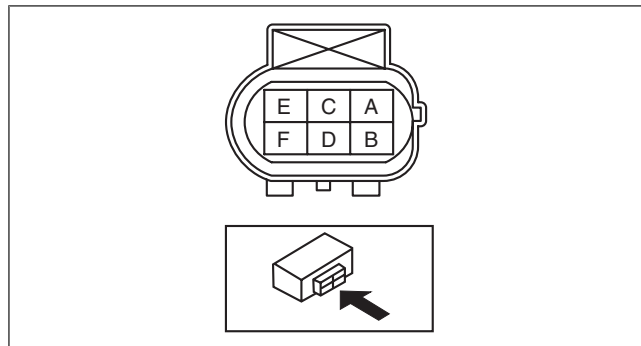

ac5wzw00004763