


## RELAY AND FUSE BLOCK MIDDLE COVER DISASSEMBLY/ASSEMBLY


id092100900100

1. Insert a tape-wrapped flathead screwdriver into the service hole in the position shown in the figure.

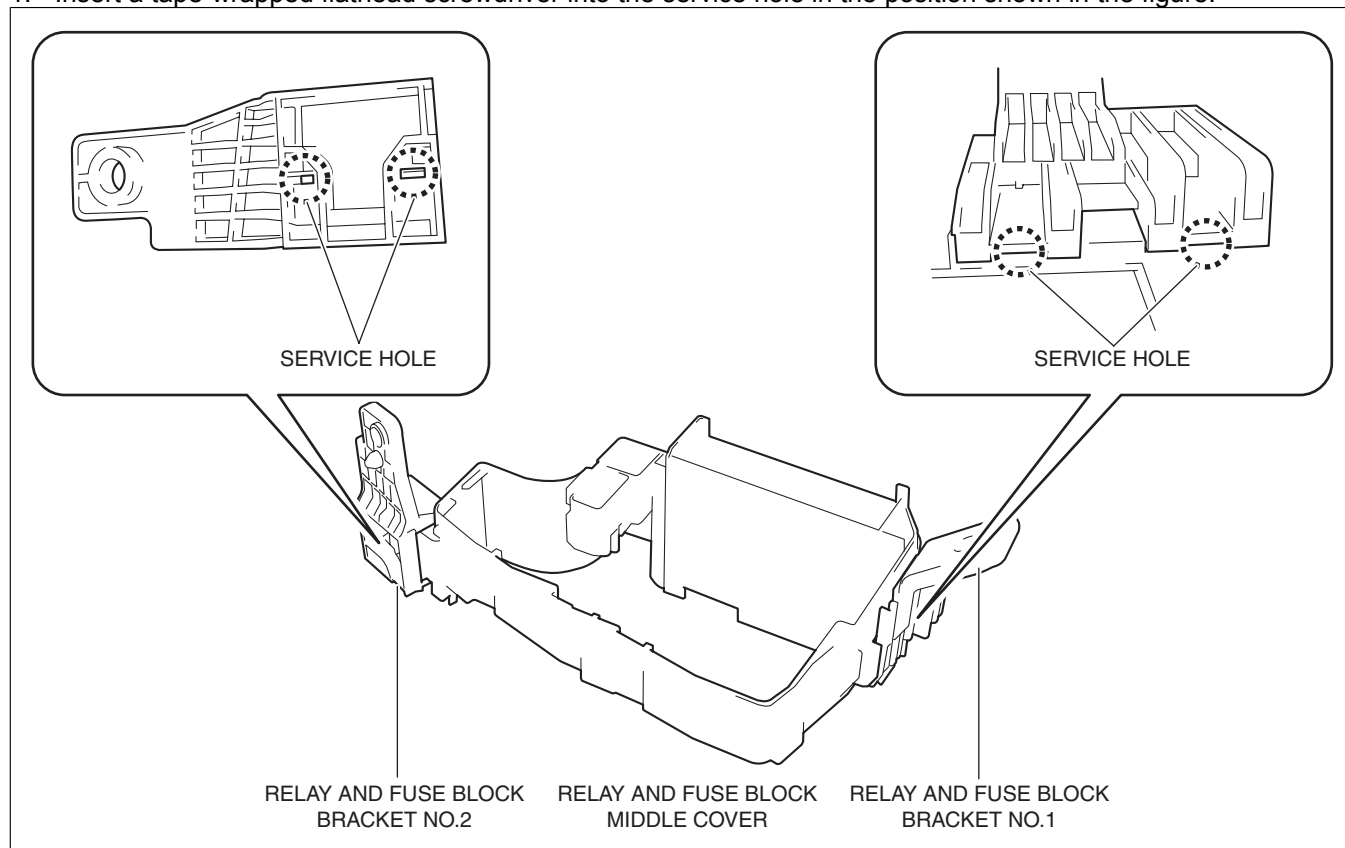

ac5wzw00000539

2. While pressing the relay and fuse block middle cover tab in the direction of arrow (1) shown in the figure, pull out the bracket in the direction of arrow (2) to detach the relay and fuse block middle cover tab from the bracket.

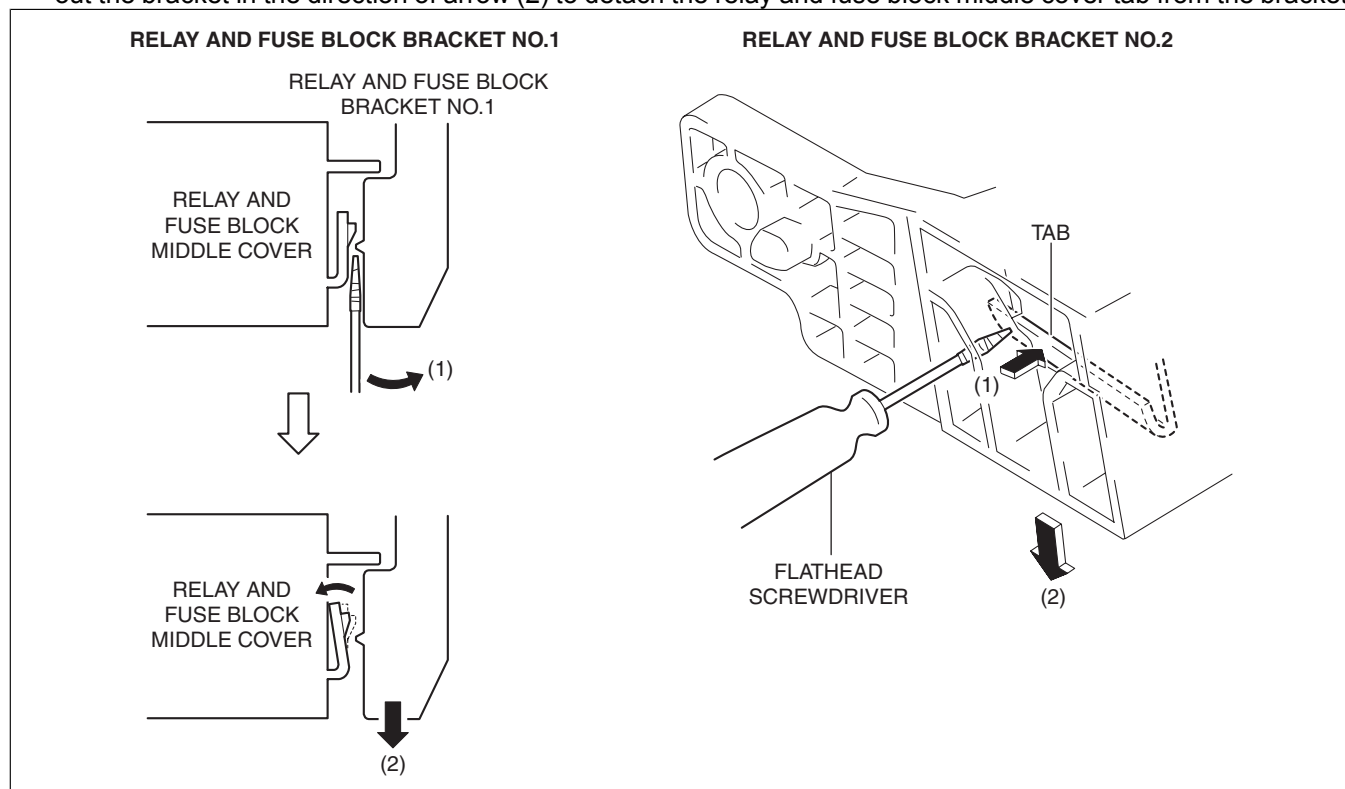

ac5wzw00002876

3. Detach all the relay and fuse block middle cover tabs from the bracket and remove the bracket from the relay and fuse block middle cover.
4. Assemble in the reverse order of disassembly.