

BLOW-BY HEATER INSPECTION [SKYACTIV-D 2.2]


id0140z7446500

Resistance Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Disconnect the blow-by heater connector. (See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Measure the resistance between the blow-by heater terminals A and B.
 - If not as specified, replace the blow-by heater.
(See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

Specification (Reference)

4.5—7.5 ohms [normal temperature]

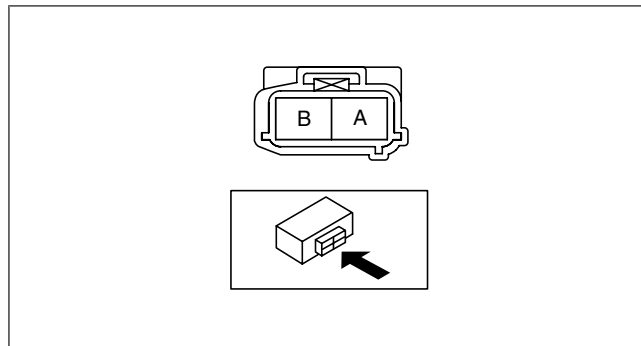

ac5wzw00006398