


REAR SUSPENSION LOCATION INDEX


id021400800400

2WD

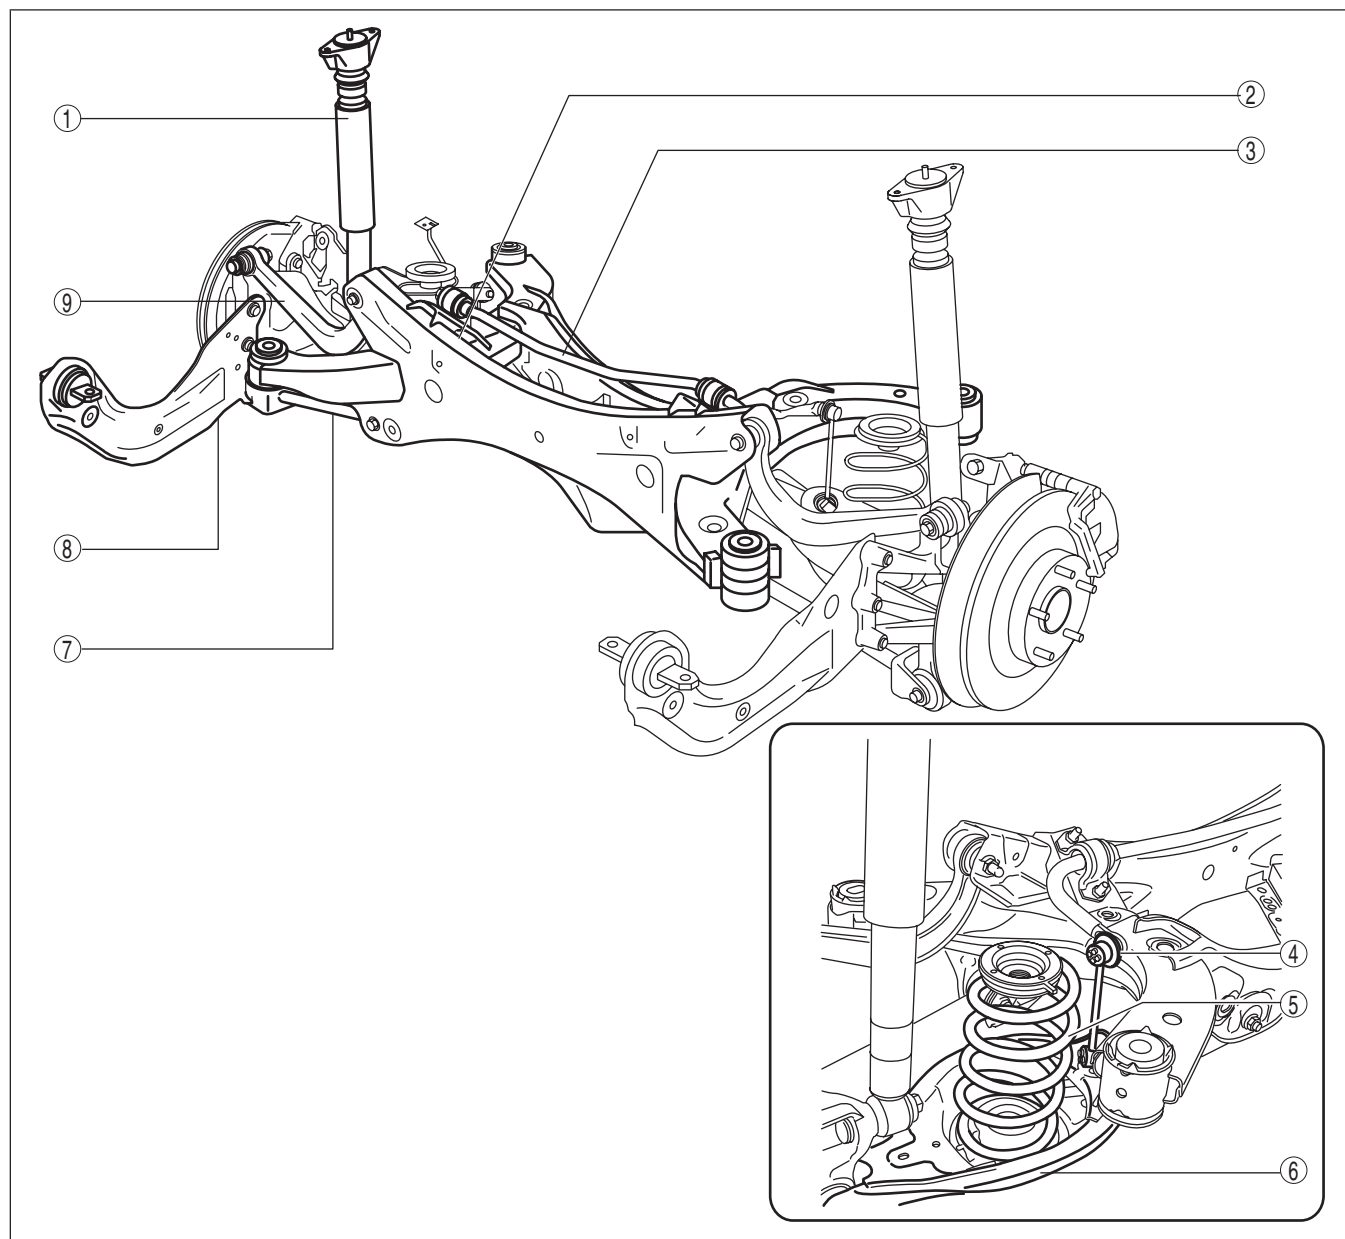

ac5uuw00000144

4WD

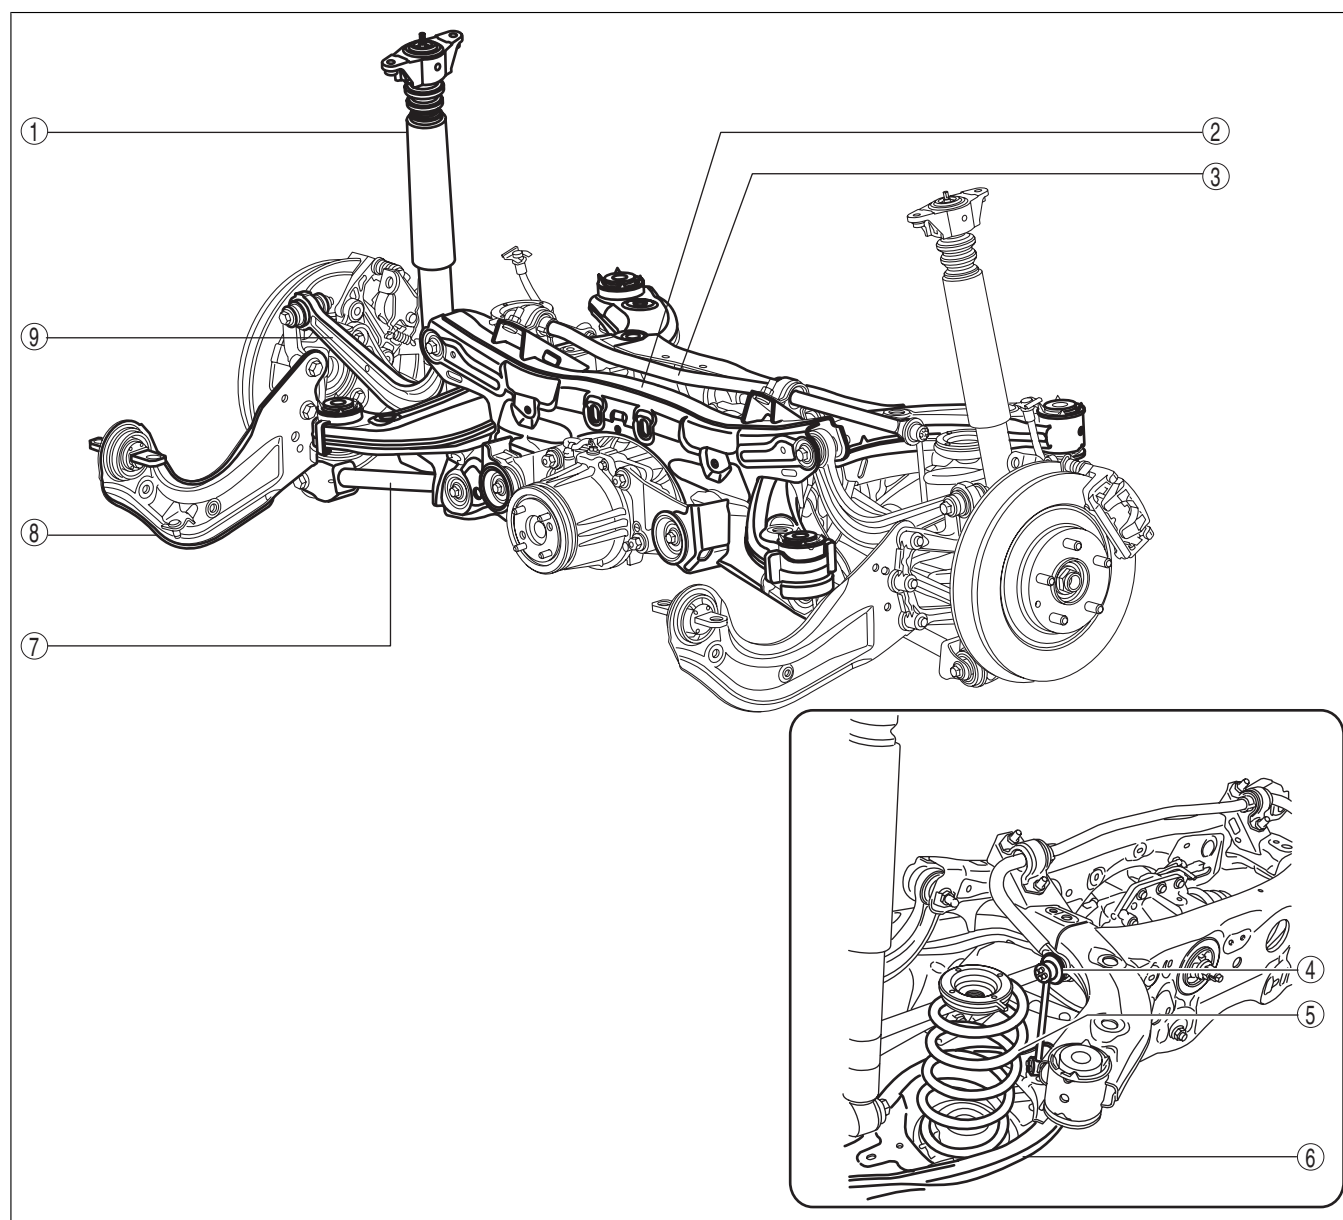

ac5uuw00000145

1	Rear shock absorber (See REAR SHOCK ABSORBER REMOVAL/ INSTALLATION.) (See REAR SHOCK ABSORBER INSPECTION.) (See REAR SHOCK ABSORBER DISPOSAL.)
2	Rear crossmember (See REAR CROSSMEMBER REMOVAL/ INSTALLATION [2WD].) (See REAR CROSSMEMBER REMOVAL/ INSTALLATION [4WD].)
3	Rear stabilizer (See REAR STABILIZER CONTROL LINK INSPECTION.)
4	Rear stabilizer control link (See REAR STABILIZER REMOVAL/ INSTALLATION [2WD].) (See REAR STABILIZER REMOVAL/ INSTALLATION [4WD].)

5	Rear coil spring (See REAR COIL SPRING REMOVAL/ INSTALLATION.)
6	Rear lower arm (See REAR LOWER ARM REMOVAL/ INSTALLATION.)
7	Rear lateral link (See REAR LATERAL LINK REMOVAL/ INSTALLATION.)
8	Rear trailing link (See REAR TRAILING LINK REMOVAL/ INSTALLATION.)
9	Rear upper arm (See REAR UPPER ARM REMOVAL/ INSTALLATION [2WD].) (See REAR UPPER ARM REMOVAL/ INSTALLATION [4WD].)