


HEADLIGHT CLEANER MOTOR REMOVAL/INSTALLATION


id091900803300

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Partially peel back the front over fender. (See FRONT OVER FENDER REMOVAL/INSTALLATION.)
3. Set the mudguard (RH) aside. (See MUDGUARD REMOVAL/INSTALLATION.)
4. Remove the front bumper. (See FRONT BUMPER REMOVAL/INSTALLATION.)
5. Disconnect the headlight cleaner motor connector.
6. Disconnect the headlight cleaner hose from the headlight cleaner motor.
7. Tilt the upper part of the headlight cleaner motor in the direction of the arrow (1) shown in the figure and remove the headlight cleaner motor from the washer tank in the direction of the arrow (2).

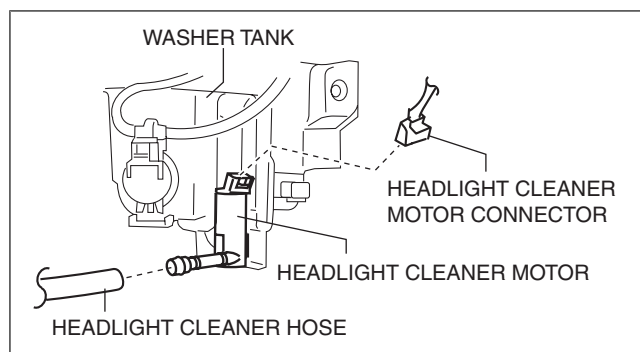

ac5uuw00000822

8. Remove the grommets from the washer tank.

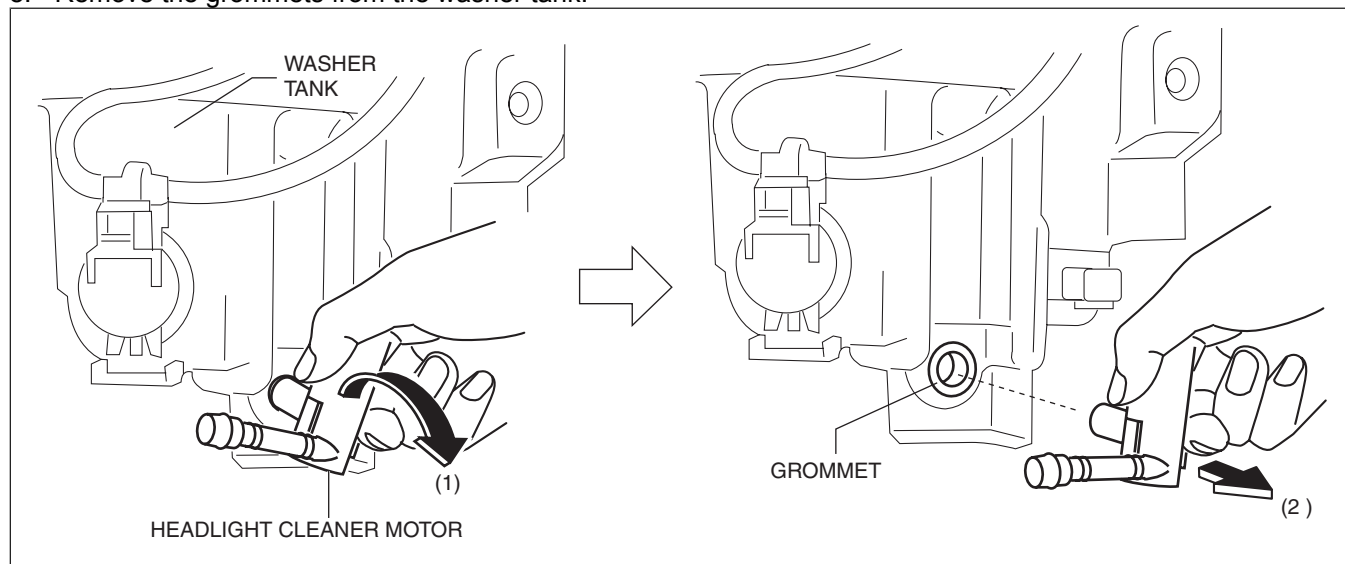

ac5uuw00000823

9. Install in the reverse order of removal.