


REAR ULTRASONIC SENSOR SHORT-CORD REMOVAL/INSTALLATION


id092200031100

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the rear combination light. (See REAR COMBINATION LIGHT REMOVAL/INSTALLATION.)
3. Remove the rear bumper. (See REAR BUMPER REMOVAL/INSTALLATION.)
4. Peel off the tape securing the rear ultrasonic sensor short-cord from the rear bumper.

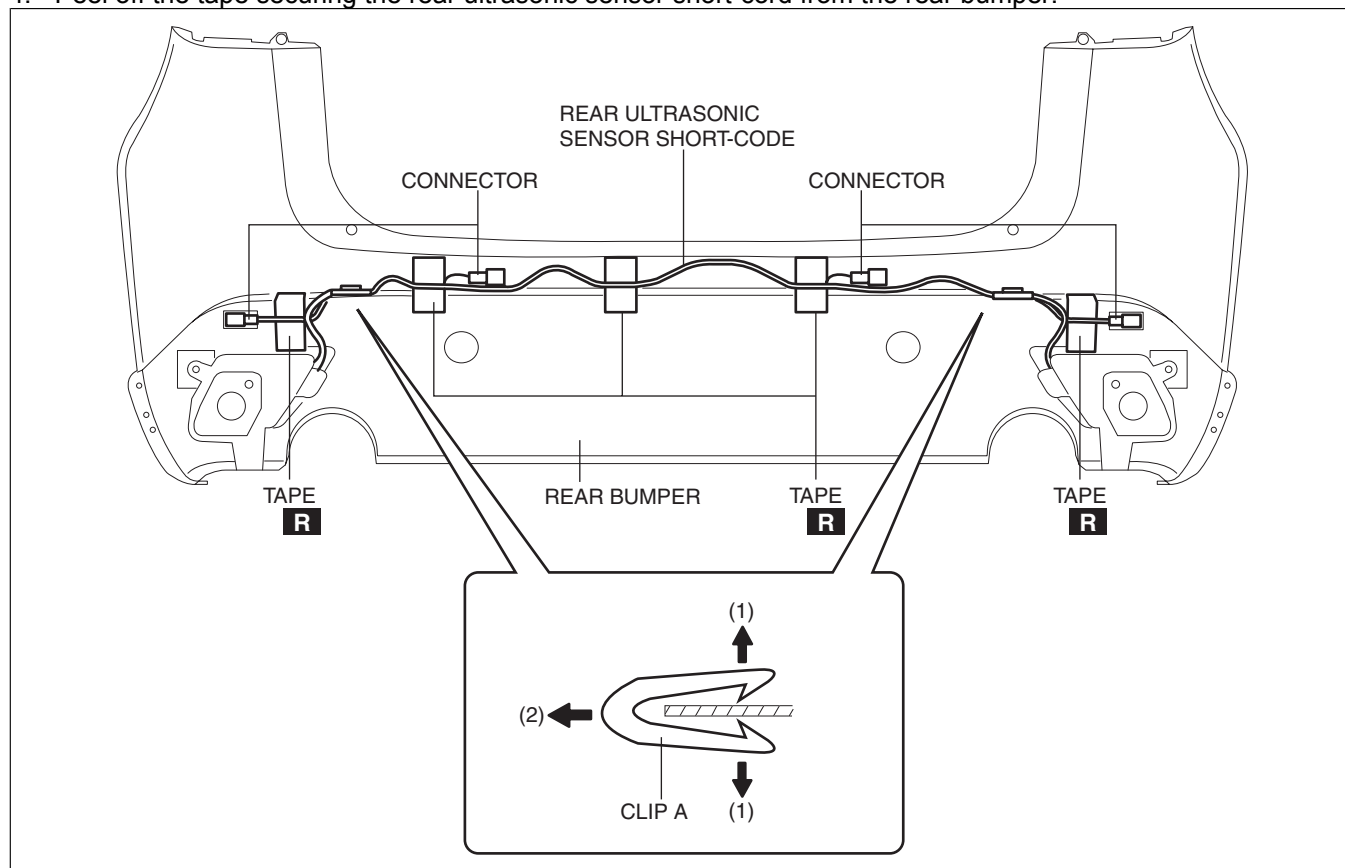

ac5jjw00000649

5. Disconnect the connector from the rear ultrasonic sensor.
6. Pull clip A in the direction of the arrow (2) shown in the figure while pressing the tab of clip A in the direction of the arrow (1) shown in the figure, and detach the tab of clip A and rear bumper.
7. Pull clip B in the direction of the arrow (4) shown in the figure while pressing the tab of clip B in the direction of the arrow (3) shown in the figure, detach the tab of clip B and front bumper, and remove the rear ultrasonic sensor short-cord.

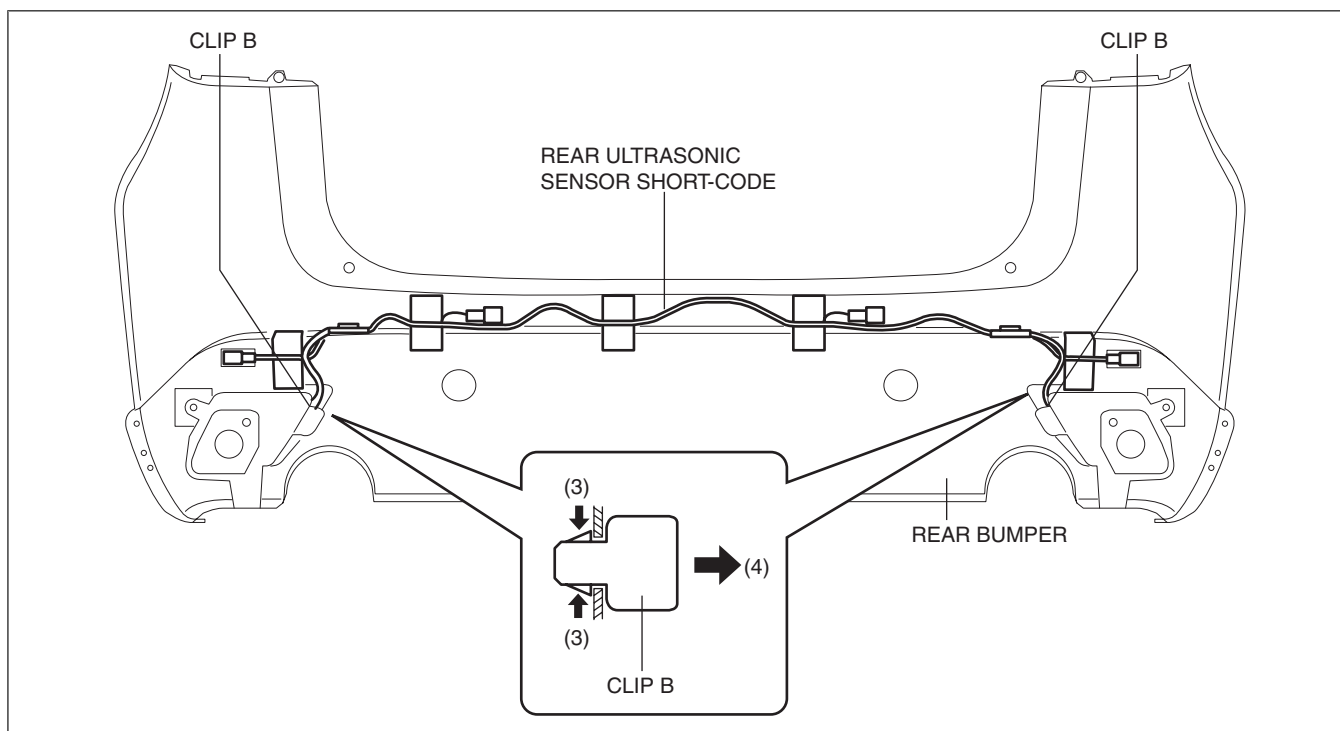


ac5jjw00000520

8. Install in the reverse order of removal. (See Rear Ultrasonic Sensor Short-cord Installation Note.)

Rear Ultrasonic Sensor Short-cord Installation Note

1. Align the height of the rear ultrasonic sensor short-cord with the center of the tape adhering position marking on the rear bumper.

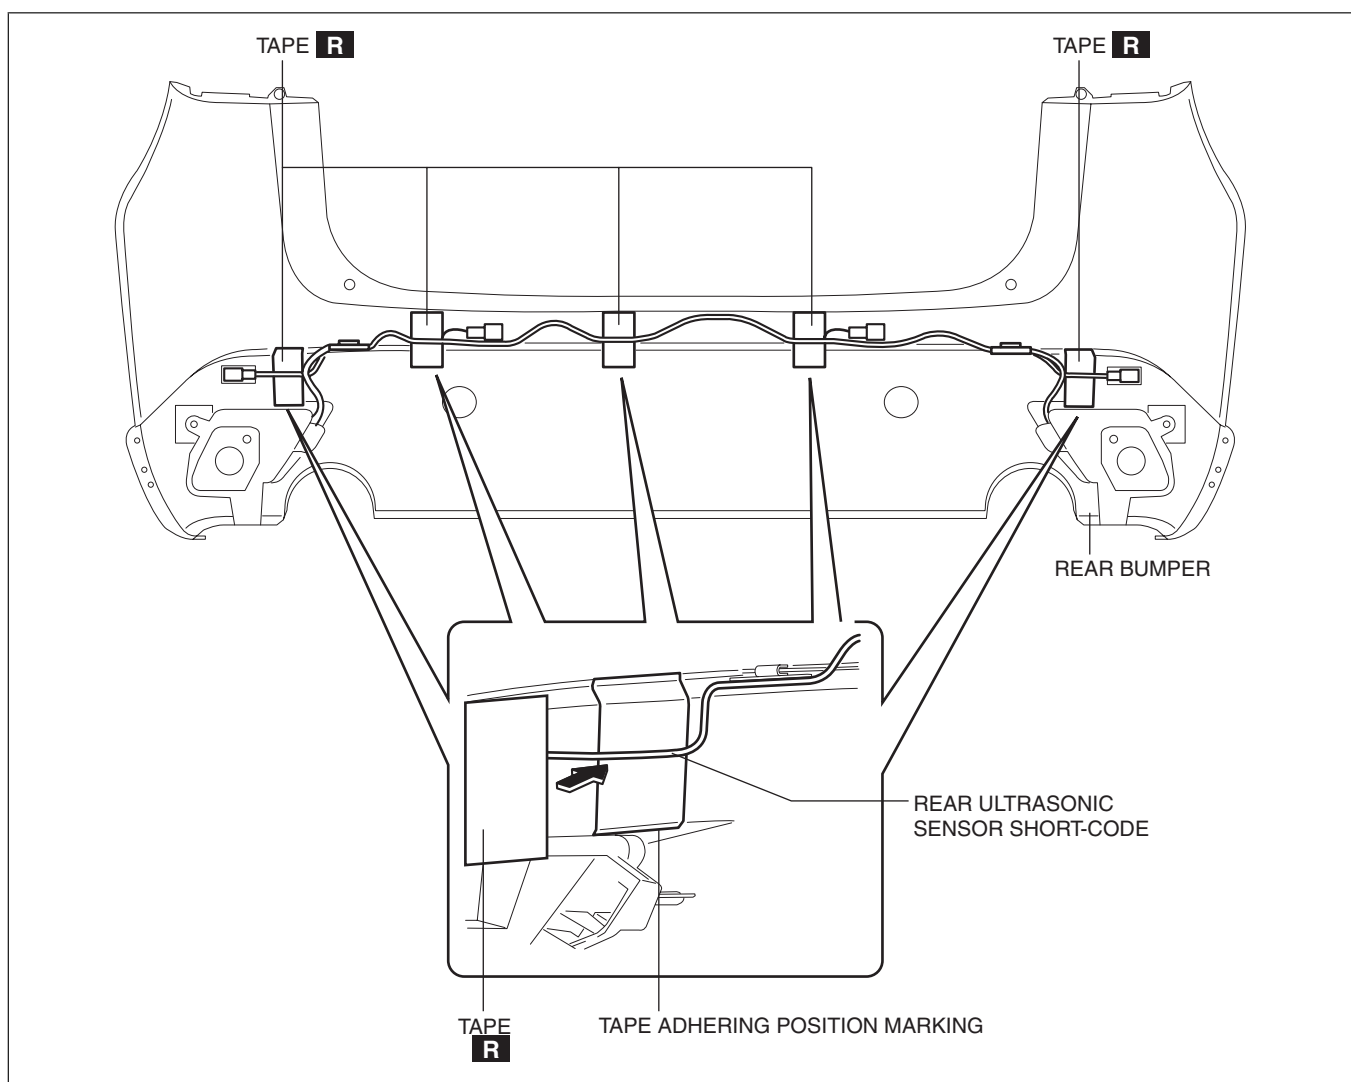

ac5wzw00000890

2. Align the tape with the mark of the tape adhering position marking and adhere the rear ultrasonic sensor short-cord and rear bumper.