


## VACUUM CHAMBER REMOVAL/INSTALLATION [SKYACTIV-D 2.2]

id0113z7265400

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the turbocharger. (See TURBOCHARGER REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Remove in the order shown in the figure.

1	Vacuum hose
2	Vacuum chamber

4. Install in the reverse order of removal.

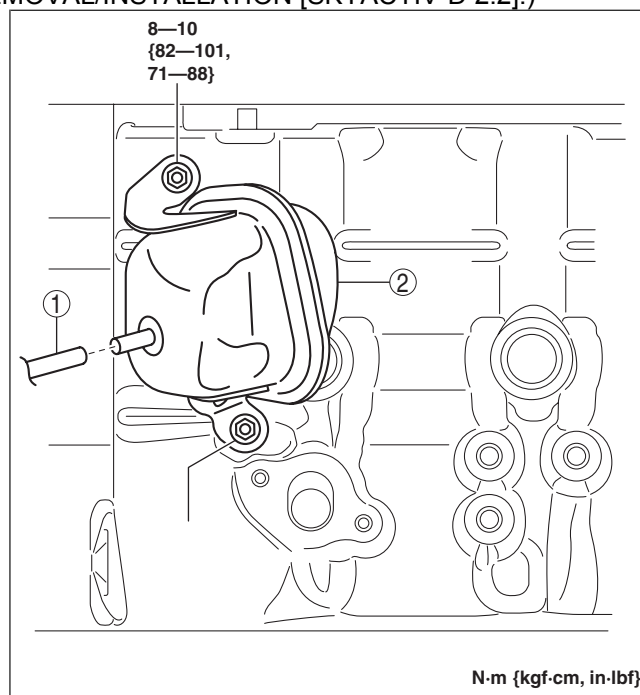

ac5wzw00004893