

R-3-5 BRAKE [GW6A-EL, GW6AX-EL]


id0517i2351400

Purpose/Function

- The R-3-5 brake operates in 3GR, 5GR and in reverse to lock the reduction internal gear against rotation.


Construction

- The R-3-5 brake consists of the following parts shown in the figure.

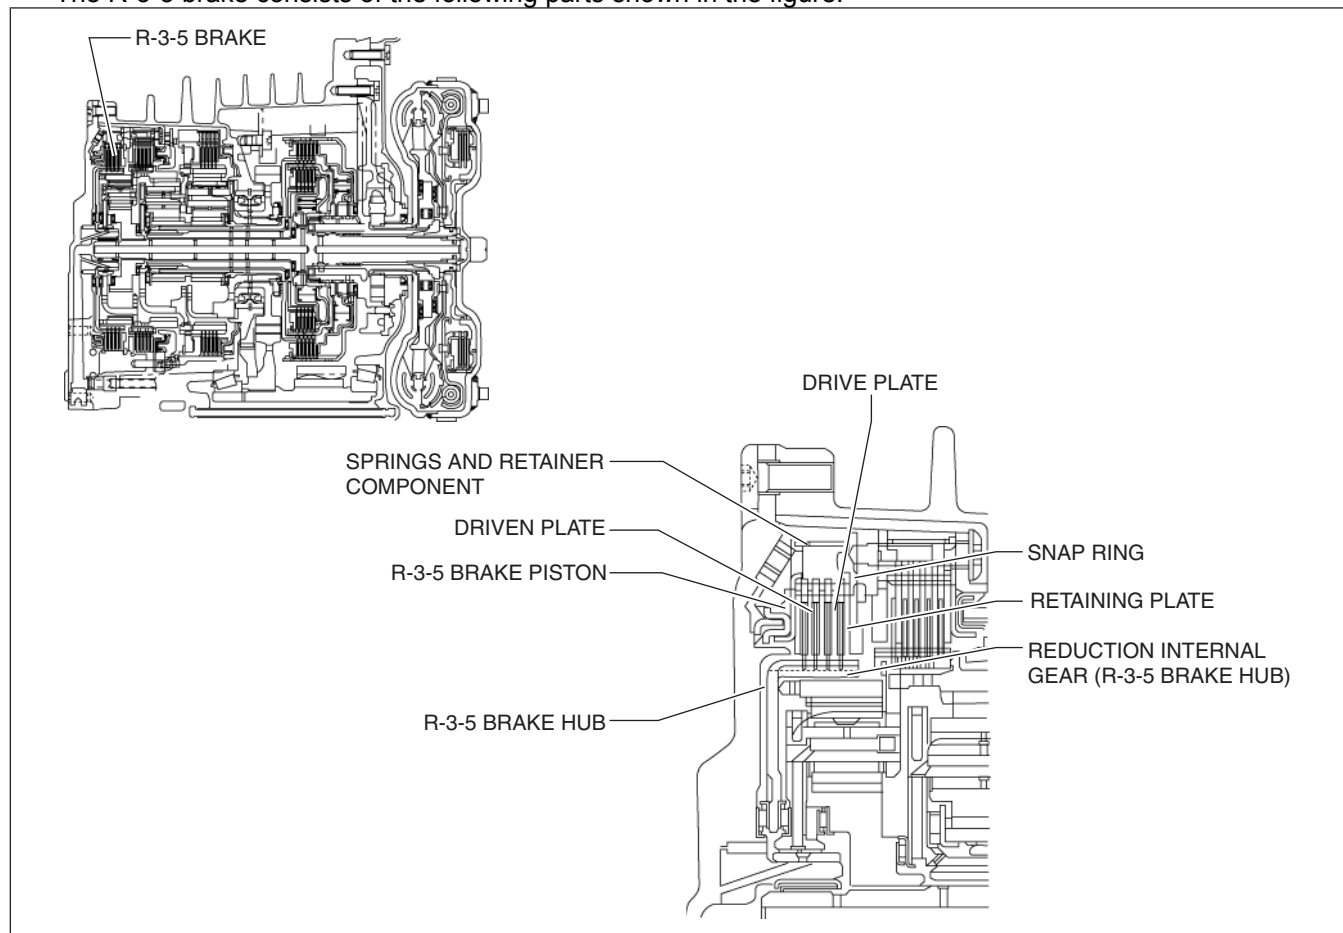


ac5wzn00001691

- The driven plate of the R-3-5 brake does not rotate because it is connected to the end cover component.

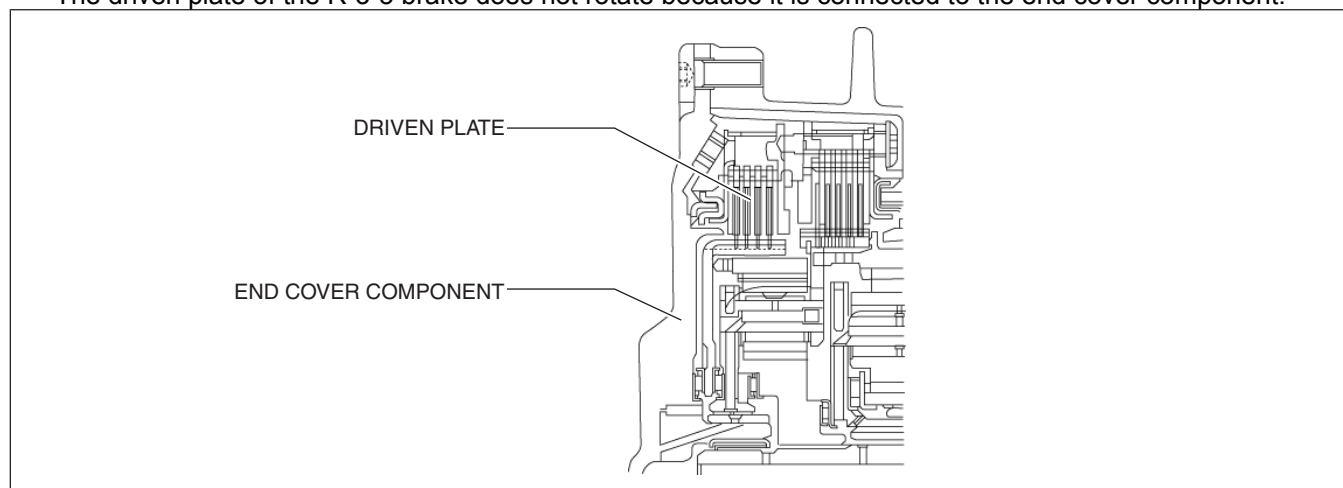

ac5wzn00001692

- The R-3-5 brake drive plate is engaged with the R-3-5 brake hub and reduction internal gear, and locks the reduction internal gear.

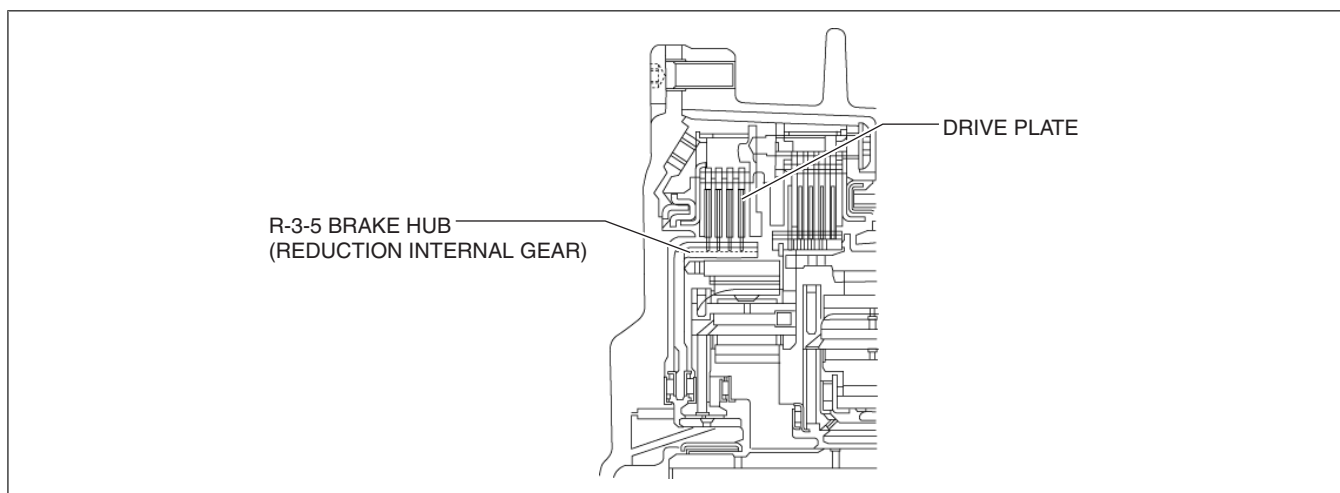


ac5wzn00001693

- For the R-3-5 brake piston, a compact and highly reliable bonded seal piston has been adopted in which the piston and seal are molded together.

Operation

- When hydraulic pressure is applied to the R-3-5 brake piston, the drive plate and driven plate are pressure bonded to lock the reduction internal gear.

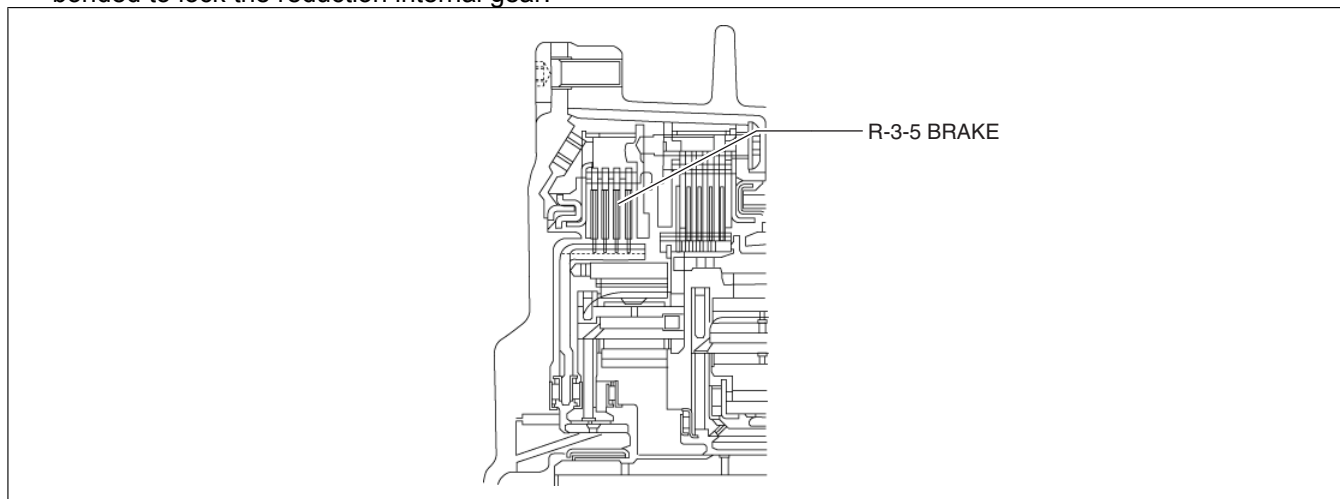

ac5wzn00001694