

THROTTLE BODY INSPECTION [SKYACTIV-G 2.0]

id0113z5802600


Resistance Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0 (WITHOUT i-stop)].)
2. Disconnect the throttle body connector.
3. Measure the resistance between throttle body terminals E and F.

Throttle body resistance

1.38 ohms [20°C {68 °F}]

- If not as specified, replace the throttle body.
(See INTAKE-AIR SYSTEM REMOVAL/INSTALLATION [SKYACTIV-G 2.0].)

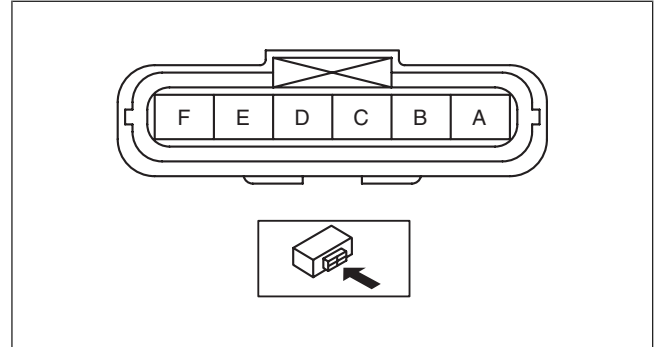

am3uuw00008477