

## REAR CENTER SEAT BELT REMOVAL/INSTALLATION

id081100800900


### Caution

- If the retractor is disassembled, it will not operate correctly due to looseness and excessive play of the internal parts, therefore, do not disassemble the retractor.

### Note

- The rear center seat belt is building into the rear seat back.


1. Press the release switch, then disconnect the rear center seat belt and rear buckle.
2. Remove the rear center seat belt with the rear seat back. (See REAR SEAT BACK REMOVAL/INSTALLATION.)
3. Install in the reverse order of removal. (See Rear Center Seat Belt Installation Note.)

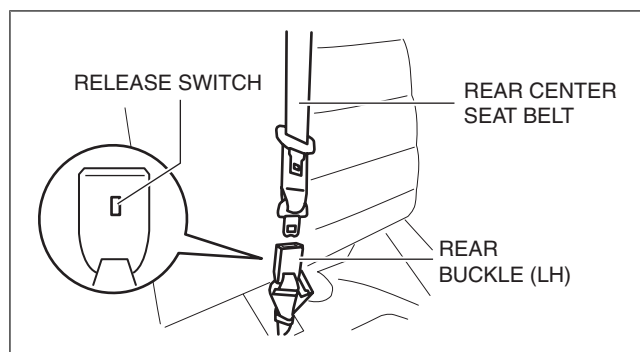

ac5wzw00002070

### Rear Center Seat Belt Installation Note

1. After installing the rear center seat belt, place the release switch of the rear buckle so that it faces the vehicle's inner-side as shown in the figure.

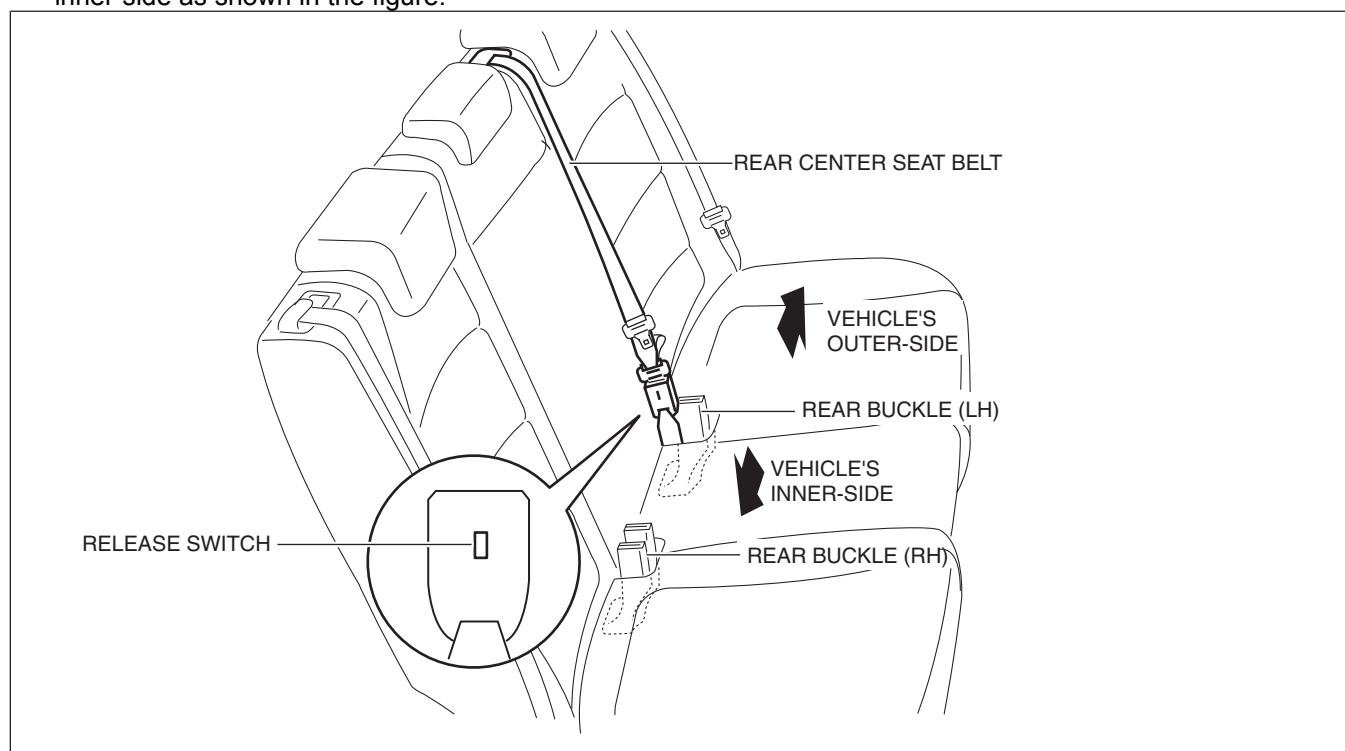

ac5wzw00002786