


ENGINE LOCATION INDEX [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0110h3800100

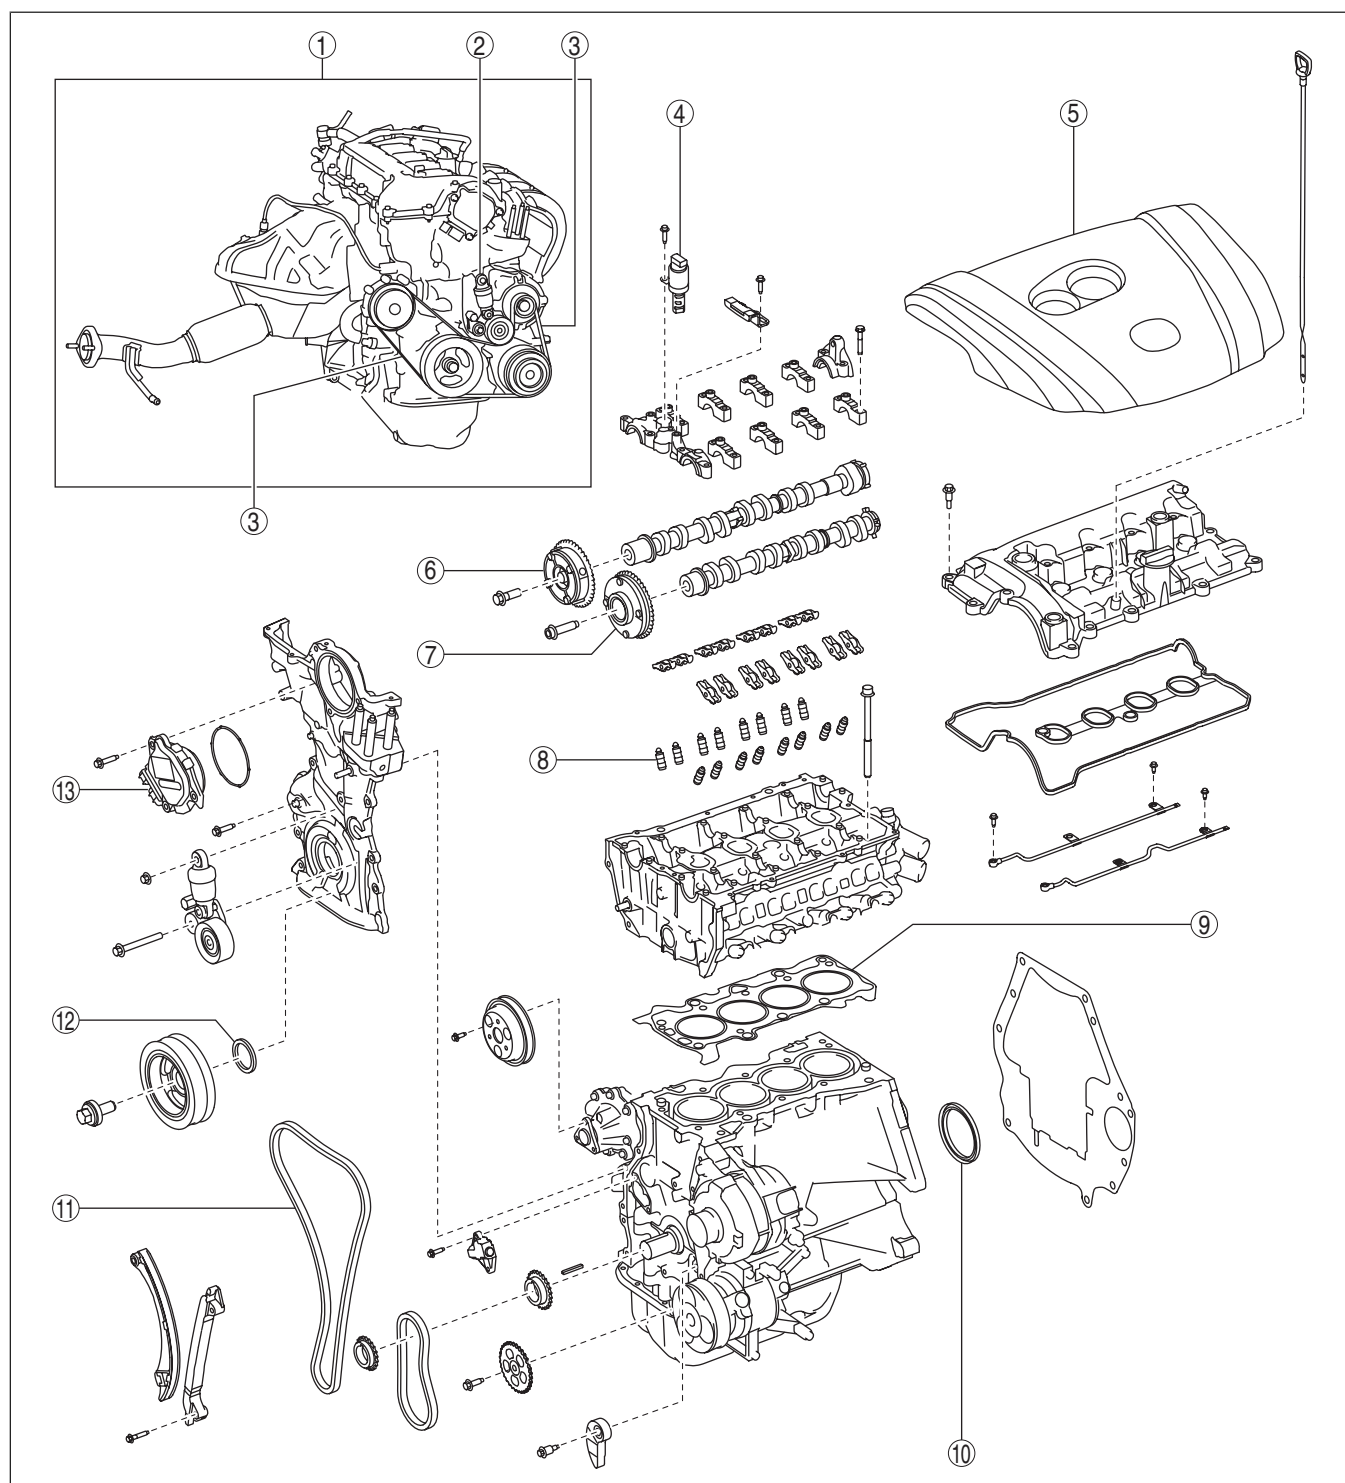

am6zzw00010033

<p>1 Engine (See ENGINE TUNE-UP [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See COMPRESSION INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ENGINE MOUNT DISASSEMBLY/ASSEMBLY [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ENGINE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ENGINE DISASSEMBLY/ASSEMBLY [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</p>	<p>2 Drive belt auto tensioner (See DRIVE BELT AUTO TENSIONER INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See DRIVE BELT AUTO TENSIONER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</p> <p>3 Drive belt (See DRIVE BELT INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See DRIVE BELT REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)</p>
---	--

4	OCV (See OIL CONTROL VALVE (OCV) INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See OIL CONTROL VALVE (OCV) REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
5	Plug hole plate (See PLUG HOLE PLATE REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
6	Hydraulic variable valve timing actuator (See HYDRAULIC VARIABLE VALVE TIMING ACTUATOR INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR, HYDRAULIC VARIABLE VALVE TIMING ACTUATOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
7	Electric variable valve timing actuator (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ELECTRIC VARIABLE VALVE TIMING ACTUATOR, HYDRAULIC VARIABLE VALVE TIMING ACTUATOR REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
8	Hydraulic lash adjuster (HLA) (See HYDRAULIC LASH ADJUSTER (HLA) INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See HYDRAULIC LASH ADJUSTER (HLA) REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

9	Cylinder head gasket (See CYLINDER HEAD GASKET REPLACEMENT [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
10	Rear oil seal (See REAR OIL SEAL REPLACEMENT [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
11	Timing chain (See TIMING CHAIN REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
12	Front oil seal (See FRONT OIL SEAL REPLACEMENT [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)
13	Electric variable valve timing motor/driver (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See ELECTRIC VARIABLE VALVE TIMING MOTOR/DRIVER REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)