


MANUAL TRANSAXLE LOCATION INDEX [D66M-R, D66MX-R]

id0515md159400

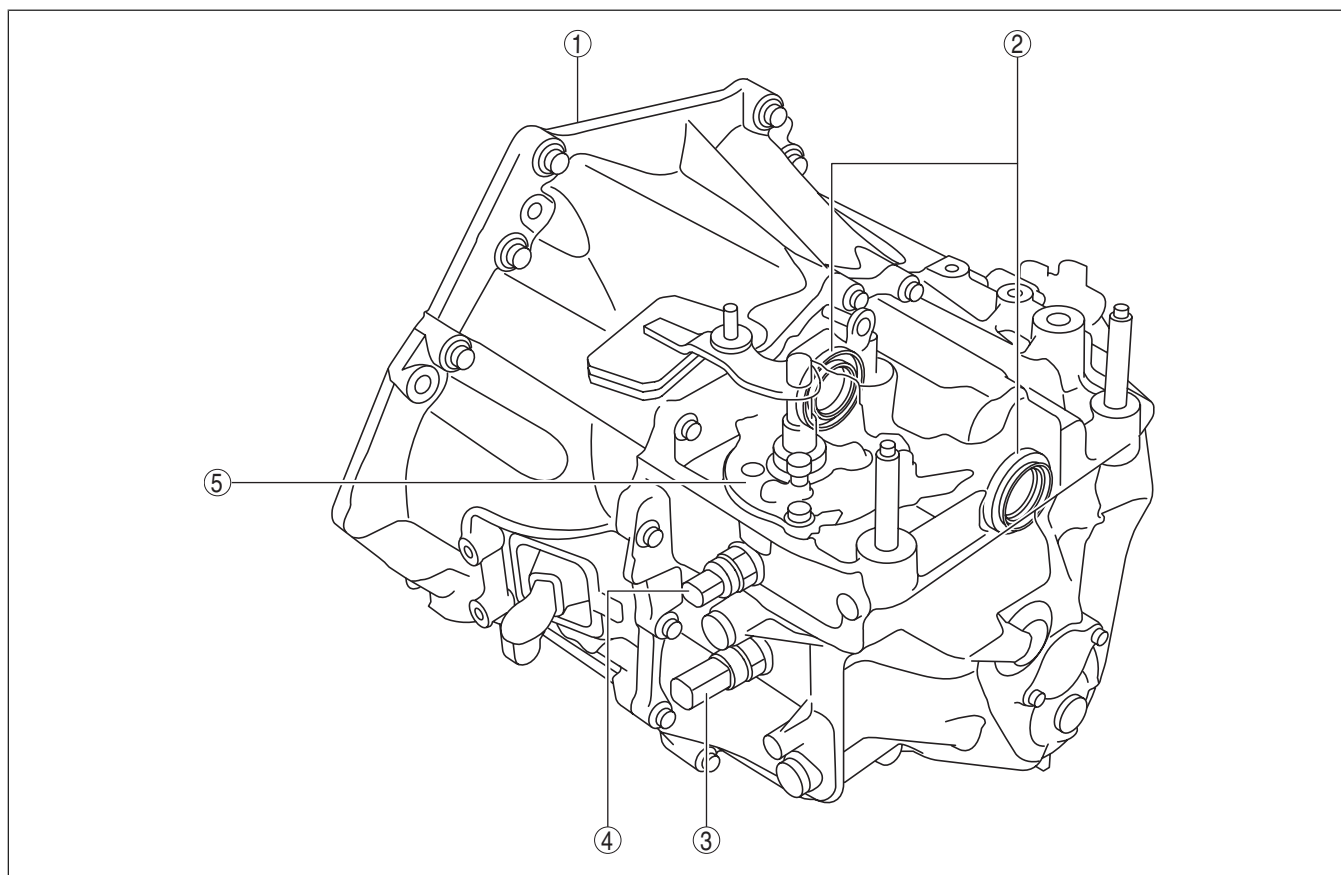

ac5wzw00005941

1	Manual transaxle (See MANUAL TRANSAXLE OIL INSPECTION [D66M-R, D66MX-R].) (See MANUAL TRANSAXLE OIL REPLACEMENT [D66M-R, D66MX-R].) (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [D66M-R].) (See MANUAL TRANSAXLE REMOVAL/INSTALLATION [D66MX-R].)
2	Oil seal (differential) (See OIL SEAL (DIFFERENTIAL) REPLACEMENT [D66M-R, D66MX-R].)

3	Back-up light switch (See BACK-UP LIGHT SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
4	Neutral switch (See NEUTRAL SWITCH REMOVAL/INSTALLATION [D66M-R, D66MX-R].)
5	Shift control module (See SHIFT CONTROL MODULE REMOVAL/INSTALLATION [D66M-R, D66MX-R].)