


OUTER MIRROR GARNISH REMOVAL/INSTALLATION


id091200003000

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the outer mirror glass. (See OUTER MIRROR GLASS REMOVAL.) (See OUTER MIRROR GLASS INSTALLATION.)
3. Insert a tape-wrapped flathead screwdriver into the upper outer mirror garnish and remove tab A, B, C, D in the direction of arrow (1).

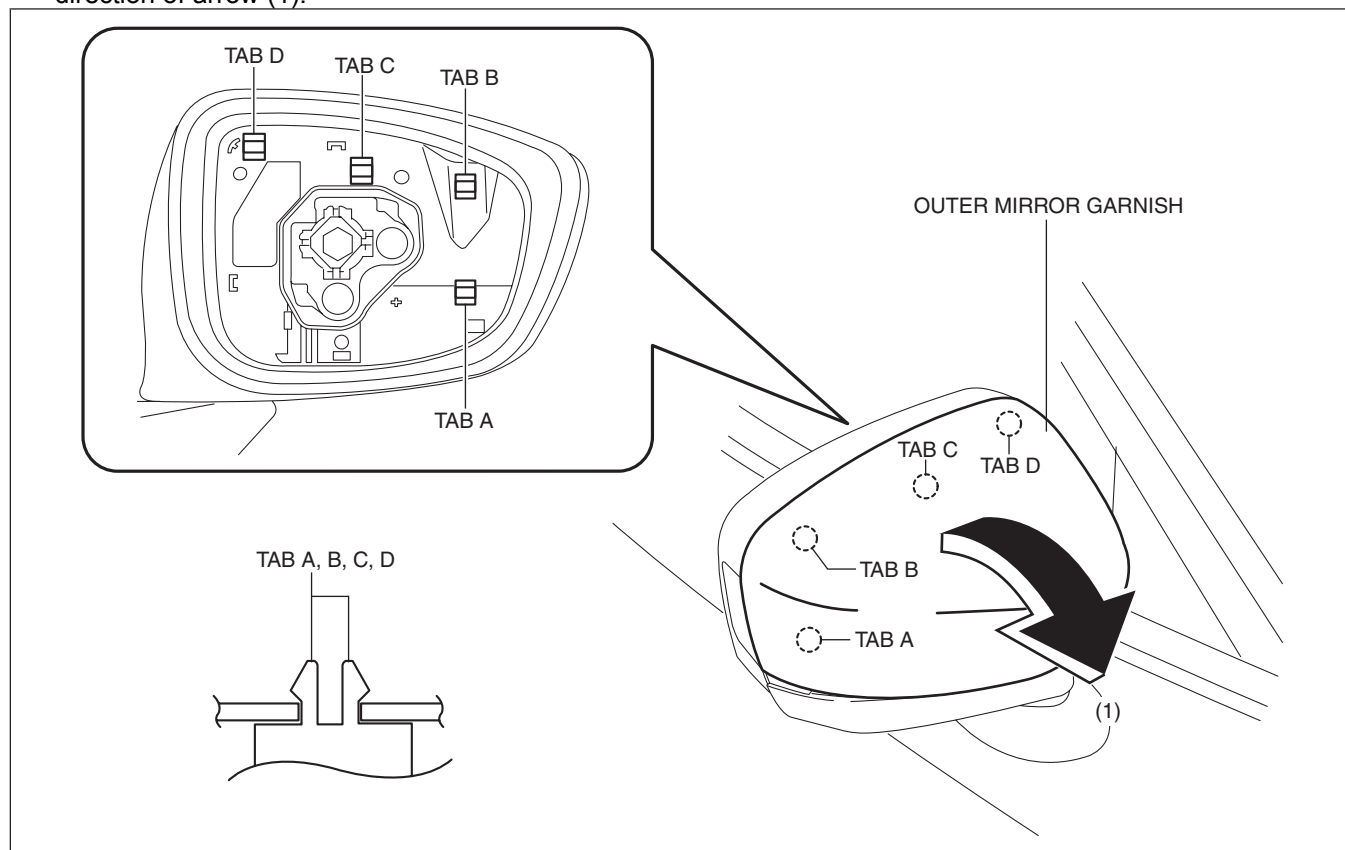

4. Insert a tape-wrapped flathead screwdriver into the upper outer mirror garnish and remove tab F, G in the direction of arrow (2).

ac5wzw00002913

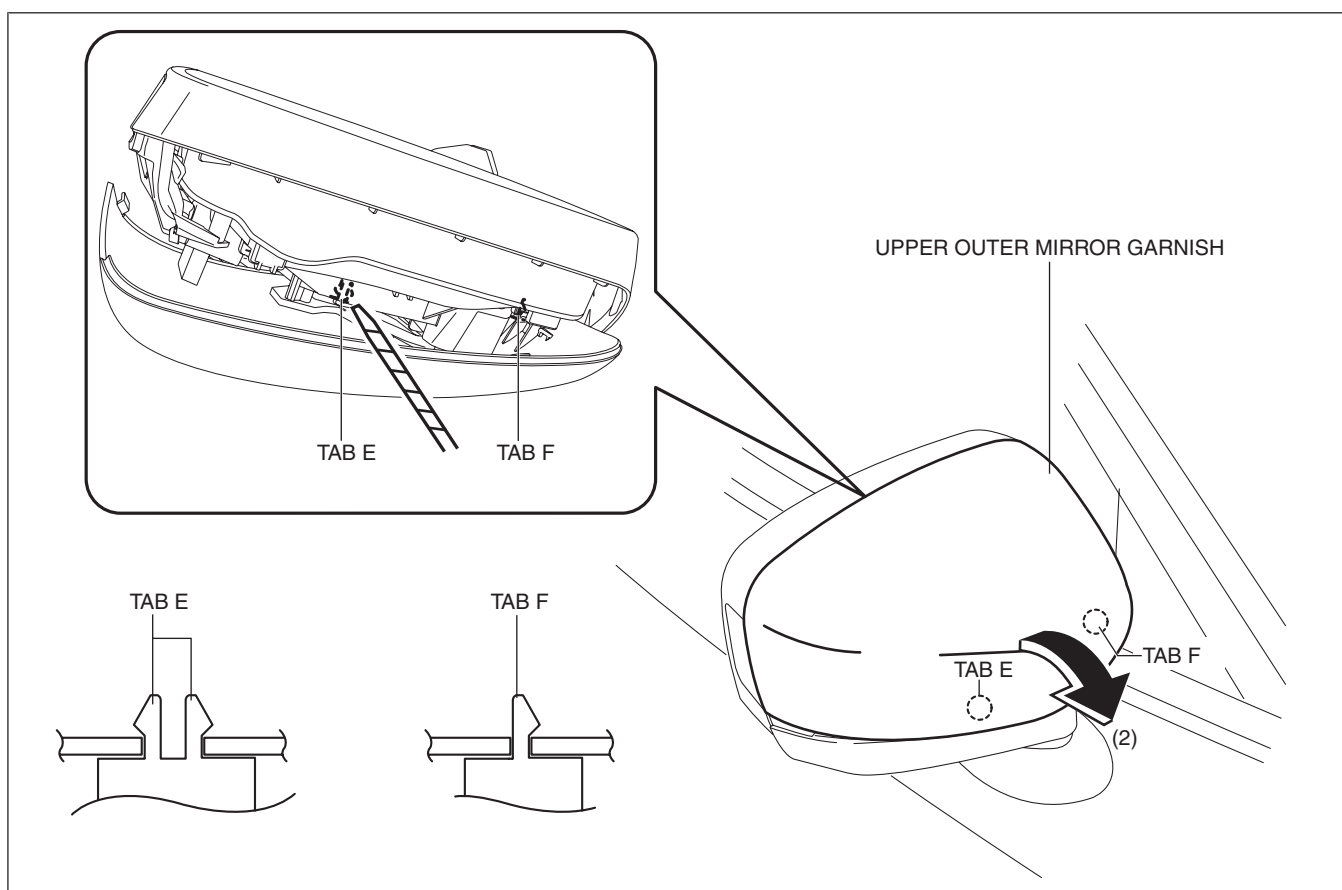

ac5wzw00002914

5. Install in the reverse order of removal.