


FUEL PUMP UNIT INSPECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0114z9801100

Continuity Inspection

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)
2. Disconnect the fuel pump unit connector.
3. Inspect for continuity between fuel pump unit terminals B—D.
 - If there is no continuity, replace the fuel pump unit. (See FUEL PUMP UNIT REMOVAL/INSTALLATION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)

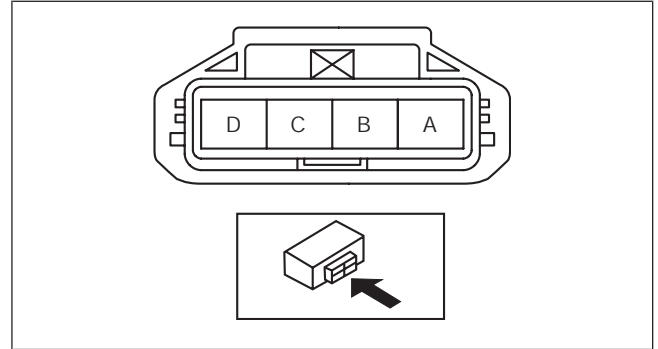

ac5wzw00002708