


## AudioPilot®2 MICROPHONE REMOVAL/INSTALLATION

id092000866300

### Note

- AudioPilot®2 is a registered trademark of Bose® Corporation.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the following parts:
  - (1) Driver-side front scuff plate (See FRONT SCUFF PLATE REMOVAL/INSTALLATION.)
  - (2) Driver-side front side trim (See FRONT SIDE TRIM REMOVAL/INSTALLATION.)
  - (3) Switch panel (See SWITCH PANEL REMOVAL/INSTALLATION.)
  - (4) Decoration panel (See DECORATION PANEL REMOVAL/INSTALLATION.)
  - (5) Shift lever knob (MTX) (See MANUAL TRANSAXLE SHIFT MECHANISM REMOVAL/INSTALLATION [C66M-R, C66MX-R].)
  - (6) Front console box (See FRONT CONSOLE BOX REMOVAL/INSTALLATION.)
  - (7) Shift panel (See SHIFT PANEL REMOVAL/INSTALLATION.)
  - (8) Upper panel (See UPPER PANEL REMOVAL/INSTALLATION.)
  - (9) Rear console (See REAR CONSOLE REMOVAL/INSTALLATION.)
  - (10) Side wall (See SIDE WALL REMOVAL/INSTALLATION.)
  - (11) Front console (See FRONT CONSOLE REMOVAL/INSTALLATION.)
  - (12) Bonnet release lever (See BONNET LATCH AND RELEASE LEVER REMOVAL/INSTALLATION.)
  - (13) Driver-side lower panel (See LOWER PANEL REMOVAL/INSTALLATION.)
3. Disconnect the connector.
4. Remove the nut.
5. Remove the AudioPilot®2 microphone.
6. Install in the reverse order of removal.

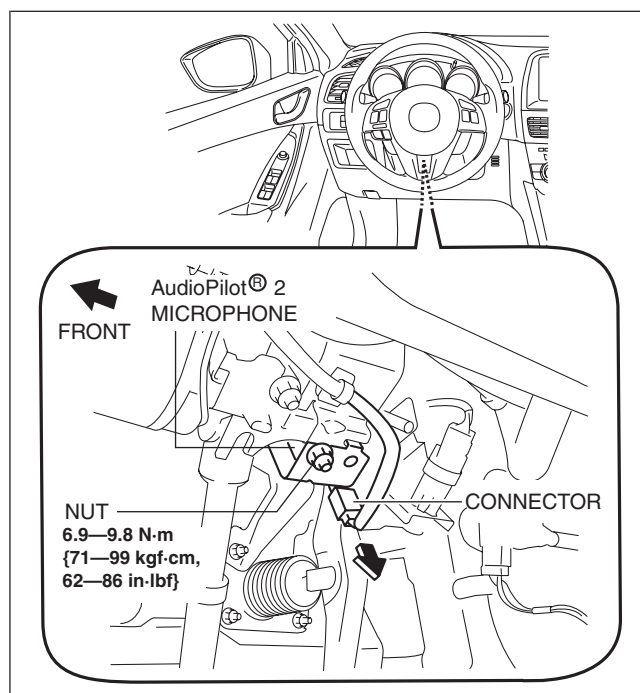

ac5wzw00004394