
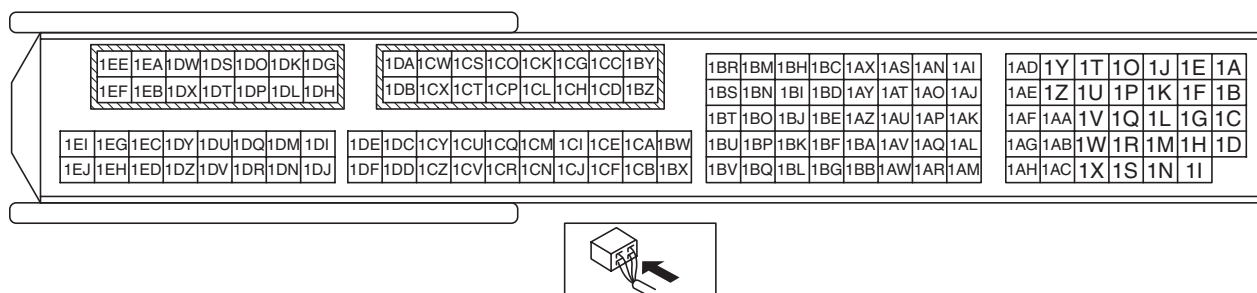


DTC P0197:00	Engine oil temperature sensor circuit low input
DETECTION CONDITION	<ul style="list-style-type: none"> The PCM monitors the input signal from the engine oil temperature sensor. If the voltage from the engine oil temperature sensor is below 0.1 V for 1 s, the PCM determines that the engine oil temperature sensor circuit has a malfunction. <p>MONITORING CONDITIONS</p> <ul style="list-style-type: none"> Battery voltage: 8—20 V <p>Diagnostic support note</p> <ul style="list-style-type: none"> This is a continuous monitor (CCM). The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. FREEZE FRAME DATA (Mode 2)/Snapshot data is available. DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	<ul style="list-style-type: none"> The fast idle up correction for the idle speed control is inhibited. Inhibits engine-stop by operating the i-stop function.
POSSIBLE CAUSE	<ul style="list-style-type: none"> Engine oil temperature sensor/engine oil pressure sensor connector or terminals malfunction Short to ground in wiring harness between engine oil temperature sensor/engine oil pressure sensor terminal E and PCM terminal 1DI PCM connector or terminals malfunction Engine oil temperature sensor signal circuit and ground circuit are shorted to each other Engine oil temperature sensor malfunction PCM malfunction

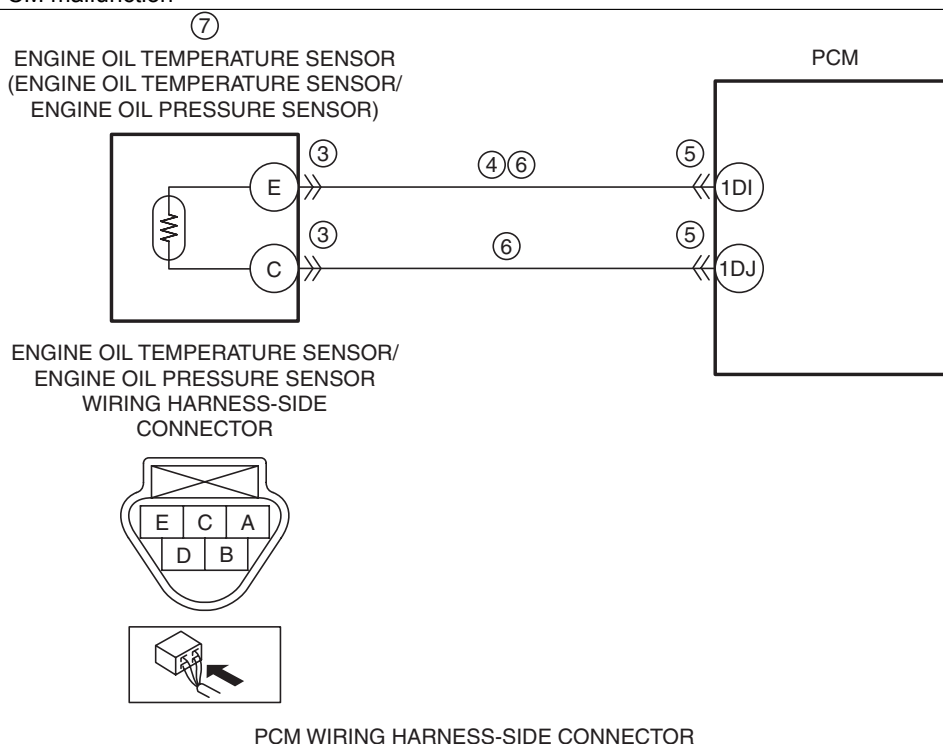

Diagnostic Procedure

STEP	INSPECTION	ACTION
1	VERIFY FREEZE FRAME DATA (MODE 2)/ SNAPSHOT DATA HAS BEEN RECORDED <ul style="list-style-type: none"> Has the FREEZE FRAME DATA (Mode 2)/ snapshot data been recorded? 	Yes Go to the next step.
		No Record the FREEZE FRAME DATA (Mode 2)/snapshot data on the repair order, then go to the next step.
2	VERIFY RELATED SERVICE INFORMATION AVAILABILITY <ul style="list-style-type: none"> Verify related Service Information availability. Is any related Service Information available? 	Yes Perform repair or diagnosis according to the available Service Information. • If the vehicle is not repaired, go to the next step.
		No Go to the next step.
3	INSPECT ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR CONNECTOR CONDITION <ul style="list-style-type: none"> Switch the ignition off. Disconnect the engine oil temperature sensor/ engine oil pressure sensor connector. Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). Is there any malfunction? 	Yes Repair or replace the connector and/or terminals, then go to Step 8.
		No Go to the next step.
4	INSPECT ENGINE OIL TEMPERATURE SENSOR SIGNAL CIRCUIT FOR SHORT TO GROUND <ul style="list-style-type: none"> Verify that the engine oil temperature sensor/ engine oil pressure sensor connector is disconnected. Inspect for continuity between engine oil temperature sensor/engine oil pressure sensor terminal E (wiring harness-side) and body ground. Is there continuity? 	Yes If the short to ground circuit could be detected in the wiring harness: • Repair or replace the wiring harness for a possible short to ground. If the short to ground circuit could not be detected in the wiring harness: • Replace the PCM (short to ground in the PCM internal circuit). (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) Go to Step 8.
		No Go to the next step.
5	INSPECT PCM CONNECTOR CONDITION <ul style="list-style-type: none"> Disconnect the PCM connector. Inspect for poor connection (such as damaged/ pulled-out pins, corrosion). Is there any malfunction? 	Yes Repair or replace the connector and/or terminals, then go to Step 8.
		No Go to the next step.
6	INSPECT ENGINE OIL TEMPERATURE SENSOR SIGNAL CIRCUIT AND GROUND CIRCUIT FOR SHORT TO EACH OTHER <ul style="list-style-type: none"> Verify that the engine oil temperature sensor/ engine oil pressure sensor and PCM connectors are disconnected. Inspect for continuity between engine oil temperature sensor/engine oil pressure sensor terminals E and C (wiring harness-side). Is there continuity? 	Yes Repair or replace the wiring harness for a possible short to each other, then go to Step 8.
		No Go to the next step.
7	INSPECT ENGINE OIL TEMPERATURE SENSOR <ul style="list-style-type: none"> Inspect the engine oil temperature sensor. (See ENGINE OIL TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 2.2].) Is there any malfunction? 	Yes Replace the engine oil temperature sensor/engine oil pressure sensor, then go to the next step. (See ENGINE OIL TEMPERATURE SENSOR/ENGINE OIL PRESSURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
		No Go to the next step.
8	VERIFY DTC TROUBLESHOOTING COMPLETED <ul style="list-style-type: none"> Always reconnect all disconnected connectors. Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 2.2].) Perform the KOEO or KOER self test. (See KOEO/KOER SELF TEST [SKYACTIV-D 2.2].) Is the same DTC present? 	Yes Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) Go to the next step.
		No Go to the next step.

STEP	INSPECTION		ACTION
9	VERIFY AFTER REPAIR PROCEDURE • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 2.2].) • Are any DTCs present?	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 2.2].)
		No	DTC troubleshooting completed.