


CHECK VALVE INSPECTION [SKYACTIV-D 2.2]

id0116e1189900

1. Remove the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
2. Apply vacuum to port A and verify that there is no airflow.
 - If there is airflow, replace the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
3. Verify that there is airflow when vacuum is applied to port A.
 - If there is no airflow, replace the check valve. (See CHECK VALVE REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)

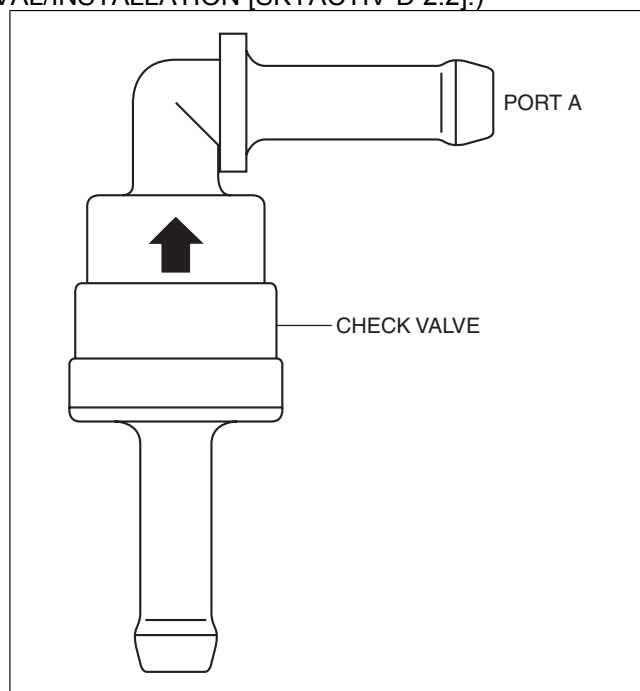

ac5wzw00004753