


CENTER ACCESSORY SOCKET REMOVAL/INSTALLATION


id092100900600

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the upper console. (See REAR CONSOLE DISASSEMBLY/ASSEMBLY.)
3. Insert a tape-wrapped flathead screwdriver into the gap between the cap tab and socket.

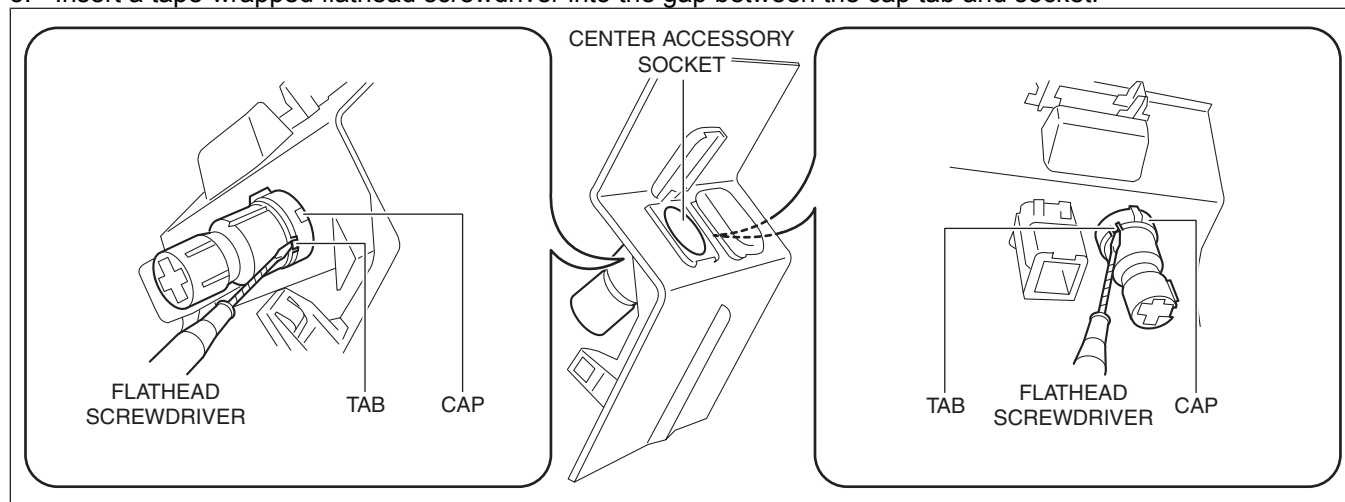


ac5wzw00001110

4. Move the flathead screwdriver in the direction of the arrow (1) shown in the figure, press the center accessory socket in the direction of the arrow (2) shown in the figure, and detach the cap tab from the socket.

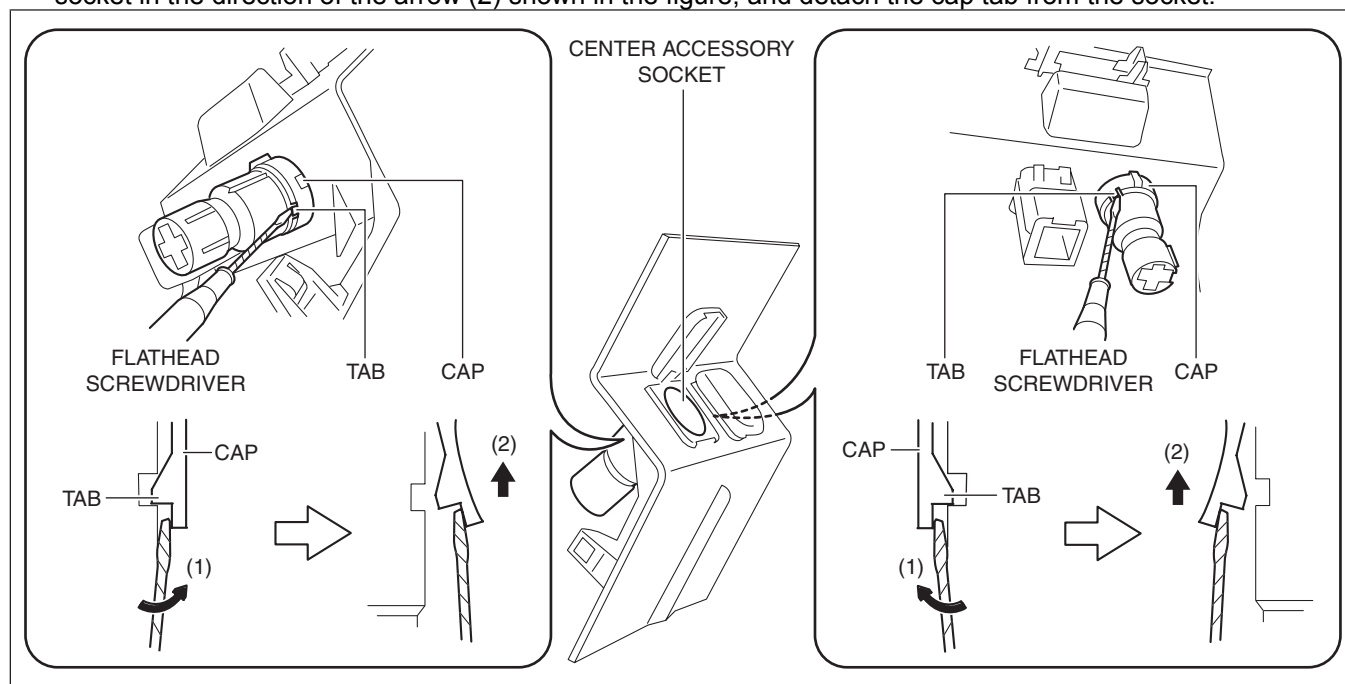


ac5wzw00001111

5. Pull the center accessory socket in the direction of the arrow shown in the figure and remove it.

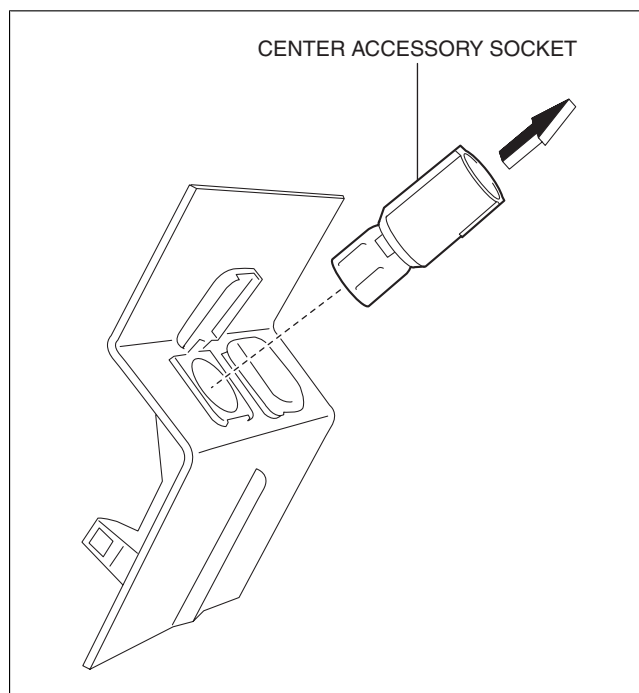

ac5wzw00001112

6. While pressing the clip tabs in the direction of arrows (3) shown in the figure, press the cap in the direction of arrow (4) to detach the cap tabs from the upper console.

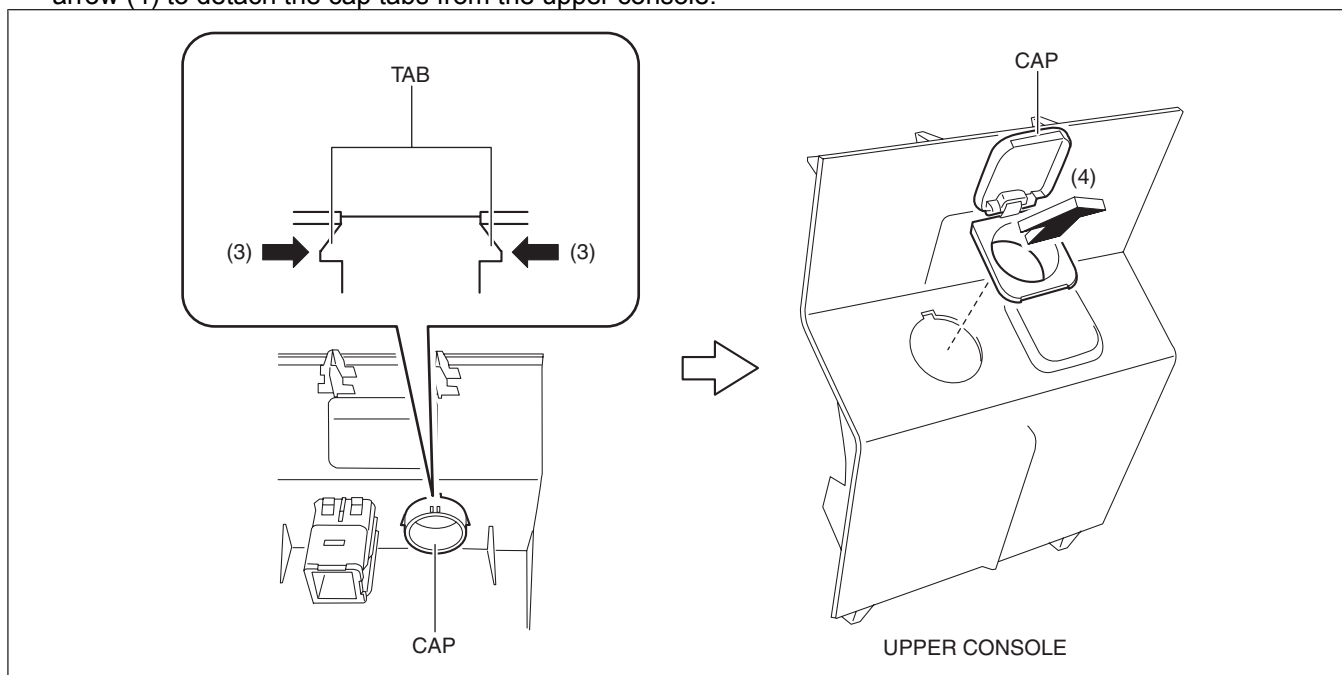

ac5wzw00001113

7. Remove the cap.
8. Install in the reverse order of removal.