

## OIL STRAINER [SKYACTIV-G 2.0, SKYACTIV-G 2.5]

id0111h5002400


### Purpose, Function

- The oil strainer suctions the engine oil in the oil pan using the oil pump vacuum. The engine oil is filtered by the internal filter at that time.

### Construction


- The oil strainer is installed on the suction port of the oil pump.

### SKYACTIV-G 2.0

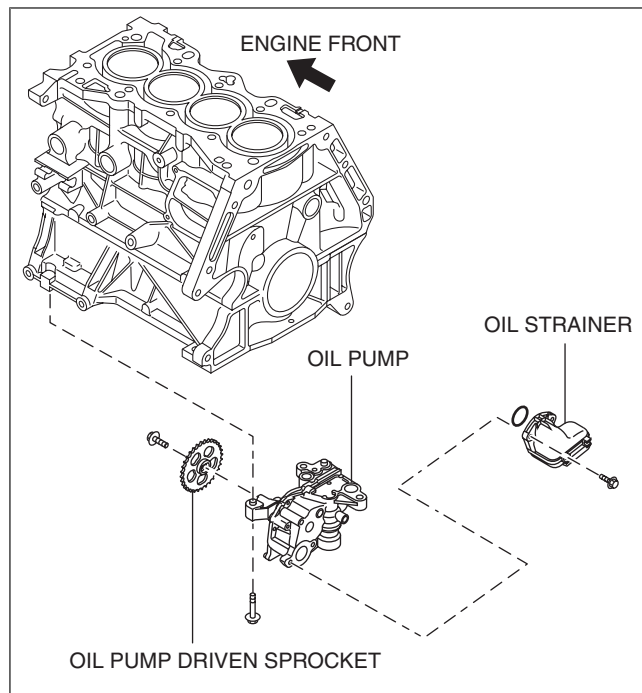

am3uun00001895


### SKYACTIV-G 2.5

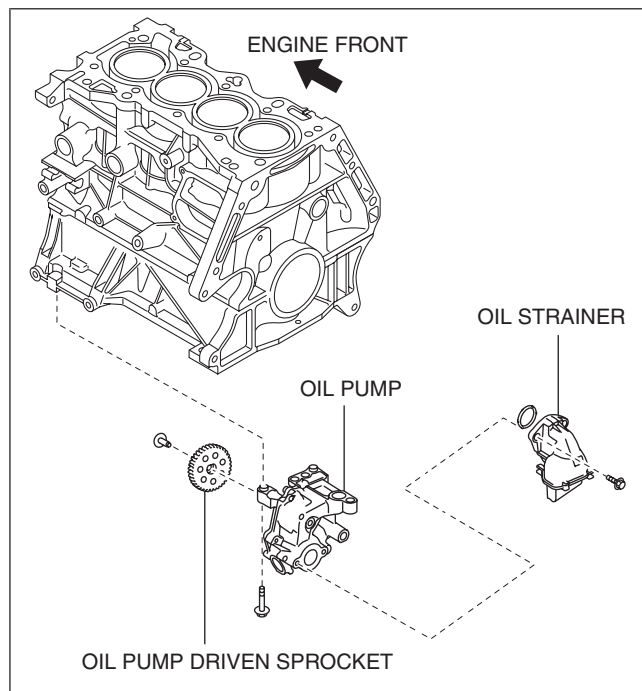

am6zzn00002422


- The oil strainer has a filter in the inside.

SKYACTIV-G 2.0

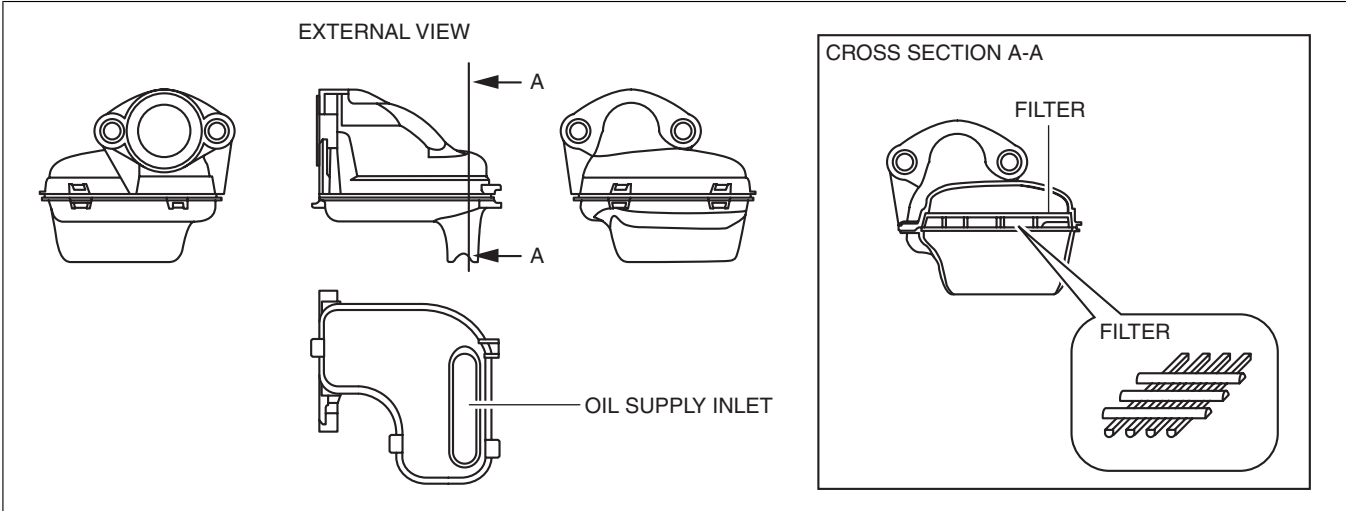

ac5wzn00001009

SKYACTIV-G 2.5

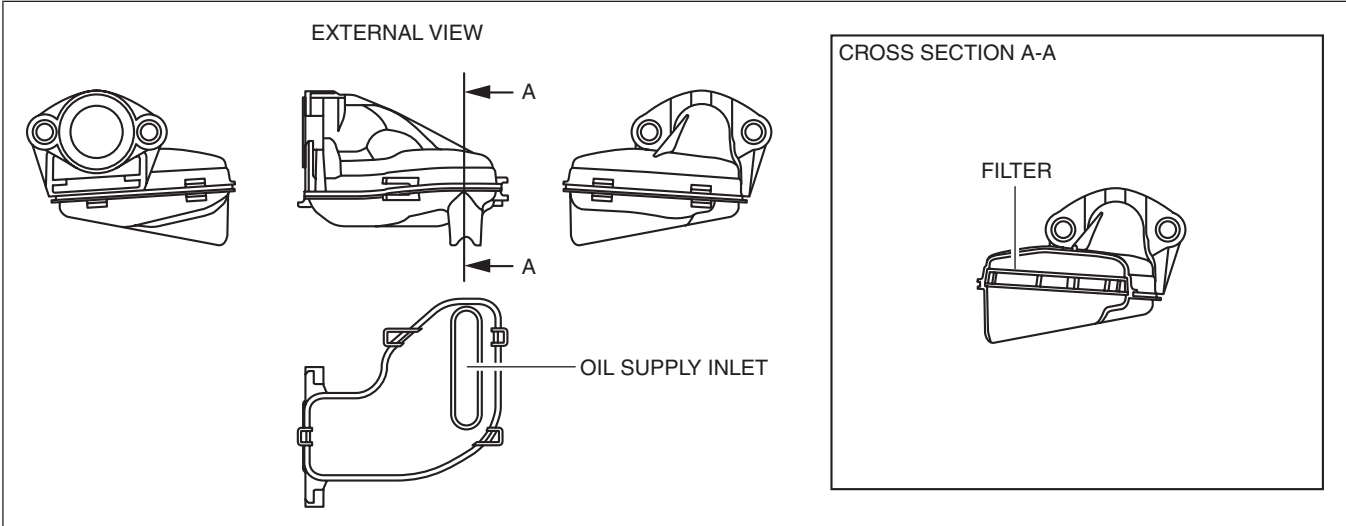

ac5wzn00002325