


REAR WIPER ARM AND BLADE ADJUSTMENT

id091900801300

1. Switch the ignition ON (engine off or on).
2. Operate the rear wiper.
3. Verify that the rear wiper is operating and stop the rear wiper.
4. Verify that the rear wiper is stopped at the auto-stop position.
5. Remove the rear wiper arm and blade. (See REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.)
6. Install the rear wiper arm to the serrated connecting part, adjust the rear wiper blade end to the area shown in the figure while sliding the rear wiper arm onto the grooves of the serrated connecting part one by one, and temporarily tighten the nut.

Note

- If the rear wiper arm and blade is not installed to the position shown in the figure, repeat the adjustment procedure.

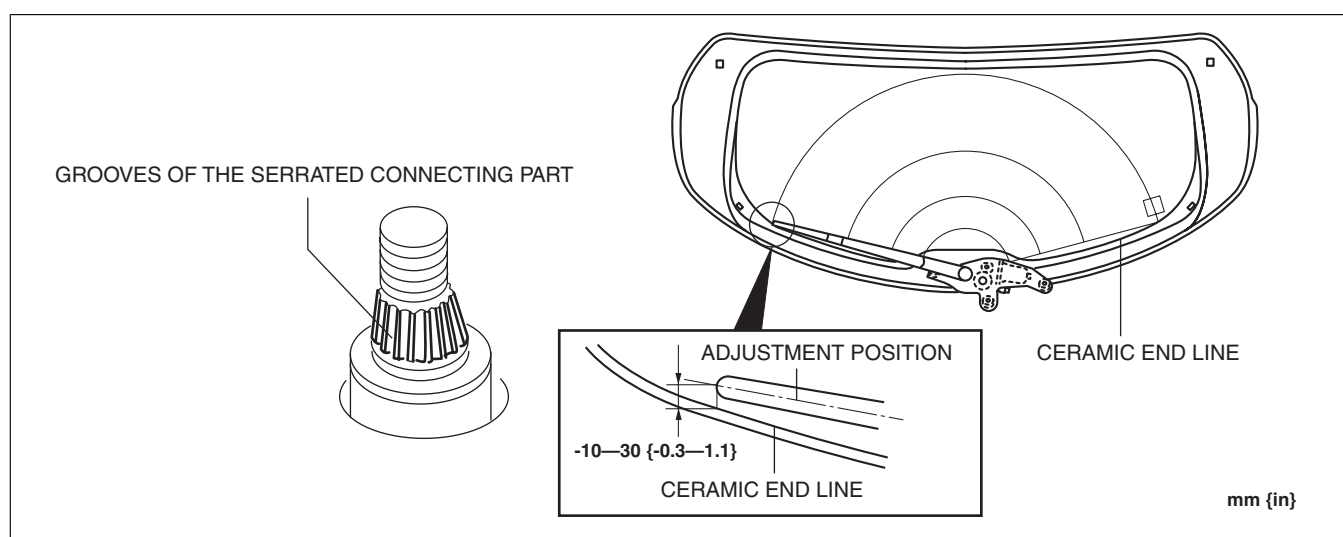

7. After adjusting the rear wiper arm and blade, tighten the nut completely. (See REAR WIPER ARM AND BLADE REMOVAL/INSTALLATION.)

ac5wzw00001620