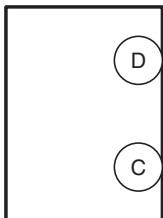
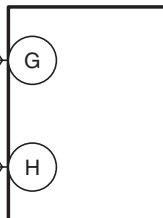
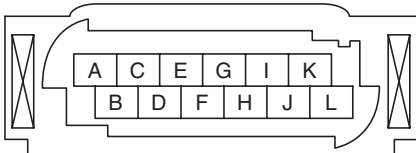

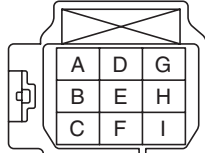



DTC B11CB:11 [REAR VEHICLE MONITORING SYSTEM]

id0902z2886200

System malfunction location	RVM warning indicator light (RH) circuit malfunction
Detection condition	<ul style="list-style-type: none"> Rear vehicle monitoring control module (LH) detects short to ground in RVM warning indicator light (RH).
Fail-safe	<ul style="list-style-type: none"> Inhibits the rear vehicle monitoring system.
Possible cause	<ul style="list-style-type: none"> RVM warning indicator light (RH) connector or terminal malfunction Rear vehicle monitoring control module (LH) connector or terminal malfunction Short to ground in wiring harness between the following terminals: <ul style="list-style-type: none"> Rear vehicle monitoring control module (LH) terminal D and RVM warning indicator light (RH) terminal G Rear vehicle monitoring control module (LH) terminal C and RVM warning indicator light (RH) terminal H RVM warning indicator light (RH) malfunction Rear vehicle monitoring control module (LH) malfunction
<div> <div> REAR VEHICLE MONITORING CONTROL MODULE (LH)  </div> <div> RVM WARNING INDICATOR LIGHT (RH)  </div> </div> <div> <div> REAR VEHICLE MONITORING CONTROL MODULE (LH) WIRING HARNESS-SIDE CONNECTOR   </div> <div> RVM WARNING INDICATOR LIGHT (RH) WIRING HARNESS-SIDE CONNECTOR   </div> </div>	

Diagnostic Procedure

Step	Inspection	Action
1	INSPECT RVM WARNING INDICATOR LIGHT (RH) CONNECTOR <ul style="list-style-type: none"> Switch the ignition to off. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].) Disconnect the RVM warning indicator light (RH) connector. Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. Is the connector normal? 	<div>Yes</div> Go to the next step. <div>No</div> Repair or replace the connector, then go to Step 5.

Step	Inspection	Action
2	INSPECT REAR VEHICLE MONITORING CONTROL MODULE (LH) CONNECTOR <ul style="list-style-type: none"> • Disconnect the rear vehicle monitoring control module (LH) connector. • Inspect the connector engagement and connection condition and inspect the terminals for damage, deformation, corrosion, or disconnection. • Is the connector normal? 	Yes Go to the next step.
		No Repair or replace the connector, then go to Step 5.
3	INSPECT RVM WARNING INDICATOR LIGHT (RH) CIRCUIT FOR SHORT TO GROUND <ul style="list-style-type: none"> • Verify that the rear vehicle monitoring control module (LH) connector and RVM warning indicator light (RH) connector are disconnected. • Inspect for continuity between the following terminals (vehicle wiring harness side) and body ground. <ul style="list-style-type: none"> — RVM warning indicator light (RH) terminal G — RVM warning indicator light (RH) terminal H • Is there continuity? 	Yes Repair or replace the wiring harness which is shorted to ground, then go to Step 5.
		No Go to the next step.
4	INSPECT RVM WARNING INDICATOR LIGHT (RH) <ul style="list-style-type: none"> • Inspect the RVM warning indicator light (RH). (See RVM WARNING INDICATOR LIGHT INSPECTION.) • Is the RVM warning indicator light (RH) normal? 	Yes Go to the next step.
		No Replace the RVM warning indicator light (RH), then go to the next step. (See RVM WARNING INDICATOR LIGHT REMOVAL/INSTALLATION.)
5	VERIFY THAT REPAIRS HAVE BEEN COMPLETED <ul style="list-style-type: none"> • Reconnect all the disconnected connectors. • Reconnect the disconnected negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].) • (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].) • (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].) • Clear the DTC for the rear vehicle monitoring control module using the M-MDS. (See CLEARING DTC [REAR VEHICLE MONITORING SYSTEM].) • Illuminate the RVM warning indicator light (RH) using the simulation item WRN_IND_R. (See ACTIVE COMMAND MODES INSPECTION [REAR VEHICLE MONITORING SYSTEM].) • Perform the DTC inspection for the rear vehicle monitoring control module using the M-MDS. (See DTC INSPECTION [REAR VEHICLE MONITORING SYSTEM].) • Is DTC B11CB:11 displayed? 	Yes Repeat the inspection from Step 1. • If the malfunction recurs, replace the rear vehicle monitoring control module (LH), then go to the next step. (See REAR VEHICLE MONITORING CONTROL MODULE REMOVAL/INSTALLATION.)
		No Go to the next step.
6	VERIFY IF OTHER DTCs DISPLAYED <ul style="list-style-type: none"> • Are any other DTCs displayed? 	Yes Repair the malfunctioning part according to the applicable DTC troubleshooting. (See DTC TABLE [REAR VEHICLE MONITORING SYSTEM].)
		No DTC troubleshooting completed.