


PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH INSPECTION

id081000804000

1. Disconnect the negative battery cable and wait for **1 min or more**. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-G 2.0, SKYACTIV-G 2.5 (WITHOUT i-stop)].)(See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Remove the PAD switch. (See PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH REMOVAL/INSTALLATION.)
3. Verify that the continuity between the PAD switch terminals is as indicated in the table.
 - If not as indicated in the table, replace the PAD switch.

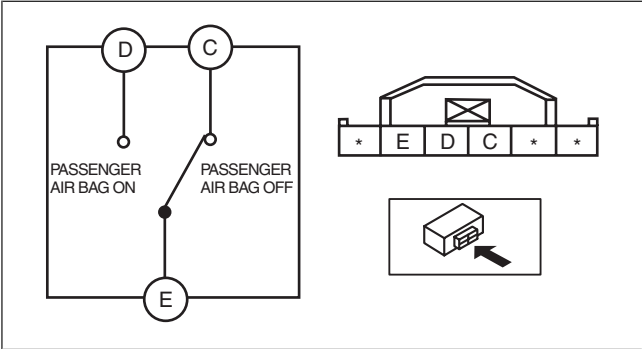

ac5wzw00002057

○—○ : Continuity

Switch position	Terminal		
	C	D	E
PASSENGER AIR BAG OFF	○—○		○—○
PASSENGER AIR BAG ON		○—○	○—○

ac5wzw00002058