



STARTER INTERLOCK SWITCH INSPECTION [SKYACTIV-D 2.2]

id0119h8104200

Caution


- Do not reuse the starter interlock switch if it is removed from the vehicle even once. Replace with a new starter interlock switch when installing.

1. Disconnect the negative battery cable. (See NEGATIVE BATTERY CABLE DISCONNECTION/CONNECTION [SKYACTIV-D 2.2].)
2. Disconnect the starter interlock switch connector.
3. Verify that the continuity is as indicated in the table using a tester.

Condition	Terminal	
	A	B
Clutch pedal is depressed		
Clutch pedal is not depressed		

am6zzw00002367

- If the continuity is not as indicated in the table, replace the starter interlock switch. (See CLUTCH PEDAL REMOVAL/INSTALLATION [D66M-R, D66MX-R].)

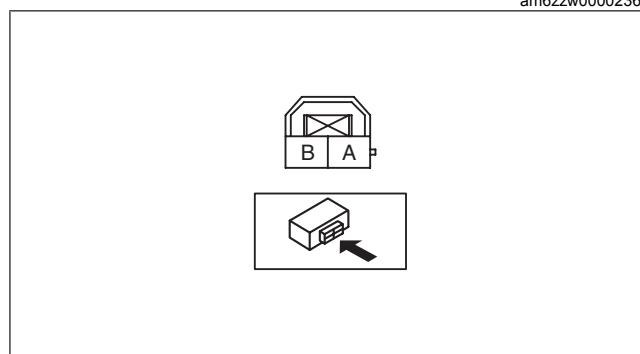

am6xuw00002340