

FUEL PUMP RELAY [SKYACTIV-G 2.0, SKYACTIV-G 2.5]


id0114z9129100

Purpose, Function

- Controls the fuel pump on/off according to control signals from the PCM.
- The fuel pump is operated only at engine start or when the engine is running to improve safety.

Construction


- The fuel pump relay is installed in the relay and fuse block.

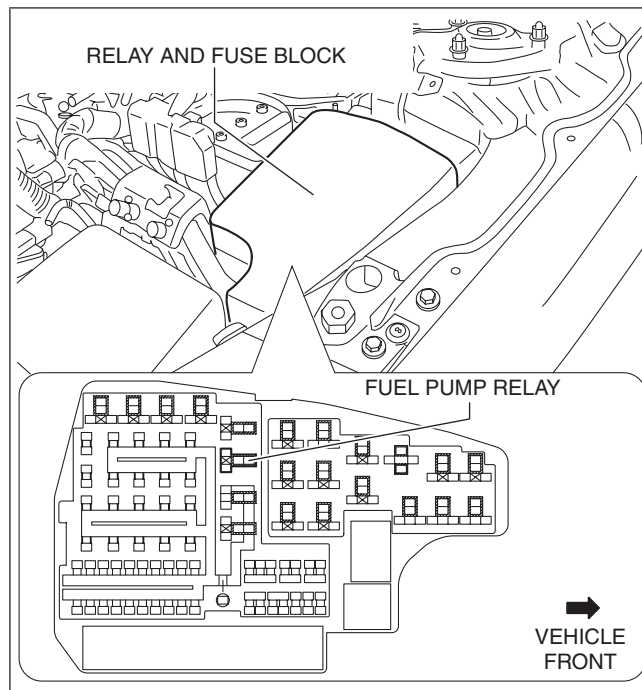

ac5wzn00002232

Operation

- The contact point is on when the battery voltage is supplied to the coil based on the signal from the PCM, and the battery voltage is supplied to the fuel pump control module.

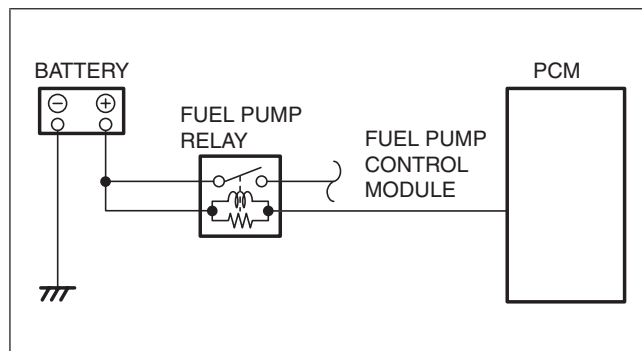

ac5wzn00002233

Fail-safe

- Function not equipped.