



DTC P242D:00 [SKYACTIV-D 2.2]

id0102s4158800


DTC P242D:00	Exhaust gas temperature sensor No.3 circuit high input
DETECTION CONDITION	<ul style="list-style-type: none"> The PCM monitors the exhaust gas temperature sensor No.3 signal. If the PCM detects that the exhaust gas temperature sensor No.3 voltage at the PCM terminal 1BW is above 4.96 V for 3 s, the PCM determines that the exhaust gas temperature sensor No.3 circuit has a malfunction. <p>MONITORING CONDITIONS</p> <ul style="list-style-type: none"> Battery voltage: 8—20 V Between the elapsed time of 18 to 70 min. after the ignition is switched on (engine on). Engine speed: above 700 rpm Engine coolant temperature: above 60 °C {140 °F} Intake air temperature: above 5 °C {41 °F} Vehicle speed: above 25 km/h {16 mph} continues for 10 min or more <p>Diagnostic support note</p> <ul style="list-style-type: none"> This is a continuous monitor (CCM). The check engine light illuminates if the PCM detects the above malfunction condition during the first drive cycle. FREEZE FRAME DATA (Mode 2)/Snapshot data is available. DTC is stored in the PCM memory.
FAIL-SAFE FUNCTION	<ul style="list-style-type: none"> PCM restricts engine torque. Inhibits the EGR control. Inhibits the diesel particulate filter regeneration control. Inhibits engine-stop by operating the i-stop function. PCM restricts engine-transaxle integration control.
POSSIBLE CAUSE	<ul style="list-style-type: none"> Exhaust gas temperature sensor No.3 connector or terminals malfunction Exhaust gas temperature sensor No.3 malfunction PCM connector or terminals malfunction Short to power supply in wiring harness between exhaust gas temperature sensor No.3 terminal A and PCM terminal 1BW Open circuit in wiring harness between the following terminals: <ul style="list-style-type: none"> Exhaust gas temperature sensor No.3 terminal A—PCM terminal 1BW Exhaust gas temperature sensor No.3 terminal B—PCM terminal 1BS PCM malfunction

DTC P242D:
00

Exhaust gas temperature sensor No.3 circuit high input

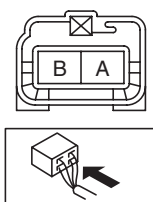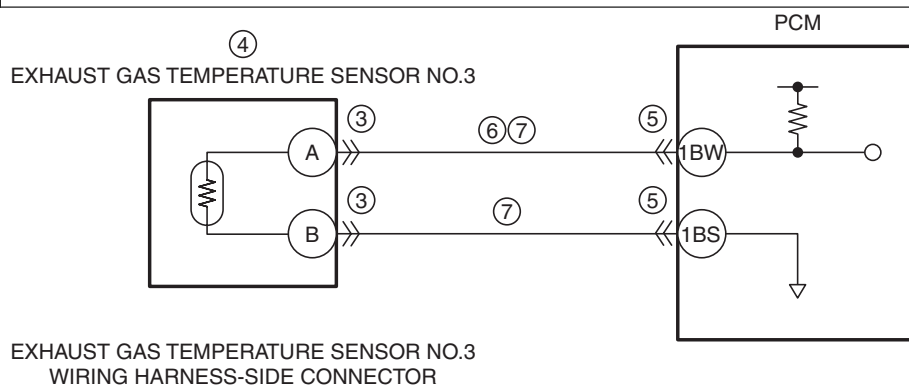

PCM WIRING HARNESS-SIDE CONNECTOR

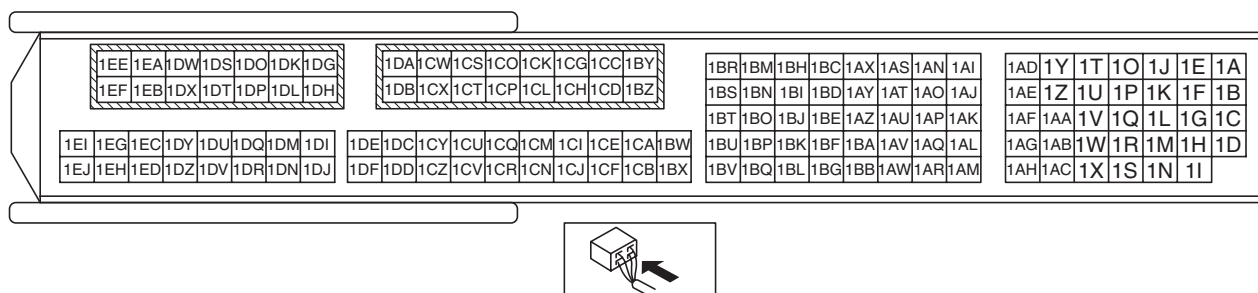

Diagnostic Procedure

STEP	INSPECTION	ACTION
1	VERIFY FREEZE FRAME DATA (MODE 2)/ SNAPSHOT DATA HAS BEEN RECORDED <ul style="list-style-type: none">Has the FREEZE FRAME DATA (Mode 2)/ snapshot data been recorded?	Yes Go to the next step.
		No Record the FREEZE FRAME DATA (Mode 2)/snapshot data on the repair order, then go to the next step.
2	VERIFY RELATED SERVICE INFORMATION AVAILABILITY <ul style="list-style-type: none">Verify related Service Information availability.Is any related Service Information available?	Yes Perform repair or diagnosis according to the available Service Information. <ul style="list-style-type: none">If the vehicle is not repaired, go to the next step.
		No Go to the next step.
3	INSPECT EXHAUST GAS TEMPERATURE SENSOR NO.3 CONNECTOR CONDITION <ul style="list-style-type: none">Switch the ignition off.Disconnect the exhaust gas temperature sensor No.3 connector.Inspect for poor connection (such as damaged/ pulled-out pins, corrosion).Is there any malfunction?	Yes Repair or replace the connector and/or terminals, then go to Step 8.
		No Go to the next step.
4	INSPECT EXHAUST GAS TEMPERATURE SENSOR NO.3 <ul style="list-style-type: none">Inspect the exhaust gas temperature sensor No. 3. (See EXHAUST GAS TEMPERATURE SENSOR INSPECTION [SKYACTIV-D 2.2].) <ul style="list-style-type: none">Is there any malfunction?	Yes Replace the exhaust gas temperature sensor No.3, then go to Step 8. (See EXHAUST GAS TEMPERATURE SENSOR REMOVAL/INSTALLATION [SKYACTIV-D 2.2].)
		No Go to the next step.

STEP	INSPECTION		ACTION
5	INSPECT PCM CONNECTOR CONDITION <ul style="list-style-type: none"> • Disconnect the PCM connector. • Inspect for poor connection (such as damaged/pulled-out pins, corrosion). • Is there any malfunction? 	Yes	Repair or replace the connector and/or terminals, then go to Step 8.
		No	Go to the next step.
6	INSPECT EXHAUST GAS TEMPERATURE SENSOR NO.3 CIRCUIT FOR SHORT TO POWER SUPPLY <ul style="list-style-type: none"> • Verify that the exhaust gas temperature sensor No.3 and PCM connectors are disconnected. • Switch the ignition ON (engine off). • Measure the voltage at the exhaust gas temperature sensor No.3 terminal A (wiring harness-side). • Is the voltage 0 V? 	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible short to power supply, then go to Step 8.
7	INSPECT EXHAUST GAS TEMPERATURE SENSOR NO.3 CIRCUIT FOR OPEN CIRCUIT <ul style="list-style-type: none"> • Verify that the exhaust gas temperature sensor No.3 and PCM connectors are disconnected. • Switch the ignition off. • Inspect for continuity between the following terminals (wiring harness-side): <ul style="list-style-type: none"> — Exhaust gas temperature sensor No.3 terminal A—PCM terminal 1BW — Exhaust gas temperature sensor No.3 terminal B—PCM terminal 1BS • Is there continuity? 	Yes	Go to the next step.
		No	Repair or replace the wiring harness for a possible open circuit, then go to the next step.
8	VERIFY DTC TROUBLESHOOTING COMPLETED <ul style="list-style-type: none"> • Always reconnect all disconnected connectors. • Clear the DTC from the PCM memory using the M-MDS. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 2.2].) • Perform the Drive Mode Type B. (See OBD DRIVE MODE [SKYACTIV-D 2.2].) • Perform the DTC Reading Procedure. (See ON-BOARD DIAGNOSTIC TEST [SKYACTIV-D 2.2].) • Is the same DTC present? 	Yes	Repeat the inspection from Step 1. • If the malfunction recurs, replace the PCM. (See PCM REMOVAL/INSTALLATION [SKYACTIV-D 2.2].) Go to the next step.
		No	Go to the next step.
9	VERIFY AFTER REPAIR PROCEDURE <ul style="list-style-type: none"> • Perform the “AFTER REPAIR PROCEDURE”. (See AFTER REPAIR PROCEDURE [SKYACTIV-D 2.2].) • Are any DTCs present? 	Yes	Go to the applicable DTC inspection. (See DTC TABLE [SKYACTIV-D 2.2].)
		No	DTC troubleshooting completed.