


PUSH BUTTON START INSPECTION

id092100802300

1. Remove the push button start. (See PUSH BUTTON START REMOVAL/INSTALLATION.)
2. Verify that the continuity between the push button start terminals is as indicated in the table.

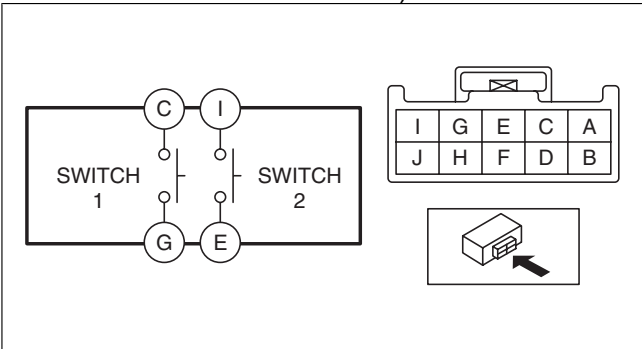


- If the continuity can be verified as indicated in the table, go to the next step.
- If not as indicated in the table, replace the push button start. (See PUSH BUTTON START REMOVAL/INSTALLATION.)

○—○ : Continuity


Test condition	Terminal			
	C	E	G	I
Button pressed	○	○	○	○
Button released				

ac5wzw00000529

3. Apply battery positive voltage and connect the ground to the push button start terminals and verify that the LED illuminates as indicated in the table.

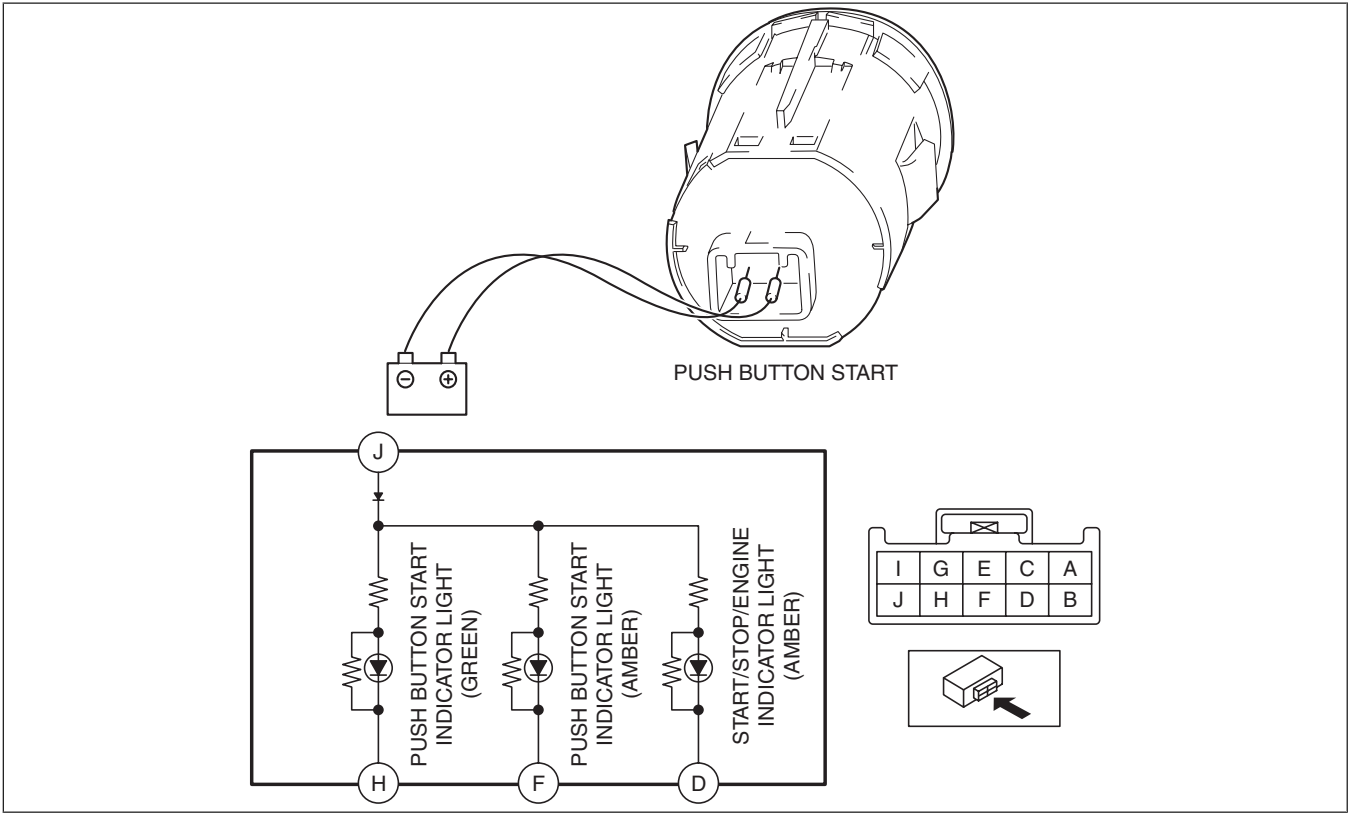

- If the LED does not illuminate as indicated in the table, replace the push button start. (See PUSH BUTTON START REMOVAL/INSTALLATION.)

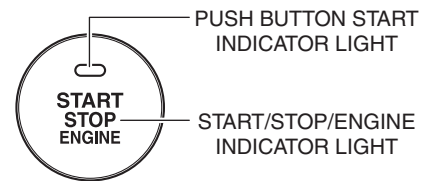

Terminal		Illumination positions (Color)
B+	Ground	
J	D	START/STOP/ENGINE indicator light (Amber)
	F	Push button start indicator light (Amber)
	H	Push button start indicator light (Green)

ac5wzw00001105